



ACURITE 06100M Iris 5-in-1 Direct-to-WiFi Display Instructions

[Home](#) » [Acurite](#) » ACURITE 06100M Iris 5-in-1 Direct-to-WiFi Display Instructions 

ACURITE 06100M Iris 5-in-1 Direct-to-WiFi Display Instructions



ACU>RITE®

Contents

- 1 [SETUP REQUIRES](#)
- 2 [PLUG IN DISPLAY AND CONFIGURE SETTINGS](#)
- 3 [INSTALL SENSOR BATTERIES](#)
- 4 [MOUNT SENSOR](#)
- 5 [Connect to My AcuRite with Wi-Fi](#)
- 6 [ADDITIONAL NOTES](#)
- 7 [Customer Support](#)
- 8 [Documents / Resources](#)
 - 8.1 [References](#)
- 9 [Related Posts](#)

SETUP REQUIRES

- Display
- Power Adapter (3 AAA backup batteries recommended)
- 5-in-1 Sensor (may be sold separately)

PLUG IN DISPLAY AND CONFIGURE SETTINGS

Plug in the power adapter. Once the display is powered on, configuration will begin automatically. Use the Up and Down arrows to select between options, and press the Gear button to confirm your selections.

- RF Channel (A, B, C; A recommended)
- Auto DST (ON / OFF)
- 12 or 24 Hour Clock Display
- Clock Hour
- Clock Minute
- Calendar Month
- Calendar Date
- Calendar Year
- Temperature Units (°F / °C)
- Wind Speed Units (mph, km/h, knots)
- Rainfall Units (inches / mm)
- Pressure Units (inHg / hPa)

You can configure these settings at any time by pressing the Gear button.

INSTALL SENSOR BATTERIES

In the 5-in-1 outdoor sensor battery compartment, install four AA alkaline or lithium batteries. The Display should automatically sync with the sensor and start showing readings within a minute.


NOTE: In the battery compartment of the sensor, there is a small switch A/B/C switch that should match the selection on the Display. By default this is “A” and doesn’t need adjustment.

MOUNT SENSOR

Find a suitable place to mount the outdoor sensor:

- At least 5 feet (1.5 meters) off the ground
- Front solar cell facing south
- Away from heat and humidity sources
- Level for accurate rain reporting using bubble level on top of sensor

Once the sensor is mounted, remove the rain gauge stabilizer from sensor.

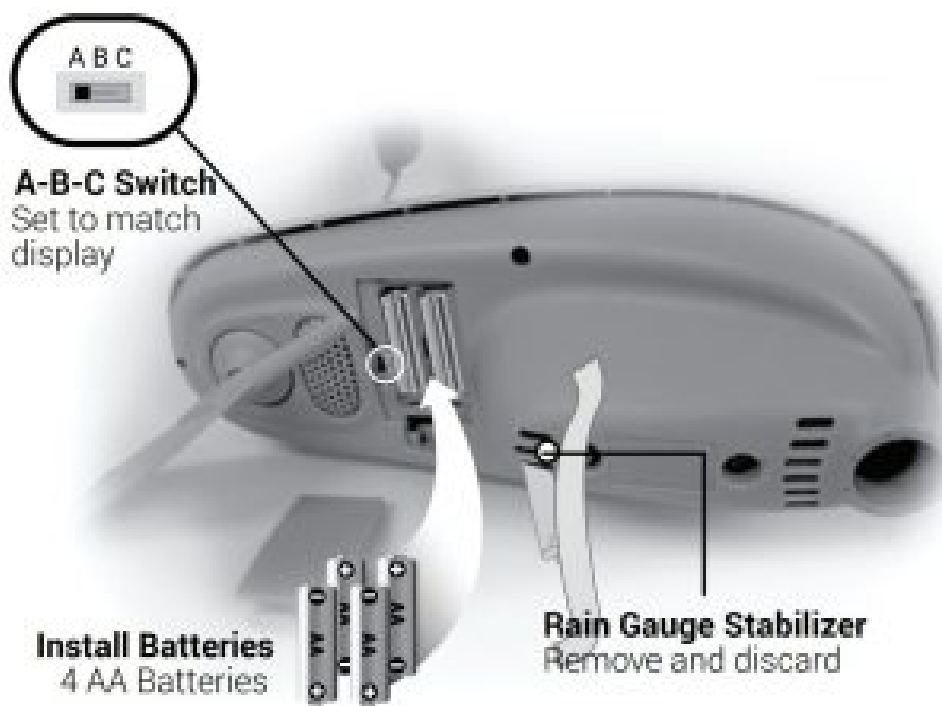

Connect to My AcuRite with Wi-Fi

SETUP REQUIRES:

- 2.4 GHz Wireless Network
- Phone, Tablet, or Computer with Wi-Fi
- Display set up with 5-in-1 Sensor

CONNECT TO DISPLAY WI-FI

Connect to the Wi-Fi signal coming from your Display using your phone or Wi-Fi compatible device.

ADD YOUR WI-FI CREDENTIALS

Select your Wi-Fi network name and enter your network password. Press “Save”. Once your credentials are successfully entered, reconnect to your normal Wi-Fi.

ACCESS WI-FI SETUP PAGE

Open a web browser on your device. Type “192.168.4.1” in the address bar and hit enter to access the AcuRite Wi-Fi display settings website.

SET UP YOUR MY ACURITE ACCOUNT

Download the My AcuRite mobile app or visit www.myacurite.com to complete setup.

ADDITIONAL NOTES

The Wi-Fi set up page is available for 30 minutes after the display is powered on. Press the gear button to re-activate the setup page at any time.

To retain Wi-Fi configuration details, backup batteries are strongly recommended in the display. The display can be power cycled at any time to clear Wi-Fi credentials.



Customer Support

WE'RE HERE TO HELP!

For support, visit [acurite.com/support](https://www.acurite.com/support). Limited 1-year warranty.
Full product manuals, warranty and FCC statement available on [acurite.com](https://www.acurite.com).



Documents / Resources

	ACURITE 06100M Iris 5-in-1 Direct-to-WiFi Display [pdf] Instructions 06100M, Iris 5-in-1 Direct-to-WiFi Display
---	--

References

- [▶ AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)
- [▶ Customer Support & FAQs | AcuRite Weather Monitoring](#)
- [▶ AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)
- [▶ My AcuRite](#)

Manuals+.