

AcuRite 13020 Projection Alarm Clock Instruction Manual

Home » Acurite » AcuRite 13020 Projection Alarm Clock Instruction Manual



Instruction Manual Projection Alarm Clock models 13020 / 13026



Questions? Contact Customer Support at (877) 221-1252 or visit www.AcuRite.com. SAVE THIS MANUAL FOR FUTURE REFERENCE.

manual in its entirety and retain it for future reference.

Contents

- 1 Unpacking Instructions
- 2 Package Contents
- 3 Features & Benefits OUTDOOR

SENSOR

- 4 Features & Benefits FRONT OF CLOCK
- 5 Features & Benefits
- 6 SETUP
- **7 OPERATION**
- 8 Troubleshooting
- 9 Care & Maintenance
- 10 Specifications
- 11 FCC Information
- **12 Customer Support**
- 13 Limited One Year Warranty
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove it.

Package Contents

- 1. Alarm clock
- 2. Outdoor sensor
- 3. Power adapter
- 4. Instruction Manual



Features & Benefits OUTDOOR SENSOR



1. Integrated Hanger

For easy placement.

2. Wireless Signal Indicator

Flashes when data is being sent to the display.

- 3. Battery Compartment
- 4. A-B-C Switch

ID code that must match display's A-B-C switch to ensure units synchronize.

5. Battery Compartment Cover

Features & Benefits FRONT OF CLOCK



1 () Button

For turning projector power on/off

2. **C**_{180°Button}

For flipping projection orientation.

3. Snooze Button



For setup preferences.



Toggle between red or amber projection color.

6. Button

Toggle between time, indoor temperature or outdoor temperature.

7. D K Button

For alarm setup.

8. Alarm ON/OFF Button

BACK OF CLOCK

9. + Button

Increase display brightness.

10. A-B-C Switch

ID code that must match sensor's A-B-C switch to ensure units synchronize.

11. °C/°F Button

Select degrees Celsius or degrees Fahrenheit temperature units.

12. ZONE Button

Set time zone preference.

13. RESET Button

Full reset to factory defaults.

14. — **Button**

Decrease display brightness.

15. Battery Compartment

16. Plug-in for Power Adapter

17. USB Port

For charging compatible smartphones.

18. Intelli-time®

Battery Compartment

19. Projector Focus Wheel

Adjust the size and focus of the projected image.

20. Battery Compartment Cover

(not shown)

Features & Benefits



1. Current Indoor Temperature

The arrow icon indicates direction temperature is trending.

2. Intelli-Time ® Clock

Pre-programmed to the correct time and automatically updates for Daylight Saving Time.

- 3. Day of Week
- 4. Moon Phase
- 5. Current Outdoor Temperature

The arrow icon indicates direction temperature is trending.

- 6. Date
- 7. Alarm On/Off
- 8. Alarm Set Time
- 9. Alarm Days Active

Indicates daily alarm or weekday-only alarm setup.

SETUP

Sensor Setup

1. Set the A-B-C Switch

The A-B-C switch is located inside the battery compartment. It can be set to A, B or C. However, you must select the same letter choices for both the sensor and the display in order for the units to synchronize.

2. Install or Replace Batteries

AcuRite recommends high quality alkaline or lithium batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended. The sensor requires lithium batteries in low-temperature conditions. Cold temperatures can cause alkaline batteries to function improperly. Use lithium batteries in the sensor for temperatures below -4°F / -20°C.

- 1. Slide off the battery compartment cover. Take note of the A-B-C switch setting inside the battery compartment for display setup.
- 2. Insert 2 x AA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
- 3. Replace the battery cover.



Alarm Clock Setup

1. Set the A-B-C Switch

Locate the A-B-C switch inside the battery compartment. Set the A-B-C switch to A, B, or C. You must select the same letter choices for both the display and the sensor in order for the units to synchronize.

2. Plug-in Power Adapter


For the best performance, plug in the power adapter as the main power source for this product.

3. Install or Replace Backup Batteries (optional)

- 1. Remove the battery compartment cover.
- 2. Insert 3 x AA alkaline batteries into the battery compartment, as shown.

Follow the polarity (+/-) diagram in the battery compartment.

3. Replace the battery cover.

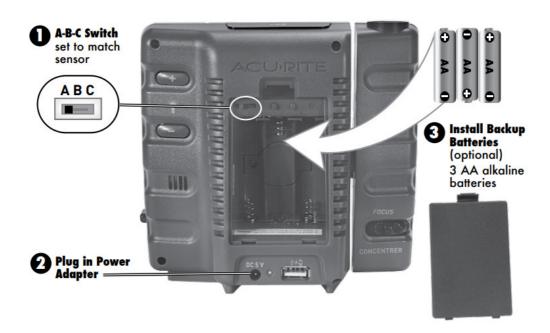

IMPORTANT: Batteries are a backup power source to preserve records in the event of a power outage. Power adapter recommended as the primary power source to enjoy the full functionality of the product.



PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

BATTERY SAFETY: Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment that is not to be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from

the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in free, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Intelli-Time® Clock

Intelli-Time ® clock and calendar are pre-programmed to the correct time and date and update automatically for Daylight Saving Time. All you need to do is select your time zone using the "ZONE" button.

Set the Time, Date & Language

Press and hold the "button, located on the right side of the display, to enter SET MODE. Once in set mode, the preference you are currently setting will blink on the display. To adjust the currently selected (flashing) item, press and release the " \(\Lambda \)" or " \(\vec{v} \)" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "button to adjust the next preference. The preference set order is as follows:

LANGUAGE (English or French)
TIME ZONE (PST MST CST EST AST HAST AKST)
AUTO DST (ON or OFF)*
CLOCK HOUR
CLOCK MINUTE
CALENDAR MONTH
CALENDAR DATE

CALENDAR YEAR

You will automatically exit SET MODE if no buttons are pressed for 5 seconds.

Enter setup mode at any time by pressing the " button.



*If you live in an area that observes Daylight Savings Time, DST should be set to ON, even if it is not currently Daylight Saving Time.

Manual Clock Quick-Adjust

Self-timed clocks may drift by a few minutes overtime. You can adjust the time using the "Quick Adjust" feature.

To access "Quick Adjust" mode, press AND HOLD the " \(\Lambda \)" or " v " buttons for at least 8 seconds. The minutes will flash to indicate they can be adjusted.

Press the " ^" or " v " buttons to adjust the minutes. After 3 seconds of inactivity, any adjustments will be saved and the clock will return to normal operation.

Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and outdoor sensor are critical to the accuracy and performance of this product.



Alarm Clock Placement

Place alarm clock in a dry area free of dirt and dust. To help ensure an accurate indoor temperature measurement, be sure to place the display away from heat sources or vents.




Outdoor Sensor Placement

The sensor must be placed outside to observe outdoor conditions. The sensor is waterresistant and is designed for general outdoor use, however, to extend its life place the sensor in an area protected from direct weather elements. Hang the sensor using the integrated hang holes or hanger, or by using string (not included) to hang it from a suitable location, like a well-covered tree branch. The best location is 4 to 8 feet above the ground with permanent shade and plenty of fresh air to circulate around the sensor.

Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- Display and outdoor sensors must be within 330 ft (100 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place both units at least 3 ft (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.).

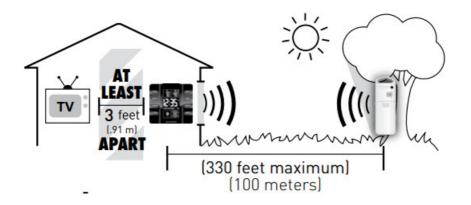

Setup is Complete

The sensor will now synchronize with the alarm clock. It may take a few minutes for synchronization to complete.

OPERATION

Set Alarm Time

Press and release the " " button to enter the ALARM SET MODE.

To adjust the currently selected (flashing) item, press and release the " \wedge " or " \vee " buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the " D is button to adjust the next preference. The preference set order is as follows:

ALARM CLOCK HOUR

ALARM CLOCK MINUTE

ALARM EVERY DAY or WEEKDAY ONLY SELECTION

You will automatically exit ALARM SET MODE if no buttons are pressed for 5 seconds. Enter setup mode at any

time by pressing the " T X " button. 10' X

Momentary Backlight

During power adapter use, press the Snooze button for momentary backlight at 100% brightness. During battery-powered use, press any button for a momentary backlight.

Moon Phase

Track the phases of the moon, conveyed through simple lunar phase icons.



USB Charging

Charge your mobile device by plugging your device's USB power cord (not included) into the USB charging port on the back of the alarm clock.

USB charging is only available during power adapter use; USB charging is not active when operating on battery power only.

Note: Follow the manufacturer's instructions for your mobile device(s) to determine compatibility with the USB charging feature on this product. Some devices may not support USB charging or may require a higher power rating than this product provides. Observe the charging status on your device. Ensure your device is working properly before attempting to charge.

Using The Projector

The projector can be rotated to project the time, indoor temperature, or outdoor temperature on a wall or on the ceiling.

Press the projector power button " " to turn the projector ON/OFF.

Press the " 180 º " button to flip the projection image 180º for use on a ceiling or wall.

Press the " button, located on the left side of the display, to select the information you want to be projected: CURRENT TIME

INDOOR TEMPERATURE ()

Press the color selection button () to choose between a RED or AMBER projection.

If the projected information is hard to read or blurry, use the "FOCUS" dial on the back of the projector to make the projected image clearer.

NOTES:

- Do not stare into the projector lens directly!
- Do not touch the projector lens.
- Some rough surfaces will not display the projection clearly.

Display Backlight

Display backlight has 6 brightness levels: 100% (default), 70%, 50%, 30%, 10% and 5%. The backlight will be ON 100% intensity by default, you may adjust the backlight using the dimmer control buttons located on the back of the unit.

Troubleshooting

No outdoor sensor reception no bars	If the wireless signal indicator shows no bars: •Relocate the display and/or the outdoor sensor. The units must be within 330 ft (100 m) of each other. •Make sure both units are placed at least 3 feet (.9 m) away from electroni cs that may interfere with the wireless communication (such as TVs, micr owaves, computers, etc). •Use standard alkaline batteries (or lithium batteries in the sensor when the temperature is below -4°F/-20°C). Do not use heavy-duty or rechargeable batteries. NOTE: It may take up to 20 minutes for the display and sensor to synchronize after batteries are replaced.
Alarm dock display seems dark or h ard to read	 Verify power adapter is plugged in. Increase brightness using +/- buttons, located on the back of the clock. The optimum viewing angle for this product is from slightly above it.
Alarm dock screen not working	•Check that the batteries are installed correctly. Batteries may need to be replaced. •Reset the display by pressing the RESET button, located in the battery c ompartment of the alarm clock. Time and date will need to be entered aft er a reset.
Inaccurate temperature	•Make sure both the display and sensor are placed out of direct sunlight a nd away from any heat sources or vents (see page 8).
Outdoor temperature is flashing or showing dashes	Flashing of the outdoor temperature is generally an indication of wireless interference. 1. Bring both the sensor and display indoors and power down both units. 2. Make sure the A-B-C switch on both units matches. 3. Power up the outdoor sensor. 4. Power up the display. 5. Let the units sit within a couple of feet of each other for about 5 minute s to gain a strong connection.

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit <u>www.AcuRite.com</u> or call (877) 221-1252 for assistance.

Care & Maintenance


Alarm Clock Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt, and moisture. Clean ventilation ports regularly with a gentle puff of air.

Outdoor Sensor Care

Clean with a soft damp cloth. Do not use caustic cleaners or abrasives.

Replace Intelli-Time® Clock Battery

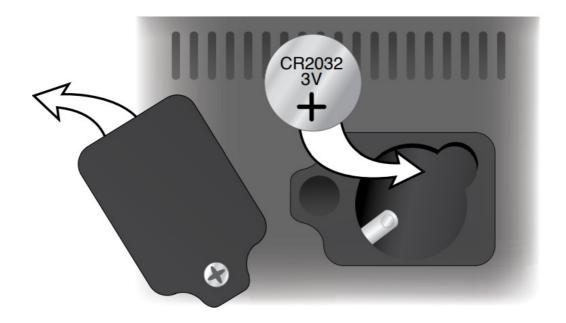

Intelli-Time ® technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. Time and date will need to be entered after replacing the Intelli-Time battery. To replace the Intelli-Time battery:

- 1. Locate the coin cell battery compartment door on the back of the display. Unscrew and remove the compartment cover.
- 2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
- 3. Screw in the battery cover.



Specifications

TEMPERATURE RANGE	Outdoor: -40°F to 158°F; -40°C to 70°C
	Indoor: 32°F to 99°F; 0°C to 37°C
WIRELESS RANGE	330 ft / 100 m depending on home construction materials
OPERATING FREQUENCY	433 MHz
POWER	Display: 5v power adapter 3 x AA alkaline batteries (for backup; optional)
	Sensor: 2 x AA alkaline or lithium batteries
DATA REPORTING	Outdoor data: 16-second updates Indoor data: 60-second updates

FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- 1. This device may NOT cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. For assistance, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

Visit our website at www.AcuRite.com

- ► Installation Videos
- ► Instruction Manuals
- ► Replacement Parts
- ► Register your Product
- ► Support User Forum
- ► Submit Feedback & Ideas



Limited One Year Warranty

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship and to be free of defects when properly installed and operated for a period of one year from the date of purchase. We recommend that you visit us at www.AcuRite.com for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney. The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co.

965 Wells St., Lake Geneva, WI 53147





Weather Stations



Temperature & Humidity



Weather Alert Radio





Kitchen Thermometers & Timers

Clocks

It's more than accurate, it's AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™. www.AcuRite.com

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology.

Visit www.AcuRite.com/patents for details.

Printed in China 13026W INST 112315

Documents / Resources



AcuRite 13020 Projection Alarm Clock [pdf] Instruction Manual 13020, 13026, Projection Alarm Clock

References

- 7 Home -
- AcuRite Weather Monitoring | #1 Weather Station Brand in North America
- Patented Technology | AcuRite

Manuals+