



ACURITE Digital Timer Instruction Manual

[Home](#) » [Acurite](#) » ACURITE Digital Timer Instruction Manual 

Contents

- [1 Instruction Manual](#)
 - [1.1 ACURITE Digital Timer](#)
- [2 OVERVIEW OF FEATURES](#)
- [3 SETUP](#)
- [4 INSTRUCTIONS FOR USE:](#)
- [5 OPERATION](#)
- [6 WARNING](#)
- [7 LIMITED ONE YEAR WARRANTY](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Instruction Manual




ACURITE Digital Timer

Button Clip-on back is also a stand Magnet back 23 Hours / 59 Minutes / 59 Seconds Large, easy-to-read numbers.

Thank You for purchasing this ACURITE® product. Please read this manual in it's entirety to fully enjoy the benefits and features of this product. Please keep this manual for future reference.

NOTE: A clear film is applied to the display at the factory that must be removed prior to using this product. Locate the clear tab and simply peel to remove.

OVERVIEW OF FEATURES

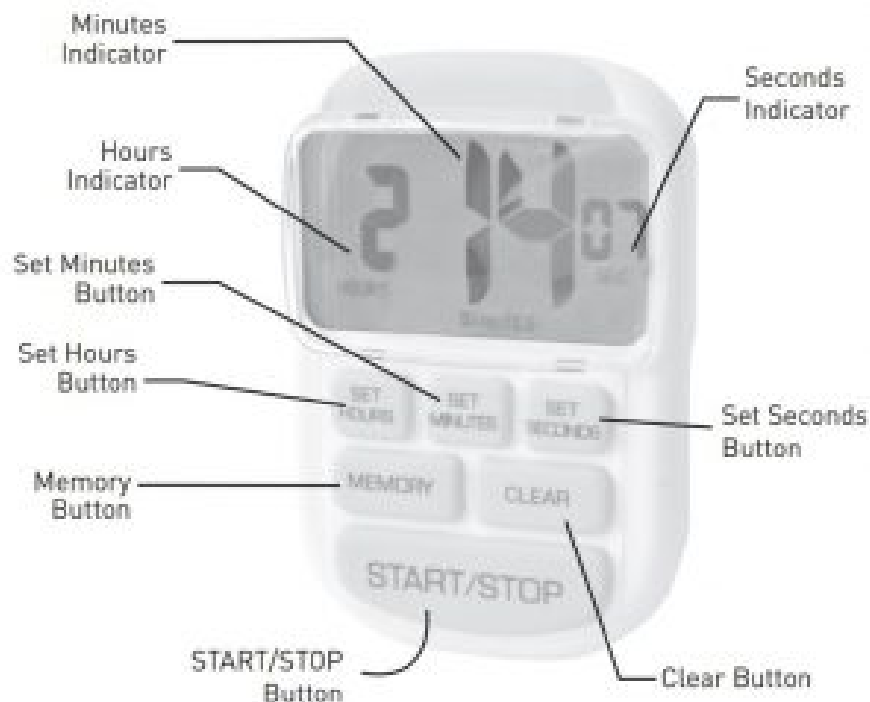

General timer description:

It's a countdown/up timer. The max count range is 23 hour 59min 59sec., then the timer counts down to 00:00:00 the unit will start to alarm and count up (this will tell the user how much additional time has elapsed since the timer started sounding). The alarm will continuously sound (at 75db) for 1 minute or until the user presses the "START/STOP" button.

SETUP

Requires 1 "AAA" Battery (not included). Install the battery.

INSTRUCTIONS FOR USE:

1. The timer is "always on".
2. In sleep mode LCD will display 00:00:00. This will not drain battery.
3. **HOURS:** Press the "SET HOURS" button until desired number reached.
4. **MINUTES:** Press the "SET MINUTES" button until desired number reached.
5. **SECONDS:** Press the "SET SECONDS" button until desired number reached.
6. Press and hold any of these buttons (hours, minutes or seconds) to activate rapid scroll.
7. Press the "START/STOP" button to begin counting down from entered time.
8. Press the "CLEAR" button to clear the numbers displayed.
9. Press the "MEMORY" button to bring back the last time entered.

OPERATION**When timer is set but not running:**

1. Press the "START/STOP" button to begin counting down from time entered.
2. Press the "CLEAR" button to clear all numbers.

When timer is running:

1. Press the "START/STOP" button to stop (pause) countdown. Push again to resume countdown.

MEMORY button:

The user can press the "SET HOURS", "SET MINUTES" and "SET SECONDS" buttons to set a value that can be kept in MEMORY. Once a value is entered, press the "MEMORY" button to keep it in MEMORY. To display this number press the "MEMORY" button. To reset the number kept in MEMORY, press the "MEMORY" button to display the number and then press the "CLEAR" button.

WARNING

WARNING: Do not place on or near hot surfaces. Do not immerse unit in water.

Product Registration

To receive product information, register your product online. It's quick and easy!

Log on to http://www.chaneyinstrument.com/product_reg.htm



Please DO NOT return product to the retail store. For technical assistance and product return information, please call Customer Care: 877-221-1252 Mon. – Fri. 8:00 A.M. to 4:45 P.M. (CST)

www.chaneyinstrument.com

LIMITED ONE YEAR WARRANTY

Haney Instrument Company warrants that all products it manufactures to be of good material and workmanship and to be free of defects if properly installed and operated for a period of one year from date of purchase. REMEDY FOR BREACH OF THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIR OR REPLACEMENT OF DEFECTIVE ITEMS. Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. In all cases, transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This warranty will not be breached, and Chaney will give no credit for products it manufactures which shall have received normal wear and tear, been damaged, tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney.

THE ABOVE-DESCRIBED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL OTHER WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. CHANEY EXPRESSLY DISCLAIMS ALL LIABILITY FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES, WHETHER ARISING IN TORT OR BY CONTRACT FROM ANY BREACH OF THIS WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. CHANEY FURTHER DISCLAIMS ALL LIABILITY FROM PERSONAL INJURY RELATING TO ITS PRODUCTS TO THE EXTENT PERMITTED BY LAW. BY ACCEPTANCE OF ANY OF CHANEY'S EQUIPMENT OR PRODUCTS, THE PURCHASER ASSUMES ALL LIABILITY FOR THE CONSEQUENCES ARISING FROM THEIR USE OR MISUSE. NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO ASSUME FOR CHANEY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF ITS PRODUCTS. FURTHERMORE, NO PERSON, FIRM OR CORPORATION IS AUTHORIZED TO MODIFY OR WAIVE THE TERMS OF THIS PARAGRAPH, AND THE PRECEDING PARAGRAPH, UNLESS DONE IN WRITING AND SIGNED BY A DULY AUTHORIZED AGENT OF CHANEY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For in-warranty repair, please contact: Customer Care Department Chaney Instrument Company 965 Wells Street Lake Geneva, WI 53147

Chaney Customer Care 877-221-1252 Mon-Fri 8:00 a.m. to 4:45 p.m. CST www.chaneyinstrument.com



If at any time in the future you need to dispose of this product please note that:
Waste electrical products should not be disposed together with household waste.
Please recycle where facilities exist. Check with your local Authority or retailer
for recycling advice




Read More About This Manual & Download PDF:

ACURITE Digital Timer Instruction Manual – [\[Download Optimized \]](#)
ACURITE Digital Timer Instruction Manual – [Download](#)

Questions about your Manual? Post in the comments!

Documents / Resources

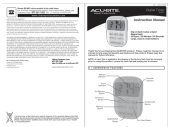	<p>ACURITE Digital Timer [pdf] Instruction Manual Digital Timer, 00531</p>
---	--

References

- [AcuRite Weather Monitoring | #1 Weather Station Brand in North America](#)