



adam hall PRO PORT 4 PP Power Distribution Strip Owner's Manual

[Home](#) » [adam hall](#) » adam hall PRO PORT 4 PP Power Distribution Strip Owner's Manual 



**PRO PORT 4 PP
POWER DISTRIBUTION STRIP
WITH 1 X POWER TWIST INPUT + 5 X POWER TWIST OUTPUTS**

Contents

1 FEATURES

2 INTRODUCTION

3 SPECIFICATIONS

4 SAFETY INFORMATION

5 Documents / Resources

5.1 References

FEATURES

- 230 V Operating voltage, max. 16 A
- 5 Power Twist output jacks
- Metal casing
- 2 x M10 mounting points
- IP protection class 20

INTRODUCTION

The PRO PORT 4 PP is ideal for tidy and targeted power distribution on stages, on trusses and in equipment rigs. The rugged metal housing features a Power Twist power input jack and 5 Power Twist output jacks, 4 of which are located on top of the distributor. Two M10 threaded inserts are used for suspension and fixed mounting.

SPECIFICATIONS

Product number	AHPPORT4PP
Product type	Power strips
Type	Not 19 inch
Number of outlets	1 x Power Twist IN + 5 Power Twist OUT
Power input	Power Twist I/O
Operating voltage	230 V
Max. current	16 A
Cabinet material	Metal
Color	Black
Protection class	IP20
Width	297 mm
Height	60 mm
Depth	78 mm
Weight	0.8 kg



SAFETY INFORMATION

1. Please read these instructions carefully.
2. Keep all information and instructions in a safe place.
3. Follow the instructions.
4. Observe all safety warnings. Never remove safety warnings or other information from the equipment.
5. Use the equipment only in the intended manner and for the intended purpose.
6. Use only sufficiently stable and compatible stands and/or mounts (for fixed installations).
Make certain that wall mounts are properly installed and secured. Make certain that the equipment is installed securely and cannot fall down.
7. During installation, observe the applicable safety regulations for your country.
8. Never install and operate the equipment near radiators, heat registers, ovens or other sources of heat. Make certain that the equipment is always installed so that it is cooled sufficiently and cannot overheat.
9. Never place sources of ignition, e.g., burning candles, on the equipment.
10. Ventilation slits must not be blocked.
11. Do not use this equipment in the immediate vicinity of water (does not apply to special outdoor equipment – in this case, observe the special instructions noted below. Do not expose this equipment to flammable materials, fluids or gases.
12. Make certain that dripping or splashed water cannot enter the equipment. Do not place containers filled with liquids, such as vases or drinking vessels, on the equipment.
13. Make certain that objects cannot fall into the device.
14. Use this equipment only with the accessories recommended and intended by the manufacturer.
15. Do not open or modify this equipment.

16. After connecting the equipment, check all cables in order to prevent damage or accidents, e.g., due to tripping hazards.
17. During transport, make certain that the equipment cannot fall down and possibly cause property damage and personal injuries.
18. If your equipment is no longer functioning properly, if fluids or objects have gotten inside the equipment or if it has been damaged in another way, switch it off immediately and unplug it from the mains outlet (if it is a powered device). This equipment may only be repaired by authorized, qualified personnel.
19. Clean the equipment using a dry cloth.
20. Comply with all applicable disposal laws in your country. During disposal of packaging, please separate plastic and paper/cardboard.
21. Plastic bags must be kept out of reach of children.

FOR EQUIPMENT THAT CONNECTS TO THE POWER MAINS:

22. If the equipment has been exposed to strong fluctuations in temperature (for example, after transport), do not switch it on immediately. Moisture and condensation could damage the equipment. Do not switch on the equipment until it has reached room temperature.
23. Before connecting the equipment to the power outlet, first verify that the mains voltage and frequency match the values specified on the equipment. If the equipment has a voltage selection switch, connect the equipment to the power outlet only if the equipment values and the mains power values match. If the included power cord or power adapter does not fit in your wall outlet, contact your electrician.
24. Do not step on the power cord. Make certain that the power cable does not become kinked, especially at the mains outlet and/or power adapter and the equipment connector.
25. When connecting the equipment, make certain that the power cord or power adapter is always freely accessible. Always disconnect the equipment from the power supply if the equipment is not in use or if you want to clean the equipment. Always unplug the power cord and power adapter from the power outlet at the plug or adapter and not by pulling on the cord. Never touch the power cord and power adapter with wet hands.
26. Whenever possible, avoid switching the equipment on and off in quick succession because otherwise this can shorten the useful life of the equipment.
27. To disconnect the equipment from the power mains completely, unplug the power cord or power adapter from the power outlet.
28. Unplug the power cord and power adapter from the power outlet if there is a risk of a lightning strike or before extended periods of disuse.

CAUTION:



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

Never remove the cover, because otherwise there may be a risk of electric shock. There are no user serviceable parts inside. Have repairs carried out only by qualified service personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions.

MANUFACTURER'S WARRANTY & LIMITATION OF LIABILITY

You can find our current warranty conditions and limitation of liability at: https://cdn-shop.adam-hall.com/media/pdf/MANUFACTURERS-DECLARATIONS_ADAM_HALL.pdf

To request warranty service for a product, please contact Adam Hall GmbH, Adam-Hall-Str. 1, 61267 Neu-Anspach / Email Info@adamhall.com / 49 (0) 6081 / 9419-0



PROPER DISPOSAL OF THIS PRODUCT


(WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT)

(Valid in the European Union and other European countries with waste separation)

This symbol on the product, or the documents accompanying the product, indicates that this appliance may not be treated as household waste. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. Please dispose of this product separately from other waste and have it recycled to promote sustainable economic activity.

Adam Hall GmbH
Adam-Hall-Str. 1
61267 Neu-Anspach , Germany
Phone: +49 6081 9419-0
adamhall.com

Documents / Resources

	<p>adam hall PRO PORT 4 PP Power Distribution Strip [pdf] Owner's Manual PRO PORT 4 PP, PRO PORT 4 PP Power Distribution Strip, Power Distribution Strip, Distribution Strip, Strip</p>
---	---

References

- [Eventtechnik Lösungen | Adam Hall Group](#)
- [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.