



# ADDVENT AVA 351 Remote Fan Timer Instruction Manual

[Home](#) » [ADDVENT](#) » ADDVENT AVA 351 Remote Fan Timer Instruction Manual 

## Contents

- [1 ADDVENT AVA 351 Remote Fan Timer](#)
- [2 Instructions](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

## ADDVENT


**ADDVENT AVA 351 Remote Fan Timer**



## Instructions

This unit can be used to control the run-on time of extractor fans, providing that the electrical load is not less than 20W or more than 200W. The control is designed to fit a standard 68mm, 2 or 4-lug recessed wall box. The timer adjustment control allows the user to adjust the length of the timer run-on after the room light is extinguished. Timer range – 1 to 60 minutes Please read and thoroughly understand these instructions before commencing work.

- **IMPORTANT:** A double pole switched and fused spur must be used, having a contact separation of at least 3mm in all poles. Both the switched and fused spur isolator and the Advent Fan Speed Control must only be installed outside any room containing the shower or bath. They must not be accessible to any person using either the shower or bath. All wiring should be fixed securely. The conductors should have a minimum of 1mm cross-section. All wiring must comply with current IEE regulations. Switch off the main supply before making any electrical connections.
- If in any doubt please contact a qualified electrician.
- The wiring diagram below may be helpful

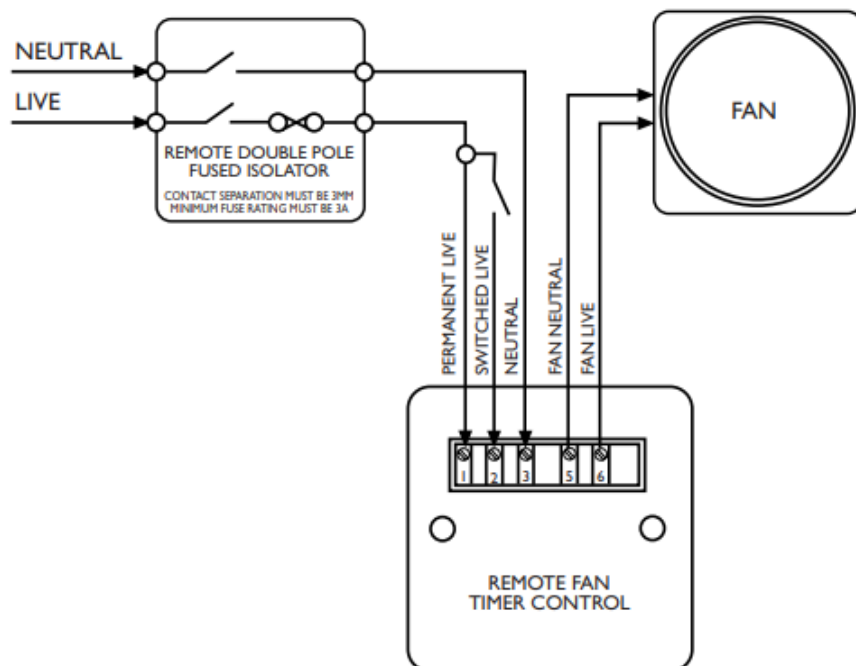

- Unit 12, Access 18, Bristol, BS118HT Telephone: 0117 938 6400

## Documents / Resources



[ADDVENT AVA 351 Remote Fan Timer](#) [pdf] Instruction Manual  
AVA 351 Remote Fan Timer, AVA 351, Remote Fan Timer, Fan Timer