



# ADDVENT AVA361 Remote Humidistat Fan Timer Instruction Manual

[Home](#) » [ADDVENT](#) » ADDVENT AVA361 Remote Humidistat Fan Timer Instruction Manual 

ADDVENT AVA361 Remote Humidistat Fan Timer



## Contents

[1 Installation Instructions](#)

[2 Documents / Resources](#)

[3 Related Posts](#)

## Installation Instructions


Please read these instructions before installation.


Switch off mains supply before making any electrical connections, if you are in any doubt about the installation consult a qualified electrician. This appliance may be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Precautions must be taken to avoid the back-flow of gases into the room from the open flue of

gas or other open-fire appliances when mounted in outside walls or windows. This controller must be disconnected from electrical power before any maintenance or adjustment is carried out. Thank you for choosing the Advent AVA361 Remote Humidistat Fan Timer. These Instructions are included for your guidance. The AVA361 Remote Humidistat Fan Timer is suitable for use with any single or combination of Advent fans without shutters, providing the total electric load is not more than 200W. This control unit combines an over run timer activated by a switched live connection and an automatic humidistat.

- The timer is user adjustable to provide a full power run-on period between approximately 1 minute and 60 minutes.
- The automatic humidistat activates the extractor fan when the ambient humidity exceeds a user settable threshold.
- The humidity threshold is user adjustable between approximately 20% RH (always on) and 90% RH (rarely on)
- **IMPORTANT:** A double pole switch must be used, having a contact separation of at least 3mm in all poles, and a fuse rated at 3A. All wiring must be fixed securely. The cable to the fan must have a minimum of 1 square millimeter cross section and should not exceed 2000mm in length, excessive length could possibly cause radio interference. All wiring must comply with current IEE regulations. Switch off mains supply before making any electrical connections.
- IF IN ANY DOUBT PLEASE CONTACT A QUALIFIED ELECTRICIAN.


The remote humidistat must be installed outside zones 0, 1 and 2 – see diagram.

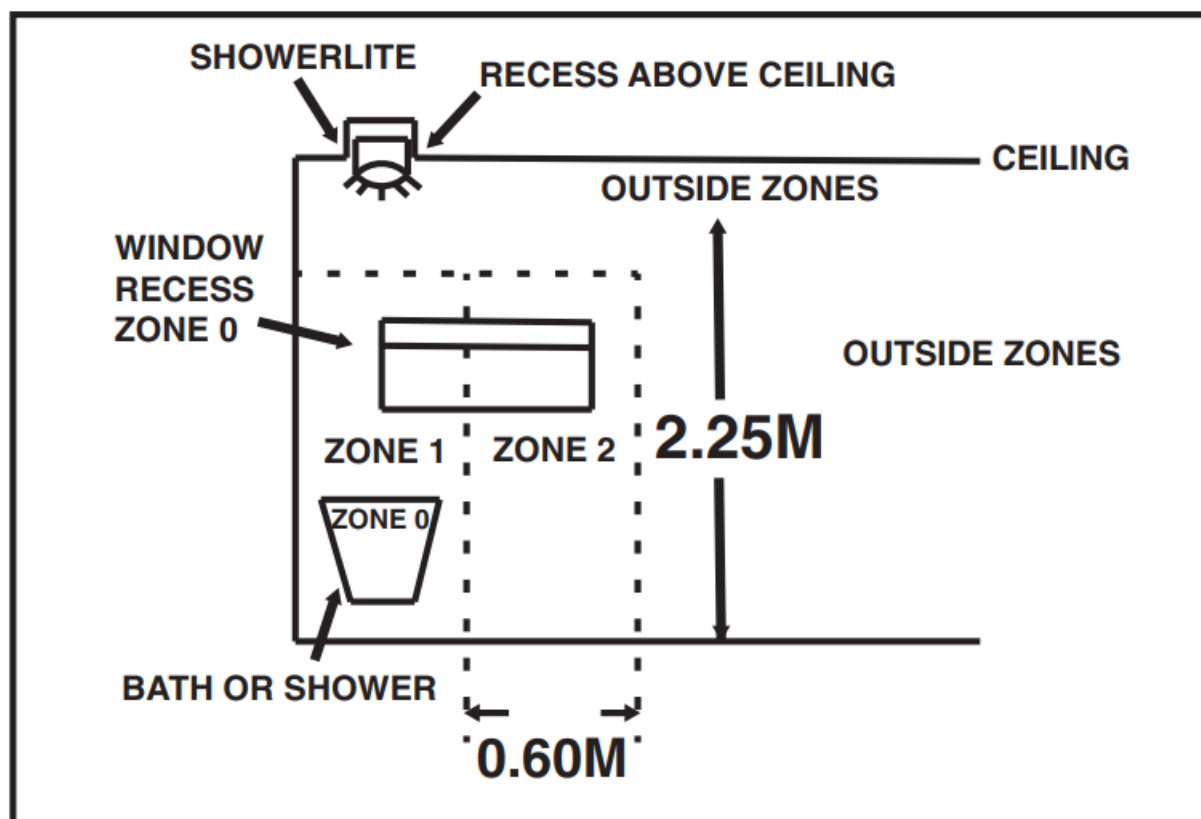

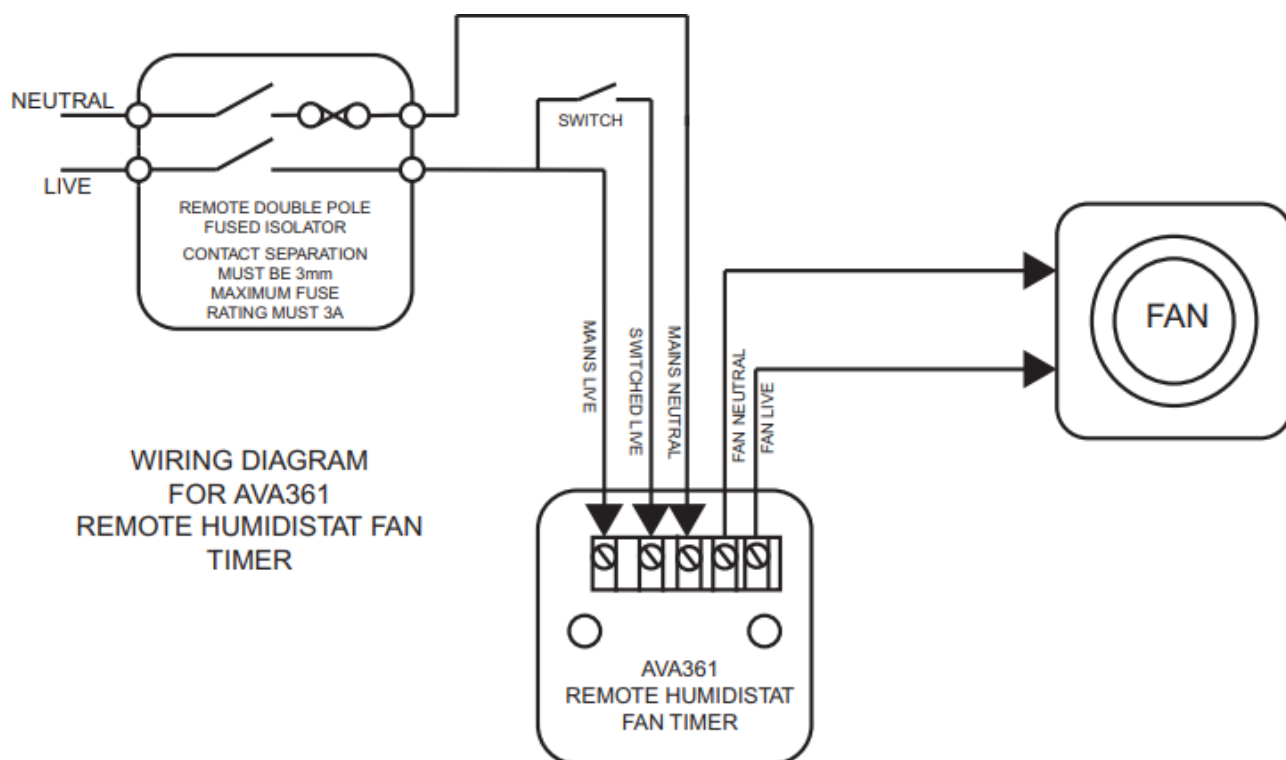

WIRING DIAGRAM  
FOR AVA361  
REMOTE HUMIDISTAT FAN  
TIMER

TO ADJUST LEVEL OF HUMIDITY  
ACTIVATION TURN ADJUSTER  
ANTI CLOCKWISE FOR  
ACTIVATION AT LOWER  
HUMIDITY LEVELS AND  
CLOCKWISE TO ACTIVATE  
AT HIGHER HUMIDITY LEVELS

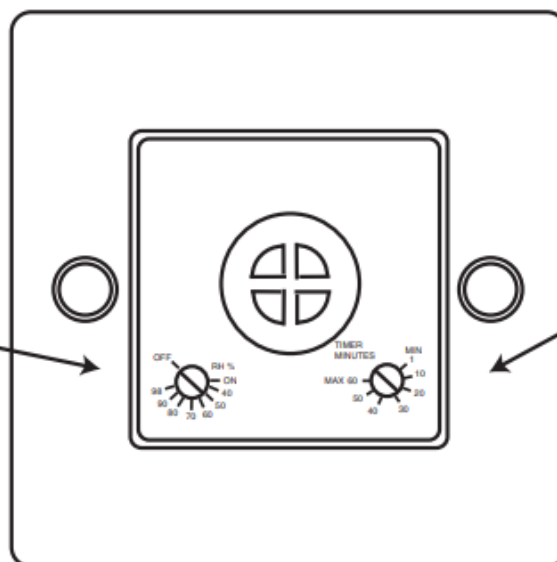


TO ADJUST OVER-RUN TIME  
TURN ADJUSTER CLOCKWISE  
TO INCREASE TIME, ANTI -  
CLOCKWISE TO REDUCE TIME.

# ADDVENT

Unit 12, Access 18, Bristol, BS11 8HT Telephone: 0117 923 5375

## Documents / Resources

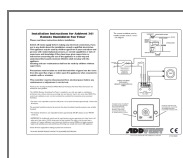

[ADDVENT AVA361 Remote Humidistat Fan Timer](#) [pdf] Instruction Manual  
AVA361, Remote Humidistat Fan Timer, AVA361 Remote Humidistat Fan Timer, Humidistat Fan Timer, Fan Timer, 361 Remote Humidistat Fan Timer