


Adexa AX268BVC ShowCase Upright Fridges User Manual

Home » Adexa » Adexa AX268BVC ShowCase Upright Fridges User Manual

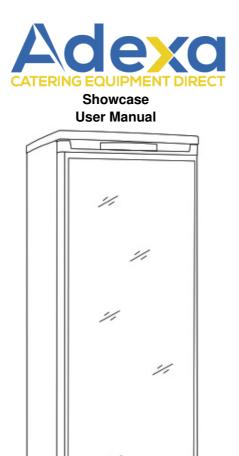

Before operating the unit, please read this manual completely.

Contents

- 1 SAFETY PRECAUTIONS 1
- **2 SAFETY PRECAUTIONS 1**
- **3 HON TO USE**
- **4 CLEANING**
- **5 IN THE CASE OF THE**

FOLLOWING

- **6 BEFORE REQUESTING SERVICE**
- **7 NAME OF SPARTS**
- 8 Documents / Resources
- 9 Related Posts

SAFETY PRECAUTIONS 1

- To ensure proper use, please thoroughly study these SAFETY PRECAUTIONS before operating the Unit.
- The purpose of the safety precautions in this manual is to ensure the safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases, where improper handling of the unit could lead to death or serious injury, are listed under the "WARNING" heading. However, the cases listed under the 1/1\CAUTION" heading could also lead to serious results. To ensure safety, adhere strictly to both types of safety precautions.

WARNING Improper handling of the unit could lead to death or serious injury.

CAUTION Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark ① contains information that should be strictly adhered to.
- After reading the instruction manual, store it in an easily accessible place where the user(s) of this product can easily find it

♦ PRECAUTIONS FOR INSTALLATION




Unstallation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

♦ PRECAUTIONS FOR USE




DON'T TAMPER All repairs, disassembly, and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

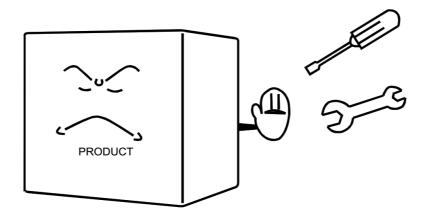




ELECTRICAL SHOCK HAZARDS Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

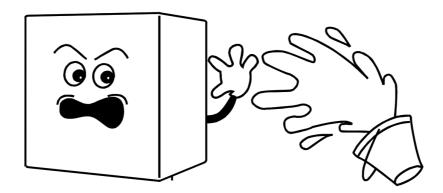




DANGER OF Never put flammable or volatile substances into the unit as an explosion and fire could result.

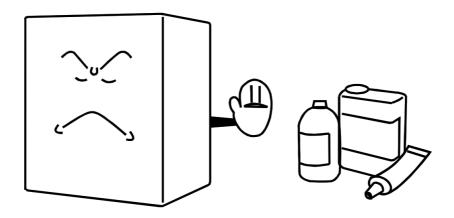





PROHIBITED Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects on the power cord or squeezing it in a tight place could damage it, possibly resulting in electrical shock or fire.

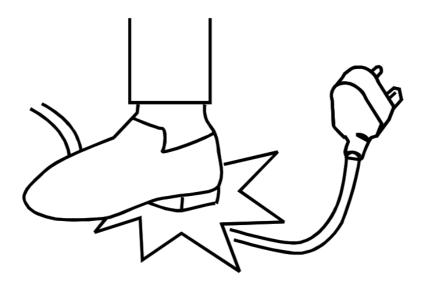

PROHIBITED Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating, and a fire.

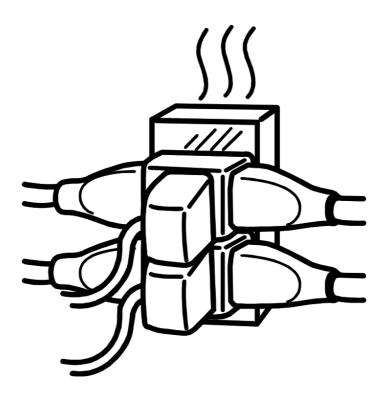


FLAMMABLE Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosions and fire.

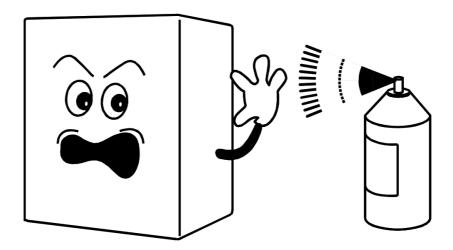


SAFETY PRECAUTIONS 1

WARNING

The unit is intended for the storage of ice cream and frozen foods. Storage of other items than The intended could have an adverse effect on the items stored in the unit.

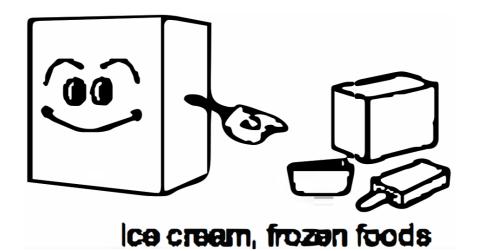

FROHIBITED For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock

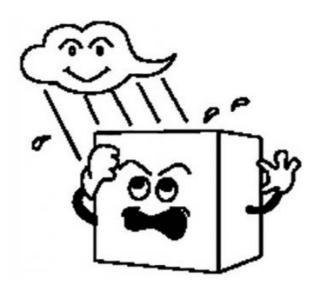


PROHIBITED Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.




Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products


could cause personal injury.

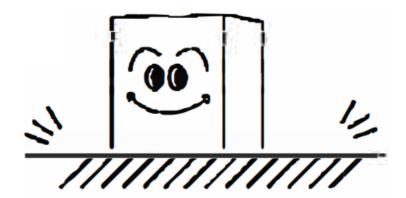


Underward If you find gas leakage, please don't touch the chest freezer; close the gas and open the door for ventilation. Gas leakage causes explosion, fire, and fire injury.

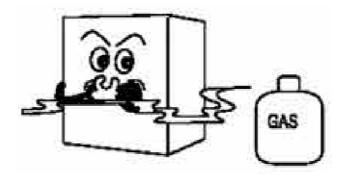


Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.

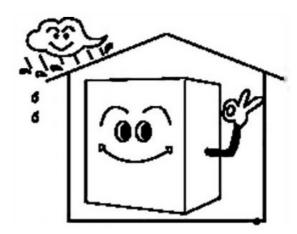

Away from hot air sources, Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.

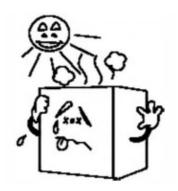

Leave disassembly and disposal of the unit to qualified experts.

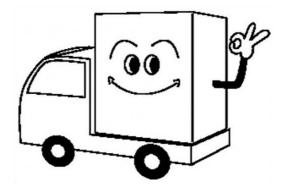


Should the unit need temporary storage, make sure not to store the unit In a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

SAFETY PRECAUTIONS 3


ACAUTION

WELL VENTILATED PLACE


Please make more than IOcm space between the Chest freezer and the wall. If there is no space, cooling capacity can drop down.

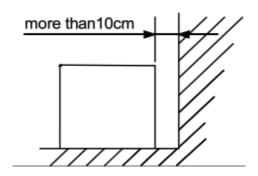


If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, an electrical shock could result.

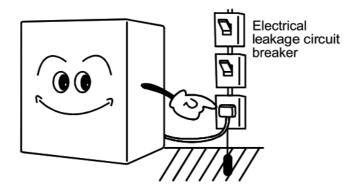


PROHIBITED Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

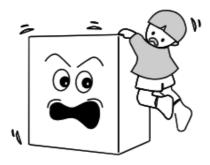


POWER CORD PRINCE PROME PROME

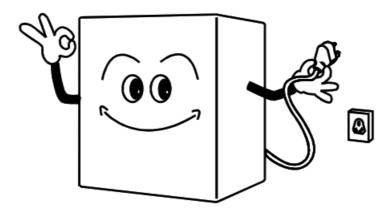


PROHIBITED Never touch the power cord plug, or other electrical components, or operate the switch with wet hands. Electrical shock could result.

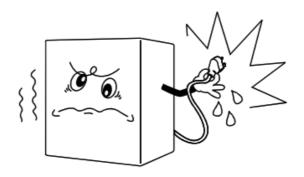


Never use if the power cord or plug is damaged or the plug cannot be firmly seated in the receptacle sockets as electrical shock, short-circuit and fire could result.

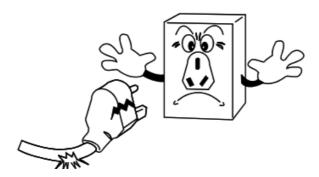

When disconnecting the power cord plug from the wall outlet, hold the plug main body close to the outlet. Pulling the cord could cause wire breakage, possibly resulting in overheating and fire.

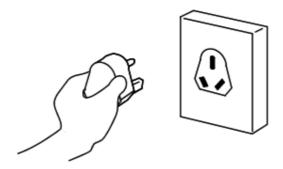

Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

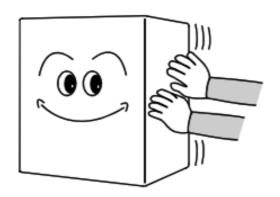

BEFORE USE

- Remove shipping packaging, tape, etc., and leave lids open for ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery.
- Following installation, refrigeration will start about 10 minutes after the operation is started.
- Operate for about 2 hours to cool the refrigerator compartment before placing items in the freezer.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

• Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit breaker, the compressor may be overloaded, and/or other damage may occur.


DEFROSTING

When 5mm frost forms in the freezer, please shave it and throw it away. If you defrost completely, please do it as follows.

- 1. Please make the inside empty, and disconnect the power cord plug.
- 2. When frost starts thawing, please shave it and you will be able to defrost in a short time.
- 3. After draining, please wipe the inside, and put a rubber cap on the drain bolt and the inside drain.

⚠ WARNING

For defrosting the chest freezer, don't use a hammer, knife, or bottle. If you use it, it give damage to the inside evaporator, and chest freezer cannot cool, and inside goods can thaw.

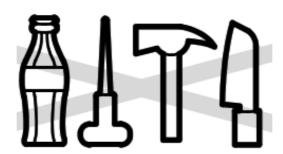

CLEANING



To prevent any electrical shock hazards or injury by rotating the circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.


1. EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.

WARNING

WARNING: Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil, or hot water as these will damage the painting and plastic components.

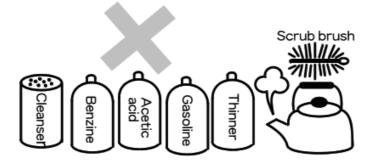

IN THE CASE OF THE FOLLOWING

1. POWER FAILURE

- Sudden power failure Keep opening and closing of the door to a minimum to prevent cold air from escaping from the freezer compartment. Covering exterior glass surfaces with a blanket, etc. will further help to maintain a low temperature.
- Announced power suspension In case of a long power suspension, place dry ice in the freezer compartment.
- Keep opening and closing the door to a minimum.
- Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

• 2. VVHEN NOT USED FOR A LONG PERIOD

- Remove all items from the compartment and disconnect the power cord plug from the wall outlet.
- Clean the compartment interior and wipe away all water. To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3. WHEN NOT USED TEMPORARILY

- Please stick wood between the door and the chest freezer so as not to close it up.
- Please don t put the chest freezer in a place where children can play If children shut themselves up, they
 cannot escape from it.

BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in "REQUIRED INFORMATION" below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.


No refrigeration at all	 Is the power supply interrupted? Is the power cord plug disconnected from the wall outlet? Are the shop's power fuses blown and/or the circuit breaker activated? The temperature control dial in the direction of MAX. If too cold, turn the dial in direction of OFF.
Inadequate refrigeration	 Is the place of installation badly ventilated? Is the freezer exposed to direct sunlight, and placed near a heater or stove? Are the lids opened and closed frequently? are items stocked beyond the load lin e? The temperature control dial in the direction of MAX. If too cold, tum dial in direction of MIN? Much frost forms in the chest freezer?
Excessive noise	 Is the floor underneath the freezer sturdy enough? Is the unit shaking and rattling? Is, the rear panel of the unit contacting a wall, etc.? A container or something is behind the chest freezer? The compressor will generate a rather loud sound for a while after the operation is started. The noise will cease together with refrigeration.
Condensation on cooler e xterior	• Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away the c ondensation with a dry cloth.
The circumference of the chest freezer feels hot	• Especially in summer or in starting running, the circumference of the chest freezer feels hot. Because the chest freezer inside has a pipe for radiating and pre venting The heat does not affect inside goods.

The appliance sometimes stops running when the thermostat turns off.

REQUIRED INFORMATION

- 1. Nature of malfunction (as accurately as possible)
- Product number (inscribed on the badge)
- 3. Serial number
- 4. Customer's name, address, phone number
- 5. Year and date of purchase
- 6. D Desired date for a service visit

NAME OF SPARTS

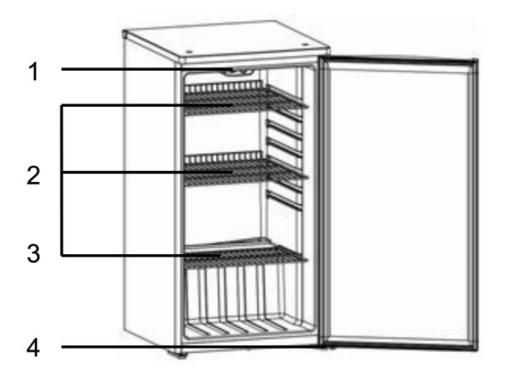

- 1. Light/Thermostat
- 2. Adjustable shelves
- 3. Shelf
- 4. Adjustable feet

Cautions

In case the power cord or plug is damaged, please ask the maintenance worker to change Ito do not do it by yourself, ilior::1 the plug carefully when pi I or insert it, and do not pull the wire.

- This appliance is intended to be used in household and similar applications
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- 1. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer
- 2. Do not damage the refrigerant circuit
- 3. Do not use Electrical appliances inside the food storage compartments of the appliances, other than those recommended by the manufacturer
- 4. The appliance shall not be discarded with the urban refuse and rubbish
- 5. The insulation foam contains flammable gases
- 6. The appliance shall be disposed of according to the appliance regulations obtained from your local authorities

This device is not intended to be used by people (including children) who have deficiencies in physical, sensory, or mental or who do not have experience or knowledge about this device's capacity unless they are supervised or directing them on how to use it in a safe manner by the person who is responsible for their safety.

This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or
mental capabilities or lack of experience and knowledge if they have been given supervision or instruction
concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play

with the appliance. Cleaning and user maintenance shall not be made by children without supervision."

Adexa Direct Limited UNIT 1 SWIFT POINT COSFORD LANE SWIFT VALLEY INDUSTRIAL ESTATE RUGBY CV21 1QN UK service@adexa.co.uk

Documents / Resources



Manuals+,