



Adexa CL78B Refrigerating Showcase Instruction Manual

[Home](#) » [Adexa](#) » Adexa CL78B Refrigerating Showcase Instruction Manual 

Contents

- [1 Adexa CL78B Refrigerating Showcase](#)
- [2 GENERAL](#)
- [3 Structure and Parts](#)
- [4 Handle and Erection](#)
- [5 Preparation and Power Supply](#)
- [6 Features Of Function](#)
- [7 Maintenance](#)
- [8 Trouble Shooting](#)
- [9 Circuit Diagram](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



 
Adexa CL78B Refrigerating Showcase



GENERAL

- Top brand fully enclosed compressor is used on the desk-top refrigerator. The refrigerant R290 or R134a is of an environmentally friendly agent. It features a rational configuration of refrigeration system with blower forced air cooling. The temperature is quite even inside the refrigerator.
- Double hollow transparent glasses are used on door and body. It features an artistic and elegant appearance, perfect perspective and easy access.
- It has a wide application in department store and house as well as the meeting room and sitting room.

Structure and Parts

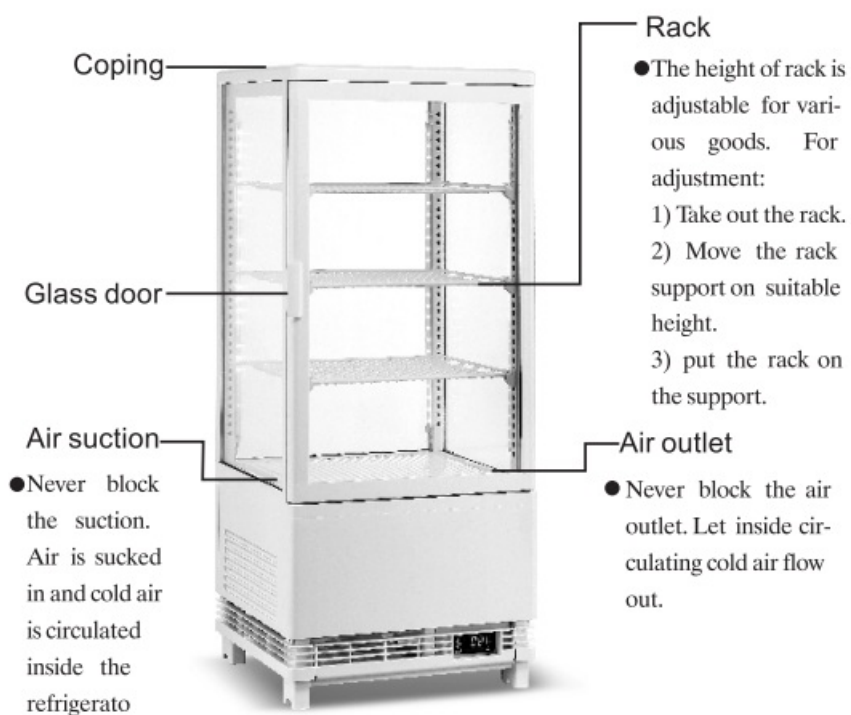

Handle and Erection

Handle with care

Unplug the wall socket first. Never tilt it over 45 degree during handling.



 
Sufficient space

The distance from both sides and back of refrigerator to wall or other substance must not less than 10cm. The refrigeration capability might be decreased if its surround space is too small to circulate air,



Far from heat source

Never place the refrigerator directly under the sunshine. Never locate it nearby any heat source or heater to prevent it from reducing refrigeration capability.

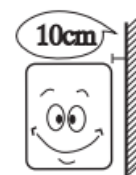


No hole making

Never make hole on the refrigerator. Never install other matter on the refrigerator



Dry place

 Always locate the refrigerator at a dry place.

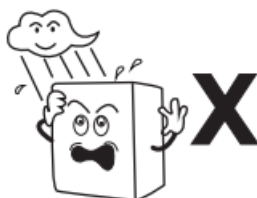

Well ventilation

Always locate the refrigerator at a place with fine ventilation. For the first time use, wait for 2 hours after handling and then plug the wall socket and start it.



No heavy load

Never put any heavy load on the top of the refrigerator.



Stable location

 
To avoid the unexpected noise and vibration, Unpacking and locate the refrigerator on a flat and solid place.



Preparation and Power Supply


Exclusive power socket

Normally, the power supply should be 220-240V single phase AC with exclusive single phase three pin receptacle (250V, 10A) and fuse (6A). The power receptacle must have a reliable earth connection.

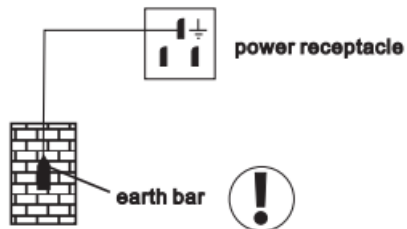


Protect cables

 Never break or damage the cables otherwise current leakage and fire might be resulted.

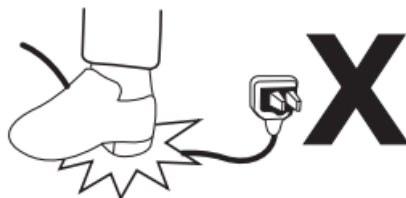

Prevent from flammables and explosive

 Never put any flammable or explosive inside the refrigerator such as ether, gasoline, alcohol, adhesive and explosive. Never put dangerous product nearby the refrigerator.

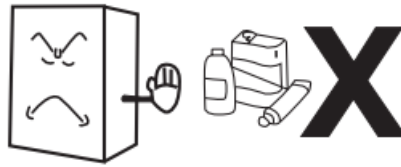


After power break

After power break or unplugging the refrigerator, always wait at least 5 minutes and then you may plug the refrigerator and start it again.



No share on socket

 Never let the refrigerator share the common socket with other appliance, otherwise the cable becomes hot and fire might be resulted

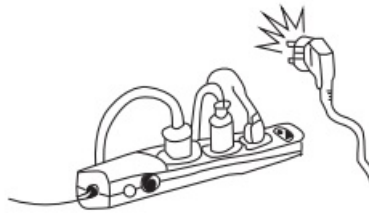


No water flushing

Never give the refrigerator surface a flush otherwise current leakage might be resulted.



No spray

 To spray the flammables such as paint or coating nearby the refrigerator is not allowed, otherwise fire might be resulted.

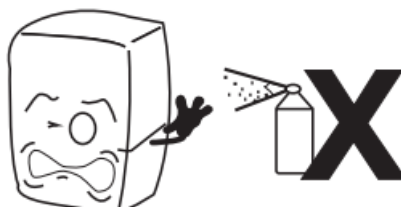

No medicine

No medicine is allowed to keep inside the refrigerator.

 


Use and Caution

• Before use:

- Plug the refrigerator on 220-240V~ exclusive socket.
- After the refrigerator running, put hand on the air suction to confirm it is sufficient cold. Then you may put food inside the cold box.

• Digital Temperature controller:

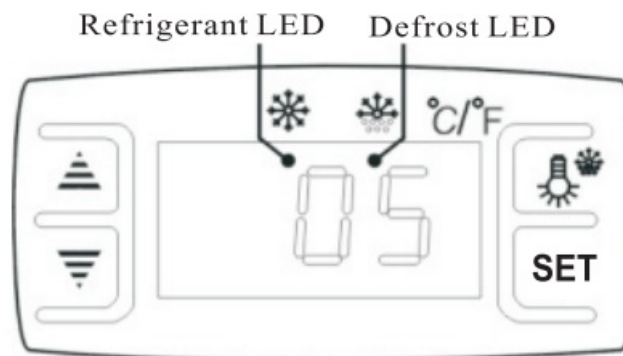





Features Of Function

It is a mini-sized and integrated intelligent controller and applicable to the compressor of one Hp. The main functions are: Temperature Display/ Temperature control/Manual, automatic defrost by burning offillumination Control/Value Storing/self Testing/parameter Locking.

Front Panel Operation



• Set temperature

- Press  button,the set temperature is displayed.
- Press  or  button to modify and store the displayed value,
- Press  button to exit the adjustment and display the cold-room temperature.

- If no more button is pressed within 10 seconds, the cold-room temperature will be displayed.

- Illumination: Press  button, it lights; Press  again ,it stops. Manual start/stop defrost: Press button and hold for 6 seconds to defrost or stop defrost.

- Refrigerant LED: During refrigeration,the LED is on; When the cold room temp.is constant, the LED is off, During the delay start, the LED flashes.

- Defrost LED: during defrosting, the LED is on; When it stops defrosting, the LED is off, During the delay display of defrost, the LED flashes.
- Digital controller reset
 - When display shows "Disorder", press  button for 2s until buzzer rings, quickly press "  " button for 6s until buzzer rings again, the display will flash for 3s and it restores factory setting.

Cautions:

- Shorten the door open time and reduce open frequency is good to keep a cold temperature inside the refrigerator.
- Never block the air suction and outlet. Keep air circulation and refrigeration capability.
- Do not make food congested as it will influence the cooling effect. Adjust the rack height for proper food storage.
- Cool the hot food down to room temperature before you put it into the refrigerator.
- Try to reduce the open times and keep refrigerator inside cold in case the power is cut off.

Use and Caution

- Only skilled service man is allowed to repair the damaged power cable with special tools.
- Never touch compressor to avoid from scald.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The operation manual are not suitable for the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- During normal operation, the emission noise level does not exceed 70dB(A)
- The maximum loading of the Shelf does not exceed 18kg.
- The climatic class of the appliance is 4, the Units are suggested to be used at 16C-32C ambient temperature.
- To avoid damages or other problems, this product can not be put or stored with any corrosive food.

Maintenance

Notice:

- Often keep the refrigerator clean and periodical maintenance is necessary.
- Always unplug the socket before maintenance.
- Never use damaged plug or loose socket to prevent from electric shock or short circuit.
- Never flush the refrigerator. Never use alkali detergent, soap, gasoline, acetone or brush.

Clean outside:

- Dip soft cloth in neutral detergent(table ware detergent) to clean the outside of the refrigerator and then wipe it

with dry soft cloth.

Clean inside:

- Take rack out for cleaning with water.

Shut down refrigerator for a long time:

- Take all food out and unplug the wall socket.
- Clean both inside and outside of the refrigerator thoroughly and open the door for sufficient dry.
- The glass breaks easily. Keep the glass far from children.
- Clean the condensate tray and wipe it dry.

Trouble Shooting

Trouble	Cause and Remedy
No refrigeration	Is the plug in socket well? Is the fuse broken? Is there no power?
Unsatisfactory refrigeration	Is it under the sunshine? Is there any heat source nearby? Is the surrounding ventilation bad? Does the door close well? Does door open for a long time? Is the door seal strip deformed or damaged? Is food congested or too much? Does food block the air suction or outlet? Regulate the temperature controller.
Much noise	The refrigerator does not level. The refrigerator contacts wall or other matter. There is loose part in refrigerator.
Contact local service agent for help if simple trouble shooting does not solve the problems.	

Note

 
Following phenomena are not troubles:

- The murmur of water is heard when the refrigerator is working. It is a normal phenomenon as the coolant is circulating in the system.
- In wet season, condensation might be found on the outside of the refrigerator. It is not a trouble, which is caused by high humidity. Simply use cloth to wipe it.


Principle of Refrigeration System

The principle of compression refrigeration consists of “compression”, “condensation”, “throttling” and “vaporization”. The compression is undertaken by compressor, the condensation is completed by condenser, The throttling is executed by capillary and the vaporization is implemented by evaporator. When the coolant is circulating in the

closed refrigeration system, the compressor sucks coolant, which has absorbed heat in evaporator, the coolant becomes a high pressure and high temperature gas. In condenser, it dissipates heat in air, while the coolant is re-liquefied and throttled in capillary and then enters into evaporator with low pressure. the liquefied coolant quickly boils and vaporizes into gas when the pressure suddenly drops. Meanwhile, it absorbs heat inside the refrigerator. And the compressor sucks the low pressure and low temperature gaseous coolant. It is circulating in this way up to realization of intended refrigeration.

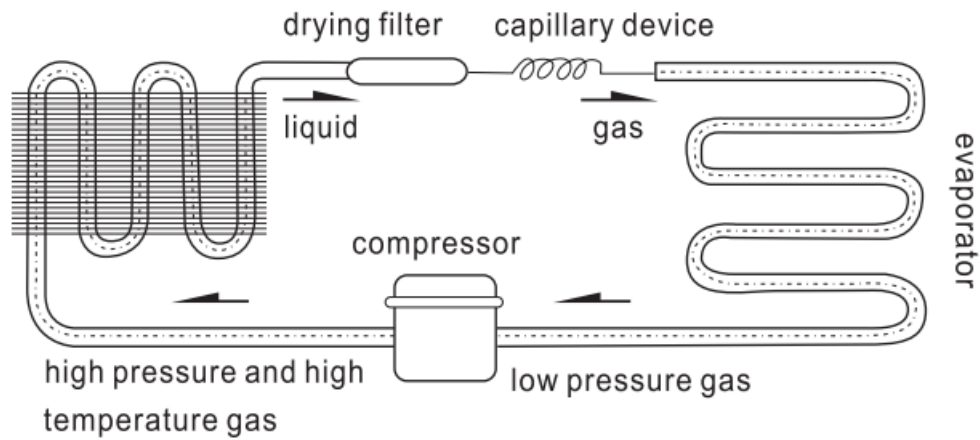

Circuit Diagram

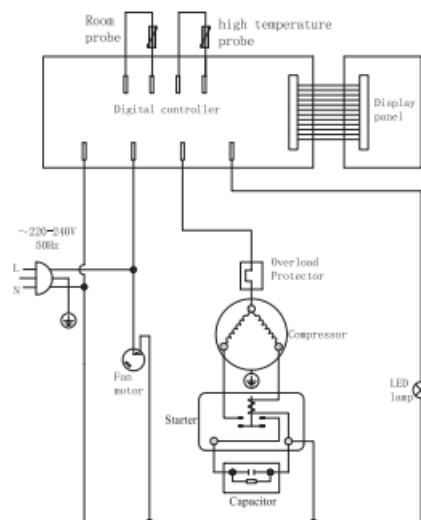 

Major Parameters

Parameter \ Model	CL-58	CL-68	CL-78	CL-98
Coolant and injection quantity(g)	R290(33)			
General Rated input power(W)	195			
Type of climate	4			
Refrigeration temperature(°C)	0-12			
Electric shock protection class	I			
Rated Current(A):	2			
Rated Frequency(Hz)	50			
Rated voltage(V)	220-240V~			
Total effective volume(L)	58	68	78	98
Net weight(kg)	30	31	32.5	33.5
Overall dimension (mm) (LxWxH)	425x380x838	425x380x913	425x380x988	425x380x1138

Parameter \ Model	CL-58	CL-68	CL-78	CL-98
Coolant and injection quantity(g)	R134a(95)			
General Rated input power(W)	180			
Type of climate	4			
Refrigeration temperature(°C)	0-12			
Electric shock protection class	I			
Rated Current(A):	1.5			
Rated Frequency(Hz)	50			
Rated voltage(V)	220-240V~			
Total effective volume(L)	58	68	78	98
Net weight(kg)	30	31	32.5	33.5
Overall dimension (mm) (LxWxH)	425x380x838	425x380x913	425x380x988	425x380x1138

 
Note

- The electric circuit diagram and parameters on the product name plate are final ones if they have been changed.
- The design might be improved without notice.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Meaning of crossed out wheeled dustbin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

Documents / Resources

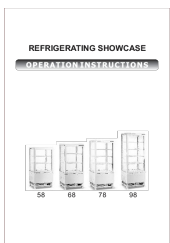

[Adexa CL78B Refrigerating Showcase](#) [pdf] Instruction Manual
CL78B Refrigerating Showcase, CL78B, Refrigerating Showcase, Showcase

References

- [X Adexa Direct | UK's Leading Supplier of Catering & Kitchen Equipment](#)

Manuals+.