



ADLER AD 1171 Retro Radio with Bluetooth User Manual

[Home](#) » [ADLER](#) » Adler AD 1171 Retro Radio with Bluetooth User Manual 

Contents

- [1 ADLER AD 1171 Retro Radio with Bluetooth](#)
- [2 RADIO OPERATION:](#)
- [3 SPECIFICATION:](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



ADLER AD 1171 Retro Radio with Bluetooth



SAFETY CONDITIONS IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

The warranty conditions are different, if the device is used for commercial purpose.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The applicable voltage is 230V, ~50Hz. For safety reasons it is not appropriate to connect multiple devices to one power outlet.
4. Please be cautious when using around children. Do not let the children to play with the product. Do not let children or people who do not know the device to use it without supervision.
5. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children, unless they are over 8 years of age and these activities are carried out under supervision.
6. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!!
7. Never put the power cable, the plug or the whole device into the water. Never expose the product to the atmospheric conditions such as direct sun light or rain, etc.. Never use the product in humid conditions.
8. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a professional service location to be replaced in order to avoid hazardous situations.
9. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product yourself because it can lead to electric shock. Always turn the damaged device to a professional service location in order to repair it. All the repairs can be

done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.

10. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
11. Never use the product close to combustibles.
12. Do not let cord hang over edge of counter or touch hot surfaces.
13. Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, turn it off from the network, unplug the power.
14. In order to provide additional protection, it is recommended to install residue current device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact a professional electrician in this matter.
15. Avoid getting the radio wet.
16. The radio may only be wiped with a dry cloth. Do not use water or cleaning fluids.
17. The radio should be kept in a dry room.

DESCRIPTION OF THE DEVICE

1. AM/FM frequency band
2. AM/FM pointer
3. TUNING knob
4. Built-in speaker
5. ON/OFF/ Volume control
6. LED Indicator
7. Adjustable tone control knob
8. AM/ FM /BT selector
9. Antenna
10. Power Cable

RADIO OPERATION:

1. Turn on the radiowith the ON/OFF contol (5), turn the AM/FM/BT (8) selector to select AM or FM.
2. Use the TUNING knob (3) turn band switch to choose the required station.
3. Adjust antenna position to get the best receiving effect.

BLUETOOTH FUNCTION DPERATION:

Turn on the radio, turn the AM/FM/BT selector(8) to BT, then turn on the Bluetooth of a cellphone or another mobile device with Bluetooth function, start to search a Bluetooth named "AD 1171" and pair with it, after successful pairing ,it will hear a chime sound and the LED Indicator will turn to blue. Now cellphone or other mobile device can play the music through Bluetooth on the radio.

tone CONTROL:

Turn the Tone control knob (7) right increase the Treble pitch and Turn the left increase the Bass pitch.

SPECIFICATION:


- Wave range: 87MHz – 108 MHz,
- AM : 522- 1629KHz

- Input voltage: 230V~50Hz
- Bluetooth: V 4.1
- Nom: 4,8W
- RMS: 10W

Adler Sp. z o.o., Ordona 2a, 01-237 Warsaw, Poland hereby declares that the AD 1171 radio complies with Directive 2014/53 / EU. The full text of the EU declaration of conformity is available at the following internet address: https://adler.com.pl/dane/CE/ad_1171.pdf

To protect your environment: please separate carton boxes and plastic bags and dispose them in corresponding waste bins. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may effect the environment. Do not dispose this appliance in the common waste bin.

Documents / Resources

	<p>ADLER AD 1171 Retro Radio with Bluetooth [pdf] User Manual AD 1171, Retro Radio with Bluetooth</p>
---	---

References

-  [AdlerEurope](#)
-  [Index of /dane/deklaracje/CE](#)
-  [Index of /dane/deklaracje/CE](#)