

ADLER
EUROPE

AD 1906
Clock Radio



ADLER AD 1906 Clock Radio User Manual

[Home](#) » [ADLER](#) » ADLER AD 1906 Clock Radio User Manual 

Contents

- [1 ADLER AD 1906 Clock Radio](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 INSTRUCTION MANUAL](#)
- [4 Battery information](#)
 - [4.1 Charging the batteries](#)
- [5 Radio \(AM/FM\)](#)
- [6 SPECIFICATIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

ADLER
EUROPE

ADLER AD 1906 Clock Radio




IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE Warranty conditions are different if the device is used for commercial purposes.

1. Before using the product, please carefully read and follow the following instructions each time. The manufacturer is not responsible for any damage caused by improper use.
2. The product can only be used indoors. Do not use the product for purposes incompatible with its use.
3. Be careful when using near children. Do not allow children to play with the product. Do not allow children or anyone unfamiliar with the device to use it without supervision.
4. **WARNING:** This appliance may be used by children over 8 years of age and persons with limited physical, sensory or mental abilities, or persons without experience or knowledge with the appliance, only under the supervision of a person responsible for their safety, or if they have been instructed in the safe use of the appliance and are aware of the hazards associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children unless they are at least 8 years old and these activities are carried out under supervision.
5. Never drop the device into water. Never expose the product to weather conditions such as direct sunlight, rain, etc. Never use the product in wet conditions.
6. Never use the product if it has been dropped, otherwise damaged, or if it does not work properly. Do not attempt to repair a damaged product yourself, as this may result in electric shock. Always return a damaged device to a professional service center for repair. Any repairs should only be performed by authorized service personnel. Improperly performed repairs may cause dangerous situations for the user.
7. Never place the product on or near hot or warm surfaces or kitchen appliances, such as an electric oven or gas burner.
8. Never use the product near flammable materials.
9. Clean the radio only with a dry cloth. Do not use water or cleaning fluids.

INSTRUCTION MANUAL

| | | |
|-----------------------|--------------------------------------|--------------------|
| 1. PROG / SET CLOCK | 2. SUSPENSION | 3. POPRZEDNI9 |
| 4. DALEJ: | 5. AM/FM / ALARM | 6. POWER ON/OFF |
| 7. ANTENNA | 8. LCD DISPLAY | 9. VOLUME + |
| 10. SELECT | 11. CLOCKWISE (▷ TUNING +) | 12. VOLUME – |
| 13. LEFT (◁ TUNING –) | 14. SPEAKER | 15. HEADPHONE JACK |
| 16. DC CHARGING PORT | 17. BATTERY COMPARTMENT COVER (REAR) | |

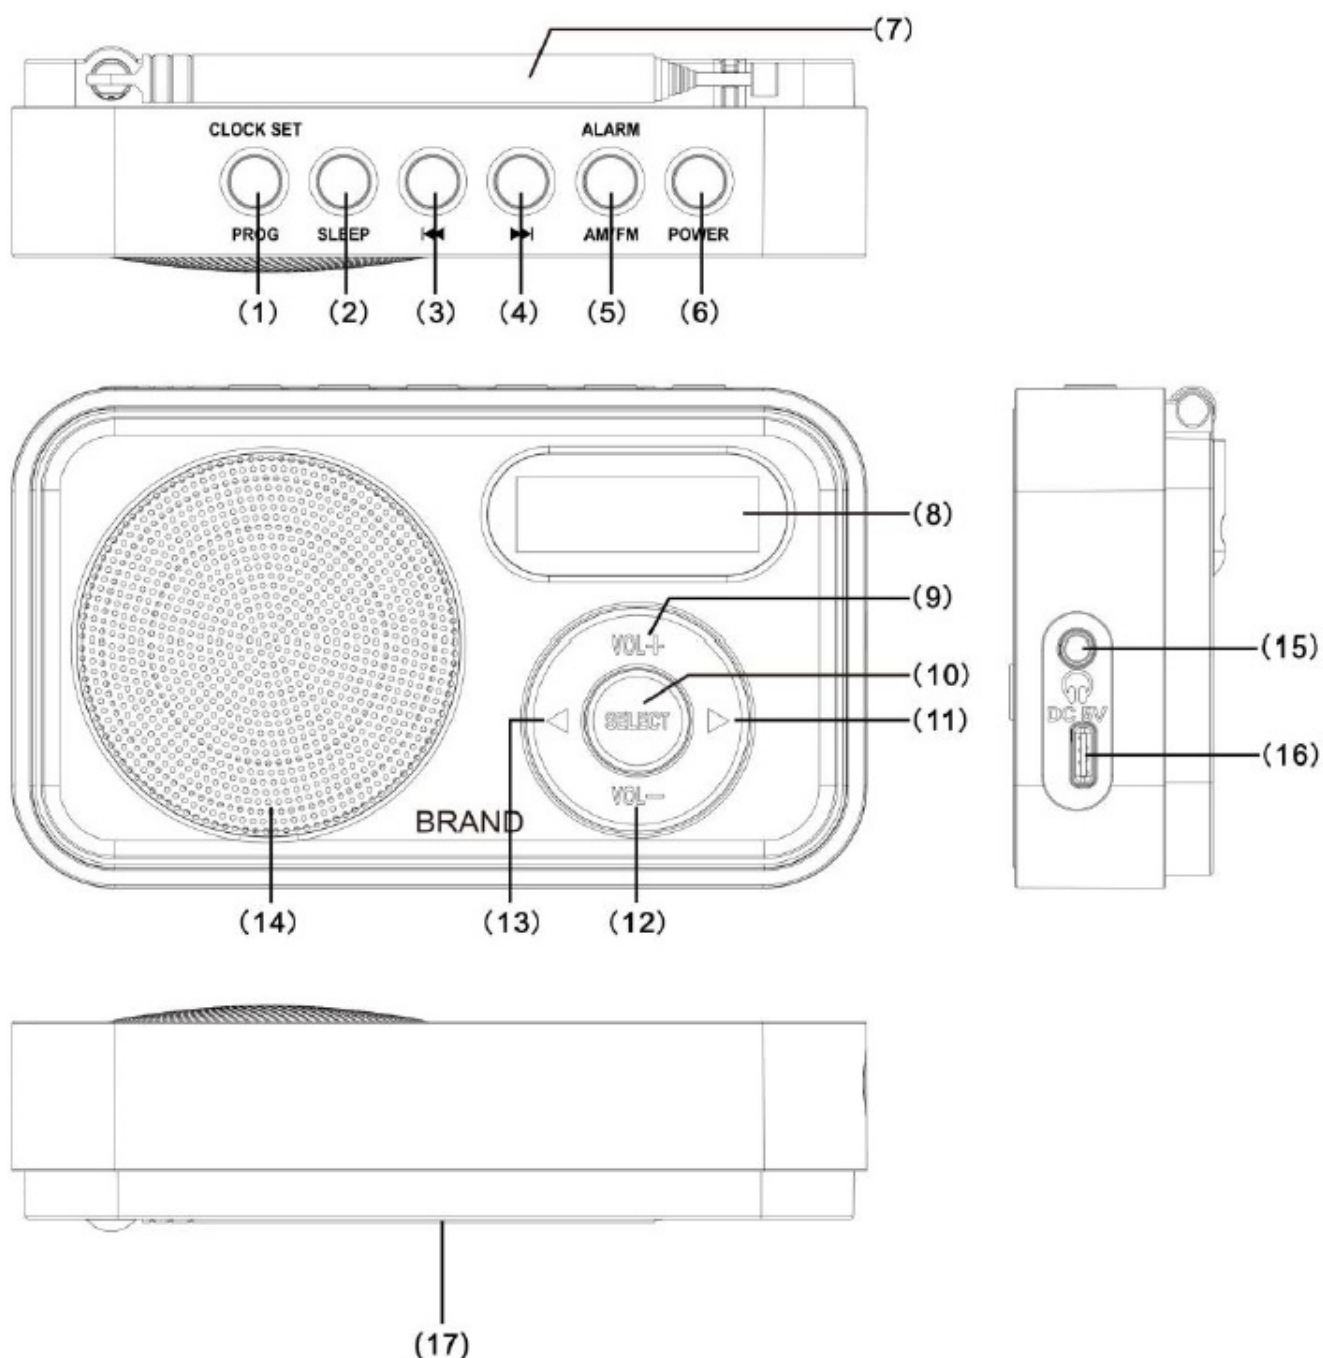

Battery power supply

Open the battery compartment (17) and insert one 3.7V lithium-ion battery or 3 AAA cells into the compartment as indicated.

Battery information

Important battery safety information

Improper use of the battery can cause electrolyte leakage, overheating or explosion. Released electrolyte is a source of corrosion and can be toxic. It can cause skin and eye burns; it is also harmful if swallowed.

To reduce the risk of injury:

- In the event of a battery leak, avoid contact of the leaking electrolyte with skin or clothing.
- If electrolyte from the battery comes into contact with skin or clothing, immediately flush the area with water.
- Remove old, depleted or used batteries from the device and dispose of or recycle them in accordance with national regulations for waste disposal.
- Charge only with the charger supplied with the product or one suitable for the type of battery.
- Do not heat, open, puncture, destroy or throw batteries into fire.
- Do not touch the battery terminals with metal objects. These items may become hot and cause burns.
- CHEMICAL COMPOSITION of the battery or rechargeable battery used: (Li-Ion) lithium-ion.

Charging the batteries

Insert the rechargeable battery into the device.

Connect the device by inserting the charging cable into the DC 5V IN socket (16) and the other end into the USB interface or USB charger. The charging time is about 2 hours. The charging indicator will flash while the battery is charging.

Radio (AM/FM)

1. Press ON/STAND BY (6) once to turn on the unit.
2. Press AM/FM (5) to select the AM or FM waveband.
3. The display shows the details of the radio station in radio mode.
4. Select your station with NEXT (4) or PREVIOUS (3).
5. Adjust the sound with VOLUME + (9) or VOLUME – (12).
6. To turn off the radio, press ON/STAND BY (6) once.

The unit has snooze, alarm, automatic station search, station memory functions. To learn more about these functions, read the full instructions in the link below: https://www.adler.com.pl/dane/manuals/ad_1906.pdf

SPECIFICATIONS

- **Frequency range:** AM: 522-1620 KHz / FM: 87.5-108 MHz
- **Speaker:** 2-inch 8 ohm dynamic speaker
- **Output power:** 0.8 watts RMS
- **Power source:** DC 4.5 V (3 x 1.5 V “AAA”)

Adler Sp. z o.o., Ordona 2a, 01-237 Warsaw, Poland hereby declares that the AD1907 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at:

https://www.adler.com.pl/dane/deklaracje/CE/ad_1906.pdf



For the sake of the environment. Cardboard packaging and polyethylene (PE) bags should be disposed of in the appropriate containers for separate collection of municipal waste according to their description. If there are batteries in the device, remove them and separately return them to the collection and storage facility. Return the used device to a suitable collection and storage facility, as the hazardous substances in it may pose a threat to health and the environment. The marking on the product indicates that the device should not be disposed of in the container with municipal waste.


Waste electrical equipment is waste that contains substances harmful to humans, animals and the environment. These substances can lead to contamination of the soil, water or air, and through this they can enter the human body and lead to numerous health ailments, such as vision, hearing, speech disorders, they can also damage the kidneys, liver and heart, and cause skin diseases. Harmful substances can also have adverse effects on the respiratory and reproductive systems and lead to cancerous changes. Consumption of plants growing on the complained of soils, and products made from them may risk the above-mentioned health effects. Do not dispose of the device in the municipal waste container!!!

Service If you wish to purchase spare parts or report any complaints, please contact directly with the seller who issued the receipt.

AFTER SALE SERVICE NOTICE

If you want to buy spare parts or make any complaints, please contact the seller who issued the receipt directly.

Documents / Resources

| | |
|--|---|
|  | <p>ADLER AD 1906 Clock Radio [pdf] User Manual 1906, AD 1906 Clock Radio, AD 1906, Clock Radio, Radio</p> |
|--|---|

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.