



ADLER AD 3039 Nut Maker User Manual

[Home](#) » [ADLER](#) » ADLER AD 3039 Nut Maker User Manual 



**AD 3039
User Manual**




SAFETY CONDITIONS IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

The warranty conditions are different if the device is used for commercial purposes.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The applicable voltage is 220-240V, ~50/60Hz. For safety reasons, it is not appropriate to connect multiple devices to one power outlet.
4. Please be cautious when using children. Do not let the children play with the product. Do not let children or people who do not know the device use it without supervision.
5. **WARNING: This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children unless they are over 8 years of age and these activities are carried out under supervision.**
6. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!!
7. Never put the power cable, the plug, or the whole device into the water. Never expose the product to atmospheric conditions such as direct sunlight or rain, etc. Never use the product in humid conditions.
8. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a

professional service location to be replaced in order to avoid hazardous situations.

9. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defective product yourself because it can lead to electric shock. Always turn the damaged device to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
10. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
11. Never use the product close to combustibles.
12. Do not let the cord hang over the edge of a counter or touch hot surfaces.
13. Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, turn it off from the network, and unplug the power.
14. In order to provide additional protection, it is recommended to install a residue current device (RCD) in the power circuit, with a residual current rating of not more than 30 mA. Contact a professional electrician in this matter.
15.  Accessible surface temperatures can be high when the appliance is operating. Never touch the hot surfaces of the appliance.
16. Due to the high temperature, you should be careful when removing the prepared dishes, removing hot grease or other hot liquids. Be careful, there can be a hot steam presence during the use of the appliance.
17. This electrical appliance contains a heating function. Surfaces, also different than functional surfaces, can develop high temperatures. The equipment shall be touched only at intended handles and gripping surfaces and use heat protection like gloves or similar. During or after use, please do not touch the baking tray or the hot area on the shell before the temperature goes down.
18. The device must cool down before you store it.
19. Do not place products made of cardboard, paper, plastic materials, or other flammable or meltable objects in the device.
20. The device is not designed to work with external schedulers or separate remote control systems.
21. Do not insert food portions that use whole oven volume, as it may cause fire and destruction of the device.
22. The power cord may not be placed above the device and it may not touch or be located near hot surfaces. Do not place the device under a mains socket.
23. Do not move or carry the device during operation. After the operation, it can be moved only if it had enough time for cooling down.
24. Open the device by holding the handle. Before that, release the buckle (3).

Contents

[1 DESCRIPTION OF
DEVICE](#)

[2 BEFORE FIRST USE](#)

[3 USING DEVICE](#)

[4 CLEANING DEVICE](#)

[5 Documents / Resources](#)

[5.1 References](#)

[6 Related Posts](#)

DESCRIPTION OF DEVICE

1. lid
2. power indicator/ready indicator
3. buckle

BEFORE FIRST USE

1. Remove all cartons and labels from the housing and from the inside (between hotplates).
2. Wipe hotplates first with wet and next with a dry damp cloth.
3. Apply a bit of edible oil or other plant fat to the trays, close, and plugin, the power indicator lamp will light (2).
4. Keep the appliance running for a few minutes to get rid of the manufacturing odor. The device could emit some smoke during this time.
That's normal.
5. A clean unit according to chapter "Cleaning".

USING DEVICE

Prepare needed products.

1. Connect the closed device to the socket with grounding – the power indicator lamp will light (2).
2. Wait about 10 minutes. After this time device should reach the required temperature-ready indicator lamp will off (2).
3. Fully open the device. Place the previously prepared product on the bottom baking tray.
4. Close the device. Snap the buckle (3). Do not close the lid (1) by force.
5. During operation the ready indicator lamp (2) will be turned on and off, that's mean that thermostat keeps the appropriate temperature of the hotplates.
6. Operation time is approximately 1 to 2 minutes and depends on the type of used ingredients and taste preference.
CAUTION: During operation, the cover of the device there can emit hot steam.
7. Fully open the lid (1) and remove the finished products using only a wooden or plastic spatula.
ATTENTION! Do not use metal utensils or sharp kitchen tools because they can damage the special non-stick coating heating plates.
8. Before cooking the next batch of products, close the device to the heating plate gets hot to the proper temperature.
9. When finished baking, remove the plug from the outlet and allow the unit to cool down.

CLEANING DEVICE

1. Unplug the electric plug after use and wait for it to cool down before starting cleaning.
2. Wipe baking surfaces first with a wet and next with a dry damp cloth (you can also use a paper towel).
3. Hardest to clean dough rests grease with oil and leaves this like that. After a few minutes remove this rest with a wood paddle gently.
4. Please do not use any metal or a hard abrasive tool to wipe the interior/exterior of the machine body to avoid


- scraping the surface of the tray.
5. Do not immerse in water.

TECHNICAL DATA:
Power supply: 220-240V ~50/60Hz
Power Nom.: 1400W
Power MAX: 1600W



■ To protect your environment: please separate carton boxes and plastic bags and dispose of them in corresponding waste bins.
The used appliance should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. The electrical appliance must be returned in order to reduce its reuse and utilization. If the device contains batteries they should be delivered to dedicated points separately.

Documents / Resources

	<p>ADLER AD 3039 Nut Maker [pdf] User Manual AD 3039, Nut Maker, AD 3039 Nut Maker</p>
--	--

References

-  [AdlerEurope](#)