

# ADLER AD 3075 Built In Toaster User Manual

## Contents

- 1 ADLER AD 3075 Built In Toaster
- 2 NOOR ULLAH post
  - 2.1 DESCRIPTION OF DEVICE
  - 2.2 BEFORE FIRST USE
  - 2.3 USING DEVICE
  - 2.4 CLEANING DEVICE
  - 2.5 TECHNICAL DATA
  - 2.6 Documents / Resources
    - 2.6.1 References
  - 2.7 Related Posts

## ADLER AD 3075 Built In Toaster



---

**NOOR ULLAH post**

**SAFETY CONDITIONS IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

The warranty conditions are different, if the device is used for commercial purpose.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The device should only be connected to a grounded socket 220-240V ~50/60Hz. For safety reasons it is not appropriate to connect multiple devices to one power outlet.
4. Please be cautious when using around children. Do not let the children to play with the product. Do not let children or people who do not know the device to use it without supervision.
5. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children, unless they are over 8 years of age and these activities are carried out under supervision.
6. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!! 3. The device should only be connected to a grounded socket 220-240V ~50/60Hz. For safety reasons it is not appropriate to connect multiple devices to one power outlet. 1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
7. Never put the power cable, the plug or the whole device into the water. Never expose the product to the atmospheric conditions such as direct sun light or rain, etc.. Never use the product in humid conditions.
8. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a professional service location to be replaced in order to avoid hazardous situations.
9. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product yourself because it can lead to electric shock. Always turn the damaged device to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
10. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
11. Never use the product close to combustibles.
12. Do not let cord hang over edge of counter or touch hot surfaces.
13. Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, turn it off from the network, unplug the power.
14. In order to provide additional protection, it is recommended to install residual current device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact professional electrician in this matter.
15. Accessible surface temperatures can be high when the appliance is operating.  
Never touch the hot surfaces of the appliance.
16. Due to the high temperature you should be careful when removing the prepared dishes, removing hot grease or

other hot liquids. Be careful, there can be hot steam presence during use of the appliance.

17. This electrical appliance contains a heating function. Surfaces, also different than the functional surfaces, can develop high temperatures. The equipment shall be touch only at intended handles and gripping surfaces, and use heat protection like gloves or similar.

During or after use, please do not touch the baking tray or the hot area on the shell before the temperature goes down.

18. The device must cool down before you store it.
19. Do not place products made of cardboard, paper, plastic materials or other flammable or melt able objects in the device.
20. The device is not designed to work with external schedulers or separate remote control system.
21. Do not insert food portions that use whole oven volume, as it may cause fire and destruction of the device.
22. The power cord may not be placed above the device and it may not touch or be located near hot surfaces. Do not place the device under a mains socket.
23. Do not move or carry the device during operation. After the operation it can be moved only if it had enough time for cooling down.
24. Open device by holding the handle.
25. Before and during use, make sure that the power cord is not stretched over an open flame or other heat source or sharp edges that may damage the insulation of the cable.
26. Before first use, remove all packaging components. Attention! In the case of a casing with metal parts, on these elements a slightly visible protective foil can be stretched, which should also be removed.
27. NEVER cover the device during operation or when it does not cool down completely, remember that the heating elements of the device take time to cool down completely.
28. SAVE CAREFULLY if you use the device on surfaces sensitive to high temperatures. It is recommended then to use insulating washers
29. The device can not be used with external time switches or other separate remote control systems

## **DESCRIPTION OF DEVICE**

1. lid
2. power indicator
3. ready indicator
4. handle

## **BEFORE FIRST USE**

1. Remove all cartons and labels from housing and from inside (between heating plates).
2. Wipe heating plates first with wet and next with dry cloth.
3. Apply a bit of edible oil or other plant fat to the trays, closed device to the socket with grounding, power and ready indicator will light (2) (3).
4. Keep the appliance running for few minutes to get ride of manufacturing odour. Device could emit some smoke during this time. That's normal.
5. Clean unit according chapter "Cleaning".

## **USING DEVICE**

## Prepare needed products.

1. Connect the closed device to the socket with grounding-power and ready indicator will light (2)(3).
2. Wait about 10 minutes. After this time device should reach required temperature – ready indicator lamp will off (3).
3. Fully open the device. Place the previously prepared product on the bottom heating plate
4. Close the device. Do not close the lid (1) by force.
5. During operation the ready indicator lamp (3) will be turning on and off, that's mean that thermostat keep appropriate temperature of the baking trays.
6. Operation time is approximately 5 to 15 minutes and depends on type of used ingredients and taste preference.  
**CAUTION:** During operation from the cover of the device there can emit hot steam.
7. Fully open the lid (1) and remove the finished products using only wooden or plastic spatula.  
**ATTENTION!** Do not use metal utensils or sharp kitchen tools because they can damage the special non-stick coating heating plates
8. Before cooking the next batch of products, close the device to the heating plates gets hot to the proper temperature.
9. When finished baking, remove the plug from the outlet and allow the unit to cool down.

## CLEANING DEVICE

1. Unplug the electric plug after use and wait for it to cool down before start cleaning.
2. Wipe heating surfaces first with wet and next with dry damp cloth (you can also use paper towel).
3. Hardest to clean dough rests grease with oil and leave this like that. After few minutes remove this rests with wood paddle gently.
4. Please do not use any metal nor hard abrasive tool to wipe the interior/exterior of the machine body to avoid scraping the surface of the tray.
5. Do not immerse in water.

## TECHNICAL DATA

**Power supply:** 220-240V ~50/60Hz

**Power Nom.:** 1000W


**Max power:** 1500W



■ To protect your environment: please separate carton boxes and plastic PE bags and dispose them in corresponding waste bins. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may effect the environment. Electrical appliance must be returned in order to reduce its reuse and utilization. If the device contains batteries they should be delivered to dedicated points separately.

- COFFEE GRINDER AD 4446
- TOASTER 2 SLICE AD 3214

Documents / Resources



ADLER  
EUROPE

AD 3075

1. Sicherheitshinweise	2. Bedienungsanleitung
3. Technische Daten	4. Garantie
5. Zubehör	6. Ersatzteile
7. Service	8. Kontakt
9. Sonstiges	10. Impressum
11. Rückmeldung	12. Sonstiges
13. Sonstiges	14. Sonstiges
15. Sonstiges	16. Sonstiges
17. Sonstiges	18. Sonstiges
19. Sonstiges	20. Sonstiges
21. Sonstiges	22. Sonstiges
23. Sonstiges	24. Sonstiges
25. Sonstiges	26. Sonstiges
27. Sonstiges	28. Sonstiges
29. Sonstiges	30. Sonstiges
31. Sonstiges	32. Sonstiges
33. Sonstiges	34. Sonstiges
35. Sonstiges	36. Sonstiges
37. Sonstiges	38. Sonstiges
39. Sonstiges	40. Sonstiges
41. Sonstiges	42. Sonstiges
43. Sonstiges	44. Sonstiges
45. Sonstiges	46. Sonstiges
47. Sonstiges	48. Sonstiges
49. Sonstiges	50. Sonstiges
51. Sonstiges	52. Sonstiges
53. Sonstiges	54. Sonstiges
55. Sonstiges	56. Sonstiges
57. Sonstiges	58. Sonstiges
59. Sonstiges	60. Sonstiges
61. Sonstiges	62. Sonstiges
63. Sonstiges	64. Sonstiges
65. Sonstiges	66. Sonstiges
67. Sonstiges	68. Sonstiges
69. Sonstiges	70. Sonstiges
71. Sonstiges	72. Sonstiges
73. Sonstiges	74. Sonstiges
75. Sonstiges	76. Sonstiges
77. Sonstiges	78. Sonstiges
79. Sonstiges	80. Sonstiges
81. Sonstiges	82. Sonstiges
83. Sonstiges	84. Sonstiges
85. Sonstiges	86. Sonstiges
87. Sonstiges	88. Sonstiges
89. Sonstiges	90. Sonstiges
91. Sonstiges	92. Sonstiges
93. Sonstiges	94. Sonstiges
95. Sonstiges	96. Sonstiges
97. Sonstiges	98. Sonstiges
99. Sonstiges	100. Sonstiges

[ADLER AD 3075 Built In Toaster](#) [pdf] User Manual

AD 3075 Built In Toaster, AD 3075, Built In Toaster, Toaster

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.