




ADLER AD 3161 0.1 Gram Precision Scale User Manual

[Home](#) » [ADLER](#) » [ADLER AD 3161 0.1 Gram Precision Scale User Manual](#) 

 
 
ADLER AD 3161 0.1 Gram Precision Scale User Manual



Contents

- [1 Product Overview](#)
- [2 SAFETY IMPORTANT INSTRUCTIONS](#)
- [3 DEVICE DESCRIPTION](#)
- [4 TECHNICAL DATA](#)
- [5 Company Product](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)


Product Overview

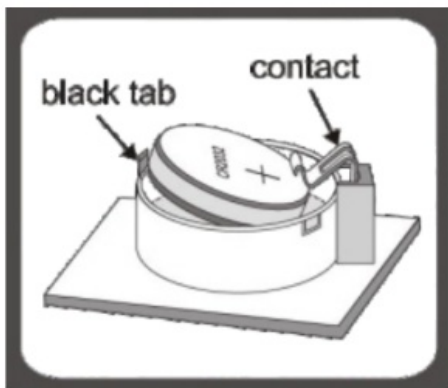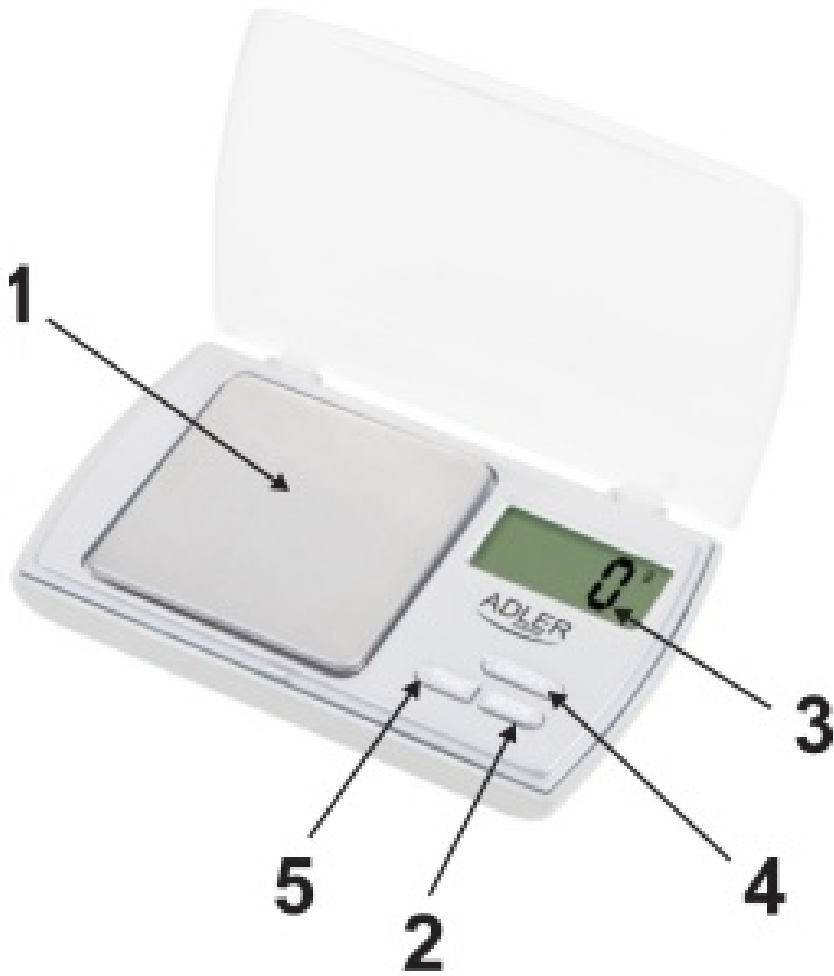

SAFETY IMPORTANT INSTRUCTIONS

SAFETY CONDITIONS. IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

The warranty conditions are different, if the device is used for commercial purpose.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. . Please be cautious when using around children. Do not let the children to play with the product. Do not let children or people who do not know the device to use it without supervision.
4. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children, unless they are over 8 years of age and these activities are carried out under supervision.
5. . Never put whole device into the water. Never expose the product to the atmospheric conditions such as direct sun light or rain, etc.. Never use the product in humid conditions.
6. Never use the product if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product yourself because it can lead to electric shock. Damaged device always turn to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
7. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
8. Never use the product close to combustibles.
9.  Never use this device close to water, e.g.: Under shower, in bathtub or above sink filled with water.
10. Do not touch the device with wet hands.
11. The batteries may leak if they are flat or were not used for an extended period of time. To protect the device and your health, replace them regularly and avoid skin contact with leaking batteries.
12. The device should be turned off each time it is put aside.
13. Weigh the food on trays or plates

DEVICE DESCRIPTION

1. Scale Surface
2. MODE button
3. Display
4. ON/OFF
5. TARE button

REPLACING THE BATTERY

Remove the lid of the battery compartment at the bottom of the scale. Remove the old battery. Insert the new battery of the right type. Close the lid of the battery compartment.

BEFORE FIRST USE

Open the battery compartment. Remove the insulation foil from the battery. Close the lid of the battery compartment.

SELECTING UNITS OF MEASURE

Press the ON/OFF button (4) to turn on the scale. Press the MODE button (2) to change the units of measure. The unit will be visible on the display. Switch within different units: g/ct/gn/oz/ozt/dwt.

WEIGHING

Press the ON/OFF button (4) to turn on the scale. Wait until the scale displays the 0.0 value and the zero symbol. Place the object to be weighed on the surface of the scale (1). Wait a moment for the result to stabilize.

Tare function: Place the packaging/utensil on the surface of the scale (1). press the TARE (5) button and Wait 3 seconds.

CLEANING AND MAINTENANCE

Gently wipe the scale with a dry or slightly damp cloth.

MESSAGES

- excessive scale load
- low battery

TECHNICAL DATA

- Capacity: 0,5 kg / 1,1 lb
- Accuracy: d= 0.1g , d=0.1ct, d=0.1gn, d=0.01oz, d=0.01ozt, d=0.1dw
- Power: 2 x 3V battery (CR2032)



To protect your environment: please separate carton boxes and plastic bags and dispose them in corresponding waste bins. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may effect the environment. Do not dispose this appliance in the common waste bin.

Company Product

- **Electric Kettle AD 02**



- Espresso Machine AD 4404



- Standing Fan AD 7305



- Sandwich maker AD 3015



-
- Oil Heater AD 7808



 
- Hair Clipper AD 2823



- Hair Clipper AD 2825



- Dripp Coffee Maker AD 4407

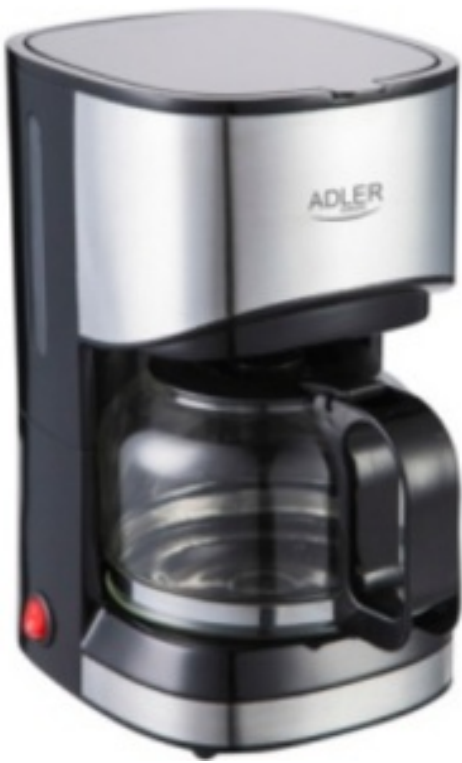

• Kettle AD 1286



• Hair Dryer AD 2252



- Hair Clipper AD 2832



- Hair Shaver AD 2932



- Kitchen Scale AD 8121



- **Nut Cookie Maker AD 3039**



- **Blender AD 4076**





Documents / Resources

A small thumbnail image showing the Adler AD 3161 precision scale and a portion of its user manual. The manual cover features the Adler logo and the model number "AD 3161".	<p>ADLER AD 3161 0.1 Gram Precision Scale [pdf] User Manual AD 3161, 0.1 Gram Precision Scale</p>
--	---

[Manuals+](#)