



ADLER AD 3176 Precision Scale User Manual

[Home](#) » [ADLER](#) » [ADLER AD 3176 Precision Scale User Manual](#) 

Contents

- [1 ADLER AD 3176 Precision Scale](#)
- [2 LCD icon/illustration](#)
- [3 Safety Instruction](#)
- [4 DEVICE DESCRIPTION](#)
- [5 BEFORE FIRST USE](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 TECHNICAL DATA](#)
- [8 Disposal](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



ADLER AD 3176 Precision Scale



LCD icon/illustration

Negative value



Safety Instruction

SAFETY CONDITIONS. IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE The warranty conditions are different if the device is used for commercial purposes.


1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. Please be cautious when using children. Do not let the children play with the product. Do not let children or

people who do not know the device to use it without supervision.

4. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children unless they are over 8 years of age and these activities are carried out under supervision.
5. Never put the whole device into the water. Never expose the product to atmospheric conditions such as direct sunlight or rain, etc. Never use the product in humid conditions.
6. Never use the product if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defective product yourself because it can lead to electric shock. The damaged device is always turned to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
7. Never put the product on or close to hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
8. Never use the product close to combustibles.
9. Never use this device close to water, e.g.: Under the shower, in the bathtub, or above a sink filled with water.
10. Do not touch the device with wet hands.
11. The batteries may leak if they are flat or were not used for an extended period of time. To protect the device and your health, replace them regularly and avoid skin contact with leaking batteries.
12. The device should be turned off each time it is put aside.
13. Weigh the food on trays or plates.
14. The device is not intended for laboratory or medical use. For your convenience, you can also download the manual on: www.AdlerEurope.EU

DEVICE DESCRIPTION

1. Scale surface
2. MODE button
3. LCD display
4. ON/OFF button
5. TARE button

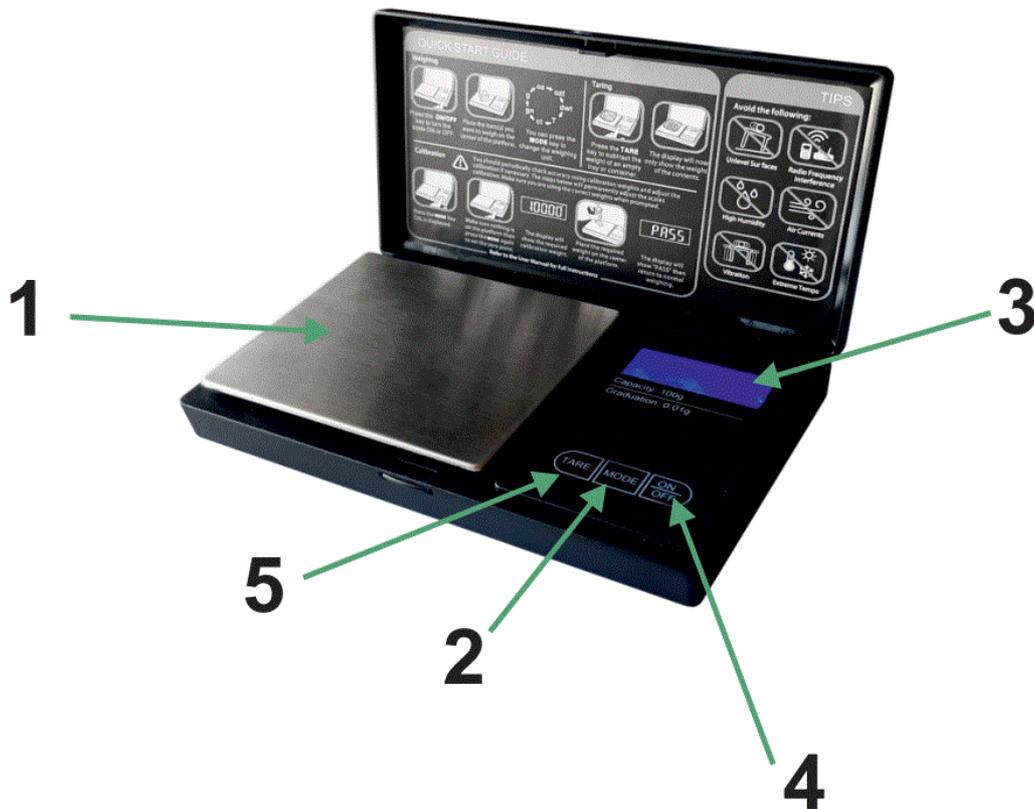

BEFORE FIRST USE

Open the battery compartment. Insert the battery of the right type. Close the lid of the battery compartment. You can hide spare batteries in the battery second compartment.

SELECTING UNITS OF MEASURE

Press the ON/OFF button (4) to turn on the scale. Press the MODE button (2) to change the units of measure. The unit will be visible on the display.

WEIGHING

Place the scale on a flat and solid surface. Press the ON/OFF button (4) to turn on the scale. Wait until the scale LCD display (3) show the 0.00 value. Place the object to be weighed in the center on the surface of the scale (1). Wait a moment for the result to stabilize.

TARE FUNCTION


You can weigh different loads without removing them from the scale. Wait until the display shows a 0.00 value. Put the first load on the scale, and wait for the weight reading. Press the TARE button (5) to reset the reading to 0.00 before adding the next load. Put the next load on the scale.

CALIBRATION


Press the ON/OFF button (4) to turn on the scale. Wait until the scale displays a 0.00 value. Press and hold the MODE button (2) for 3 seconds. The LCD display (3) will show a "CAL" message. Press MODE button (2) once again. LCD display (3) will show the required calibration weight. Place required calibration weight on the platform. The display (3) will show a "PASS" message and will return to weighing mode. Take off the calibration weight from the platform and switch off the scale by pressing the ON/OFF (4) button. Calibration is finished.

REPLACING THE BATTERY

Remove the lid of the battery compartment at the bottom of the scale. Remove the old battery. Insert the new battery of the right type. Close the lid of the battery compartment.

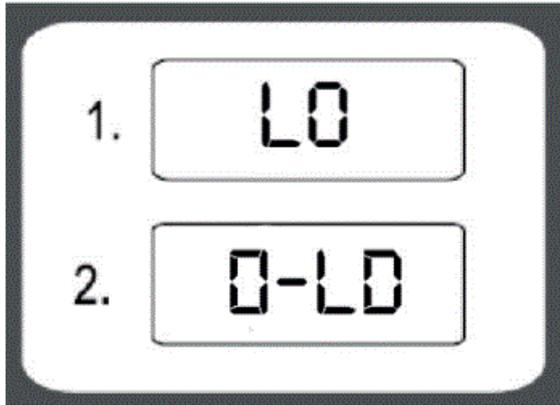

2x AAA

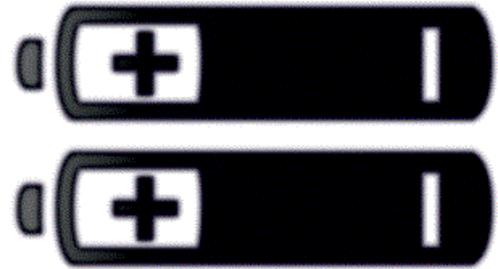

CLEANING AND MAINTENANCE

Gently wipe the scale with a dry or slightly damp cloth.

MESSAGES

- a – excessive scale load
- b – low battery

TECHNICAL DATA

- **Auto shut off:** 3 min
- **Capacity:** 100g
- **Accuracy:** $d= 0.01g$
- **Power:** 2 x 1.5V battery (AAA)

Disposal

To protect your environment: please separate carton boxes and plastic bags and dispose of them in corresponding waste bins. Used appliances should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. Do not dispose of this appliance in the common waste bin.

Documents / Resources

| | |
|---|--|
|  | <p>ADLER AD 3176 Precision Scale [pdf] User Manual AD 3176, Precision Scale, AD 3176 Precision Scale</p> |
|---|--|

References

-  [AdlerEurope](#)
-  [AdlerEurope](#)

