




## ADLER AD 9616 Lint Remover User Manual

[Home](#) » [ADLER](#) » ADLER AD 9616 Lint Remover User Manual 



user manual



**GENERAL SAFETY CONDITIONS. IMPORTANT INSTRUCTIONS FOR SAFE USE READ CAREFULLY AND SAVE FOR FUTURE**

1. Before using the device, read the instruction manual and follow the instructions contained in it. The manufacturer is not liable for damages caused by using the device contrary to its intended purpose or improper operation.
2. The device is for home use only. Do not use for other purposes that are not for its intended purpose.
3. Use extreme caution when using the device when children are nearby. Do not allow children to play with the device, do not allow children or people unfamiliar with the device to use it.
4. **WARNING:** This equipment may be used by children over 8 years of age and people with limited physical, sensory or mental ability, or people who have no experience or knowledge of the equipment, if this is done under the supervision of a person responsible for their safety or have been granted them information on the safe use of the device and are aware of the dangers of using it. Children should not play with the equipment. Cleaning and maintenance of the device should not be performed by children, unless they are over 8 years old and these activities are carried out under supervision.

5. Do not immerse the device in water or any other liquid. Do not expose the device to atmospheric conditions (rain, sun, etc.) or use in conditions of high humidity (bathrooms, damp mobile homes).
6. Do not use the device if it has been dropped or damaged in any other way, or if it operates incorrectly. Do not repair the device yourself, as there is a risk of electric shock. Take the damaged device to an appropriate service center for checking or repair. All repairs may only be carried out by authorized service points. Incorrectly performed repairs can cause serious danger for the user.
7. The appliance should be placed on a cool, even surface, away from heating kitchen appliances such as: electric stove, gas burner, etc.
8. Do not use the device near flammable materials.
9. Do not leave the device switched on or the adapter unattended when unattended.
10. Batteries may leak if they are empty or if they are not used for a long time. To protect you and the device, remove batteries in a timely manner and avoid contact with the skin when handling leaking batteries.

## Contents

[1 SPECIFIC SAFETY CONDITIONS](#)

[2 Documents / Resources](#)

[3 Related Posts](#)

## SPECIFIC SAFETY CONDITIONS

1. ATTENTION !!! The blades are very sharp !!!
2. Be careful when opening the tank so as not to damage it.
3. Do not bend or deform the perforated blade cover.
4. Take special care when pulling out the blades.
5. Wipe the shaver housing with a dry cloth.
6. Empty the fluff container when it is 3/4 full.
7. Sediment on the inside and outside of the blade guard reduces shaving performance. Clean the blade guard regularly with a brush.
8. Straighten the fabric surface before using the shaver.
9. Do not dent the shaver into the fabric as this may damage the fabric.
10. Do not use the shaver on clothing that you are wearing, always take it off. It may cause injury to the body or shaver.
11. Always turn off the shaver before connecting the device to the power supply or inserting the battery.
12. Be careful not to use the shaver on buttons, zippers, applications, patches, stickers, labels, abrasions, seams, and joining elements
13. Do not use the shaver for clothes made of silk, wool, or linen. This can damage the fabrics and destroy the shaver blades.



14. Do not use the device near water, e.g. in the shower, in a bathtub, or above the sink with water.
15. When the appliance is used in the bathroom, remove the plug from the socket after use, as the proximity of water is a hazard even when the appliance is turned off.

16. Do not allow the device or adapter to get wet. Where the device falls into water, immediately remove the plug or adapter from the wall socket. Do not put your hands in water when the machine is connected to the network. It must be checked by a qualified electrician before using it again.
17. Do not hold the device or power supply with wet hands.
18. Turn off the device whenever you put it away.
19. Do not leave the device switched on or the adapter unattended.

## **DESCRIPTION OF THE DEVICE**

1. Safety cap
2. Blade cover
3. Blade group
4. Rotary shaft
5. Power switch
6. Shaver body
7. Lint and pills bin
8. Battery compartment
9. Cleaning brush

## **BEFORE FIRST USE**

Open the battery compartment (8). Insert 2xAA batteries (battery not included). Close the battery compartment cover.

## **BATTERY CHANGE**

Remove the battery compartment cover (8). Remove old batteries. Insert new 1.5Vx2 AA batteries. Close the battery compartment cover.

**NOTE:** Only use non-rechargeable batteries.

## **USING THE FABRIC SHAVER**

1. Turn the shaver on (5).
2. Place the clothes (fabric) on a flat surface, smoothen the creases and move the shaver forth and back along with the fabric.
3. Resisting lint can be removed by moving shaver crosswise and then lengthwise (in cross-pattern) on one, a small fragment of clothes.
4. You can remove links from thin clothing by putting them on flat, stiff cardboard.
5. In the case of clothing with a pattern, move the shaver along the pattern line.

## **CLEANING THE FABRIC SHAVER**

Turn off the shaver (5). Twist the safety cap (1) anti-clockwise. Twist the blade cover anticlockwise (2). Remove the blades (3) by pulling up (Be careful! The blades are very sharp). Clean the blade cover (2), blades (3), rotary shaft (4) with an attached brush (9). Empty the knotting and pilling tank (7).

Reassemble all disassembled parts in reverse order to remove.

Lint remover has a protection lock. It will not work if any of the parts are assembled in the wrong way.

## **TECHNICAL DATA**


Power supply: 2xAA (2×1,5V)



■ Please transfer cardboard packaging to waste paper. Pour the polyethylene bags (PE) into the plastic container. Worn device should be returned to the appropriate point of storage because it is dangerous in the device ingredients may pose a threat to the environment. The electrical device should be handed over to limit its reuse and use. If in the device there are batteries you have to take out and give to the point stored separately.



## Documents / Resources

	<p><a href="#">ADLER AD 9616 Lint Remover</a> [pdf] User Manual AD 9616, Lint Remover</p>
---	---

