

# **ADLER AD1189 Alarm Clock Device User Manual**

Home » ADLER » ADLER AD1189 Alarm Clock Device User Manual




### Contents

- 1 ADLER AD1189 Alarm Clock
- **Device**
- 2 Instructions
- 3 Device description
- 4 Technical data
- 5 Documents / Resources
- **6 Related Posts**



**ADLER AD1189 Alarm Clock Device** 

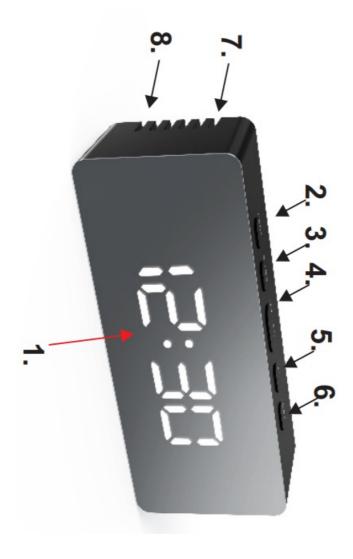

### Instructions

SAFETY CONDITIONS IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Warranty conditions vary when the device is used for commercial purposes.

- 1. Before using the product, please read carefully and always follow the instructions below. The manufacturer is not responsible for any damage caused by improper use.
- 2. The product may only be used indoors. Do not use the product for purposes inconsistent with its intended use.
- 3. Supply voltage: 3 AAA 1.5V batteries or 5V / 1A USB adapter
- 4. Be careful when using the appliance with children. Do not let children play with the product. Do not let children or people unfamiliar with the device use it unsupervised.
- 5. **WARNING:** This device may be used by children over 8 years of age and people with reduced physical, sensory or mental abilities or persons with no experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they have been instructed on safe use device and are aware of the risks associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be performed by children unless they are 8 years of age or older and these activities are performed under supervision.
- 6. Never put the power cord, plug, or the entire device into water. Never expose the product to weather conditions such as direct sunlight or rain, etc. Never use the product in wet conditions.
- 7. Never place the product on or near hot or warm surfaces or kitchen appliances such as an electric oven or gas

burner.

- 8. Never use the product near flammable materials.
- 9. The device may only be wiped with a dry cloth. Do not use water or cleaning fluids.
- 10. Store the device in a dry room.

## **Device description**

- 1. Display
- 2. Mode button
- 3. Alarm button
- 4. Snooze / Light button
- 5. Up button
- 6. Down button
- 7. Power input
- 8. Battery compartment (3x AAA)
- 9. Power cord

The following manual is a quick reference. Full instructions can be found at the link below: <a href="https://www.adler.com.pl/dane/manuals/ad\_1189.pdf">https://www.adler.com.pl/dane/manuals/ad\_1189.pdf</a>

## Display (1):

The display shows Time, Date, Temperature, and changes in settings.

## MODE button (2):

A single press is used to change the functions of the device. Pressing and holding down causes entry into function edition and confirmation.

## Alarm button "Alarm" (3):

Turns the alarm on and off and lets you edit it.

## Snooze and backlight button "SNZ / LIGHT" (4).

Snooze and changes the display brightness function.

### Up, Down buttons "Up, Down" (5,6):

The buttons are used to change values while changing the settings in all modes.

### **Technical data**

- Battery type: 3x AAA (Lr04) We suggest using rechargeable batteries.
- USB power supply: 5V / 1A
- Temperature range: 0-50 °C

To protect your environment: please separate carton boxes and plastic bags and dispose of them in corresponding waste bins. The used appliance should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. Do not dispose of this appliance in the common waste bin.

#### **Documents / Resources**



ADLER AD1189 Alarm Clock Device [pdf] User Manual AD1189, Alarm Clock Device, AD1189 Alarm Clock Device

Manuals+,