




ADLER MS 4010 Citrus juicer User Manual

[Home](#) » [ADLER](#) » ADLER MS 4010 Citrus juicer User Manual 



MS 4010

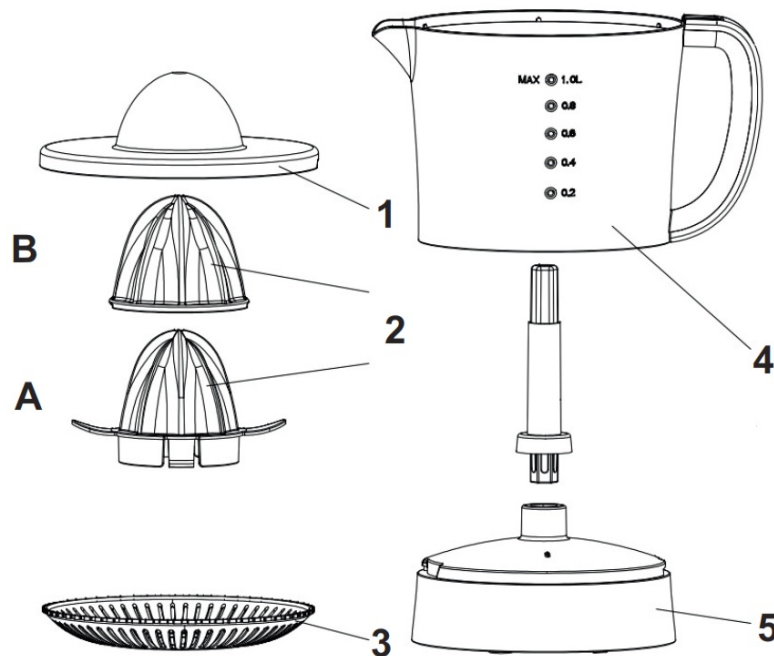

**SAFETY CONDITIONS. IMPORTANT INSTRUCTIONS ON SAFETY OF USE
PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

The warranty conditions are different if the device is used for commercial purposes.

1. Before using the product please read carefully and always comply with the following instructions. The manufacturer is not responsible for any damages due to any misuse.
2. The product is only to be used indoors. Do not use the product for any purpose that is not compatible with its application.
3. The applicable voltage is 230V ~50Hz. For safety reasons, it is not appropriate to connect multiple devices to one power outlet.
4. Please be cautious when using around children. Do not let the children play with the product. Do not let children or people who do not know the device to use it without supervision.
5. **WARNING:** This device may be used by children over 8 years of age and persons with reduced physical, sensory or mental capabilities, or persons without experience or knowledge of the device, only under the supervision of a person responsible for their safety, or if they were instructed on the safe use of the device and are aware of the dangers associated with its operation. Children should not play with the device. Cleaning and maintenance of the device should not be carried out by children unless they are over 8 years of age and these activities are carried out under supervision. After you are finished using the product always remember to gently remove the plug from the power outlet holding the outlet with your hand. Never pull the power cable!!! Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, turn it off from the network, unplug the power.
6. Never put the power cable, the plug, or the whole device into the water. Never expose the product to atmospheric conditions such as direct sunlight or rain, etc.. Never use the product in humid conditions.
7. Periodically check the power cable condition. If the power cable is damaged the product should be turned to a professional service location to be replaced in order to avoid hazardous situations.

8. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defective product yourself because it can lead to electric shock. Always turn the damaged device to a professional service location in order to repair it. All the repairs can be done only by authorized service professionals. The repair that was done incorrectly can cause hazardous situations for the user.
9. Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner.
10. Never use the product close to combustibles.
11. Do not let the cord hang over the edge of the counter.
12. Do not immerse the motor unit in water.
13. Before you turn on the appliance, make sure that all parts have been installed properly.
14. Use only the accessories provided by the manufacturer.
15. Be careful not to overload the device. Do not use too much force when pushing the products through the feed (2).
16. If the appliance is not used or you want to clean it, always disconnect it from the mains and disconnect the feeder cable from the juice extractor.
17. Do not dismantle the appliance if it is connected to a power socket.
18. Do not use abrasive cleaning sponges or caustic cleaning agents for cleaning the appliance.
19. It is recommended to dismantle the juicer and thoroughly wash parts immediately after use.

Contents

[1 DEVICE DESCRIPTION](#)

[2 ASSEMBLING THE APPLIANCE AND USE](#)

[3 CLEANING AND MAINTENANCE](#)

[4 Documents / Resources](#)

[5 Related Posts](#)

DEVICE DESCRIPTION

1. Cover
2. Cones
3. Sieve
4. Vessel
5. Basis

ATTENTION:

Depending on the size of the fruit, use a cone (A) for smaller fruits and a cone (B) for larger fruits.

ASSEMBLING THE APPLIANCE AND USE

1. Wash those parts of the appliance that are going to have direct contact with the fruit and juice.
2. Place the vessel (4) on the basis (5) and rotate to block.
3. Place the sieve (3) on 2 joined above-mentioned parts.
4. Place cone (2) on the top and connect the power supply.

5. Place citrus on the cone (2) and push. The device turns on automatically.

CLEANING AND MAINTENANCE

1. For easier cleaning, rinse removable parts under running water immediately after every washing. After rinsing, leave the parts to dry.
2. After dismantling, all removable parts can be cleaned in warm water with dishwashing liquid.
3. Juice may cause discoloration of plastic parts. Wash plastic parts immediately after you have used them.

NOTE: Never immerse the motor unit in water, nor rinse under the tap. The rest of the parts can be washed in a dishwasher.

TECHNICAL DATA

Supply voltage: 230V ~ 50Hz

Power: 40W



To protect your environment: please separate carton boxes and plastic bags and dispose of them in corresponding waste bins. The used appliances should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. Do not dispose of this appliance in the common waste bin.




www.meskoeurope.eu

 <p>CITRUS JUICER MS 4010</p>	 <p>Milk Frother MS 4493</p>	 <p>BLENDER WITH JAR MS 4079</p>	 <p>ELECTRIC SHAVER MS 2926</p>	 <p>HEATED PAD MS 7429</p>	 <p>ELECTRIC KETTLE MS 1288</p>
 <p>MIXER WITH BOWL MS 4217</p>	 <p>KITCHEN SCALE MS 3165</p>	 <p>AIR HUMIDIFIER MS 7965</p>	 <p>AIR COOLER MS 7914</p>	 <p>SANDWICH MAKER 3IN1 MS 3045</p>	 <p>MEAT MINCER MS 4805</p>
 <p>MOSQUITO KILLER LAMP MS 7933</p>	 <p>Weather Station MS 1177</p>	 <p>NOSE TRIMMER MS 2929</p>	 <p>HAIR DRYER MS 2250</p>	 <p>TRIMMER SET MS 2931</p>	 <p>Egg Boiler MS 4485</p>

www.meskoeurope.eu

Documents / Resources

 <p>MS 4010</p>	<p>ADLER MS 4010 Citrus juicer [pdf] User Manual MS 4010, Citrus juicer</p>
---	---