



ADTRAN 1200824G1 Netvanta 3458 Access Router User Guide

[Home](#) » [ADTRAN](#) » ADTRAN 1200824G1 Netvanta 3458 Access Router User Guide 

ADTRAN 1200824G1 Netvanta 3458 Access
Router User Guide



NETVANTA 3458 ROUTER

P/N 1200824G1

Contents

- 1 GETTING STARTED
- 2 ACCESS THE GUI
- 3 ACCESS THE CLI
- 4 CONFIGURE THE UNIT'S IP ADDRESS
- 5 ENABLE TELNET ACCESS
- 6 CONSOLE PINOUTS
- 7 ETHERNET PINOUTS
- 8 SWITCH PORT (1 THROUGH 8)
PINOUTS
- 9 CONFIGURE YOUR APPLICATION
- 10 Documents / Resources
 - 10.1 References

GETTING STARTED

Two configuration methods are available for your NetVanta router:

- Web-based graphical user interface (GUI)
- AOS command line interface (CLI)

The GUI lets you configure the main unit settings and provides online guidance and explanations for each setting. However, using the AOS CLI may be necessary for more advanced configurations.

ACCESS THE GUI

You may access the GUI from any Web browser on your network by following these steps:

1. Connect the router to your PC using the ETH 0/1 port on the back of the unit.
2. Set your PC to a fixed IP address of 10.10.10.2. If you cannot change the PC's IP address, you will need to change the unit's IP address using the CLI. (Refer to the next two sections for instructions.)
3. Enter the unit's IP address in your browser address line. The default IP address is 10.10.10.1.
4. You will then be prompted for the user name and password (the default settings are admin and password).
5. The initial GUI screen appears.

ACCESS THE CLI

Access the AOS CLI via the CONSOLE port or a Telnet session. To establish a connection to the NetVanta router CONSOLE port, you need the following items:

- VT100 terminal or PC (with VT100 terminal emulation software)
- Straight-through serial cable with a DB-9 (male) connector on one end and the appropriate interface for your terminal or PC communication port on the other end

1. Connect the DB-9 (male) connector of your serial cable to the CONSOLE port on the front panel of the unit.
2. Connect the other end of the serial cable to the terminal or PC.
3. Provide power to the unit as appropriate. Refer to the NetVanta 3000 Series Hardware Installation Guide (provided on the AOS Documentation CD) for more details.
4. Once the unit is powered up, open a VT100 terminal session using the following settings: 9600 baud, 8 data bits, no parity bits, and 1 stop bit. Press <Enter> to activate the AOS CLI.
5. Enter enable at the > prompt.
6. Enter the enable password when prompted. The default password is password.

The configuration parameters used in the examples outlined in this document are for instructional purposes only. Please replace all underlined entries (example) with your specific parameters to configure your application.

CONFIGURE THE UNIT'S IP ADDRESS

The following steps create an IP address and subnet mask for ETH 0/1. If you are not sure what IP address to assign, please contact your network administrator.

1. At the # prompt, enter config terminal.
2. At the (config)# prompt, enter interface eth 0/1 to access the configuration parameters for the Ethernet port located on the rear of the unit.

3. Enter ip address 10.26.12.12 255.255.255.0 to assign an IP address to the Ethernet port using a 24-bit subnet mask.
4. Enter ip route 0.0.0.0 0.0.0.0 192.22.72.2 to add a default route to the route table. If necessary, contact your network administrator to obtain the IP address (and subnet mask) for your particular configuration.
5. Enter no shutdown to activate the interface to pass data. 6. Enter exit to exit the Ethernet interface commands and return to the Global Configuration mode.

Depending on your configuration, you may need to set a default gateway as well using the (config)#ip default gateway command. If IP routing is enabled on the unit, do NOT set a default gateway.

ENABLE TELNET ACCESS

The following steps create a password of atrane for Telnet access. By default, Telnet access is enabled with a password of password.

1. Verify that the prompt of your unit displays (config)#.
2. Enter line telnet 0 4 to change the configuration parameters for the Telnet sessions.
3. Enter login to initiate Telnet access.
4. Enter password atrane to change the login password for the Telnet sessions.
5. Enter exit to return to the Global Configuration mode.
6. Verify that the prompt of your unit displays (config)#.
7. Enter do write memory to save the current configuration.

CONSOLE PINOUTS

Pin	Name	Description
1	DCD	Data Carrier Detect (output)
2	RD	Receive Data (output)
3	TD	Transmit Data (input)
4	DTR	Data Terminal Ready (input)
5	SG	Signal Ground
6	—	Tied to Pin 1 (output)
7	—	Unused
8	—	Tied to Pin 1 (output)
9	—	Unused

ETHERNET PINOUTS

Pin	Name	Description
1	TX1	Transmit Positive
2	TX2	Transmit Negative
3	RX1	Receive Positive
4, 5	—	Unused
6	RX2	Receive Negative
7, 8	—	Unused

SWITCH PORT (1 THROUGH 8) PINOUTS


Pin	Name	Description
1	TX1	Transmit Positive (PoE negative rail)
2	TX2	Transmit Negative (PoE negative rail)
3	RX1	Receive Positive (PoE positive rail)
4, 5	—	Unused
6	RX2	Receive Negative (PoE positive rail)
7, 8	—	Unused

CONFIGURE YOUR APPLICATION

More detailed documentation for configuring your ADTRAN unit is provided on the AOS Documentation CD included in your shipment. For more detail on hardware setup, refer to the appropriate NIM quick start guides and the hardware installation guide. For more detail on configuring your system, refer to the AOS Command Reference Guide, configuration guides, and technical support notes.

Important: For additional details on product features, specifications, installation, and safety, refer to the appropriate hardware installation guide on the AOS Documentation CD shipped with the base unit and available online at www.adtran.com.

Documents / Resources

	ADTRAN 1200824G1 Netvanta 3458 Access Router [pdf] User Guide P-N 1200824G1, 1200824G1, 1200824G1 Netvanta 3458 Access Router, Netvanta 3458 Access Router, Access Router, Router
---	--

References

- [M_H Search - Manual-Hub.com](#)

Manuals+.