

ADVANCED LIVING SOLUTIONS General Setup and 7 Inches Touch Screen Codepad User Guide

[Home](#) » [ADVANCED LIVING SOLUTIONS](#) » **ADVANCED LIVING SOLUTIONS General Setup and 7 Inches Touch Screen Codepad User Guide** 

Contents

- [1 ADVANCED LIVING SOLUTIONS General Setup and 7 Inches Touch Screen Codepad](#)
- [2 Power Up Procedure & Connecting the Battery](#)
- [3 Setting the Date & Time](#)
- [4 Changing the Master Code](#)
- [5 Fault Analysis](#)
- [6 Keeping Your Touch Screen Up To Date](#)
- [7 ABOUT COMPANY](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



ADVANCED LIVING SOLUTIONS General Setup and 7 Inches Touch Screen Codepad



Power Up Procedure & Connecting the Battery

1. Open the metal box that contains the alarm circuit board. This will require a Philips head screwdriver (This is usually in a walk-in robe or linen cupboard)
2. The alarm will go off when you open the box and this is normal (Enter 2580# or your master pin at the keypad when this happens)
3. Attach the battery leads to the battery. Black to Black and Red to Red (It is important to get the polarity around the right way or damage may result)
4. Close the metal box door (The alarm might go off again when doing this, put your master code in again)
5. Plug in the alarm system power lead to the socket if not already and turn on the power point

Setting the Date & Time

1. At the alarm code pad enter your four-digit master code followed by 6 [2 5 8 0 6 #]
2. Enter the time & date as illustrated on the screen
3. Press # to exit. The time and date is now set.

Changing the Master Code

1. At the alarm code pad press the keypad button
2. Enter your four-digit master pin followed by #AWAY [2 5 8 0 1 #]
3. Select User 1 using ^v arrows followed by #AWAY
4. Enter the new four-digit pin
5. Press # to exit. Your new code is now set

Fault Analysis

If your system has any faults, they will be displayed with a ! on the top of the touch screen. Using the arrows will step you through them


Keeping Your Touch Screen Up To Date

- Like many of your home & office devices, it is important to keep your Bosch Touchscreen up to date.
- This is simply done by adding the device to your home or office Wi-Fi. Once this is done you can wait for your touchscreen to prompt you automatically when an update becomes available or do a manual check simply by accessing the "About" menu and scrolling down to "Check for updates"
- Follow the below steps to add Wi-Fi to your Touchscreen:
 1. Go to settings
 2. Go to Wi-Fi
 3. Ensure Wi-Fi is switched on and enter your password for your Wi-Fi into the keypad
- Occasionally after a firmware update, the Touchscreen will go blank, you just need to power the system down for 30 seconds.
- This screen includes functions such as auto bluetooth disarming. Please read through the complete Touch User Manual before adding bluetooth devices to ensure you fully understand functionality.

ABOUT COMPANY

- AL Solutions Pty Ltd trading as Advanced Living Solutions ABN 35 108 522 583 ACN 115 235 615 2/3 Nicole Close, Bayswater
- North Vic 3153
- **Phone:** (03) 9212 7999
- **Email:** sales@advancedlivingsolutions.com.au
- www.advancedlivingsolutions.com.au

Documents / Resources

| | |
|---|--|
|  | <p>ADVANCED LIVING SOLUTIONS General Setup and 7 Inches Touch Screen Codepad [pdf]] User Guide General Setup and 7 Inches Touch Screen Codepad, General Setup and 7 Inches Touch Screen Codepad</p> |
|---|--|

References

-  [Advanced Living Solutions: Electrical and Technology Solutions Melbourne](#)