



Advanced LEJ-8001DMX 80W Dual Wheel Color + Twinkle DMX LED Illuminator User Manual

[Home](#) » [Advanced](#) » Advanced LEJ-8001DMX 80W Dual Wheel Color + Twinkle DMX LED Illuminator User Manual 

Contents

- [1 Advanced LEJ-8001DMX 80W Dual Wheel Color + Twinkle DMX LED Illuminator](#)
- [2 Accessories](#)
- [3 Technical Data](#)
- [4 Installation dimension of light engine](#)
- [5 Light Engine Setup](#)
- [6 Wireless remote controller](#)
- [7 Installation of Fiber Optic](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



Advanced LEJ-8001DMX 80W Dual Wheel Color + Twinkle DMX LED Illuminator



Accessories

- Fiber Connector 1 PC
- Wireless Remote Controller 1 PC (Optional)
- User Manual 1 PC
- Signal Cable 1 PC (for DMX machine only)

Technical Data

- **Voltage:** 100V~240V AC
- **Power:** 55W/85W
- **LED:** White
- **Color Wheel:** 6 colors
- **Light Source:** 1-30W LED/1-55W LED
- **Luminous Flux:** 3500Lm/6100Lm (6000K)
- **Life of LED:** 50000H
- **Size:** 291X264X135mm
- **Gross Weight:** 4.8Kg/5.3Kg
- **Standard Aperture:** Ø28mm/Ø24mm/Ø20mm (Optional: Ø30mm Max)

Installation dimension of light engine

Installation dimension of the light engine (see Fig.1):

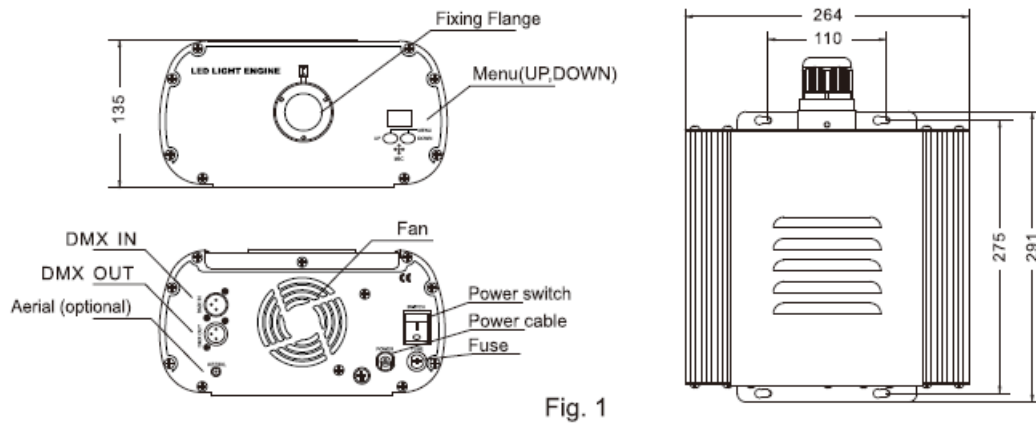


Fig. 1

Light Engine Setup

There are three control modes for the LEI-Series DMX512 protocol Light Engine:

- **DMX512 Signal Control Mode:** DMX512 Signal is received from a DMX512 controller.
- **Master/Slave Mode:** One Light Engine is set as Master, while the rest light engines are set as Slave. The master sends a control signal to the slave so that all the machines run the program synchronously.
- **Audio Control Mode:** Light engines are controlled by sound.

1. OMX 512 signal control mode:

Address Code Setup:

Press the button “UP” and “DOWN” at the same time (maybe several times) until the digital display shows “001-508”, then press the button “Up” or “DOWN” to select the address code.

- **OMX Channels:** 5 Channels / 3 Channels/ 2 Channels / 1 Channels
- **5 Channels:** CH1: Color CH2:Speed CH3:Twinkle CH4:Dimmer (256 levels) CH5:Strobe
- **3 Channels:** CH1: Dimmer (256 levels) CH2:Color CH3:Twinkle
- **2 Channels:** CH1: Dimmer (256 levels) CH2:Color
- **1 Channels:** CH1: Dimmer (256 levels)

Notice:


2 Channels & 1 Channels Twinkle wheel-call the preset programs. (can be controlled by the remote controller)

- **Master/Slave mode: The setting of Master/Slave**

STATUS	No.	MENU	DESCRIPTION OF FUNCTIONS	REMARKS
MASTER	1	P.00-P.21	12 preset programs(see attached list,when it display "P.XX",press "UP/DOWN" to get into this menu)	1.Hold and press the two buttons at the same time for 3 seconds to unlock the menu for setting up. 2. Hold and press the button "UP", at the same time to press the button"DOWN" to switch the menu.Then release both buttons. 3. Press either button of "UP" or "DOWN" to choose the right parameter. 4. After 60 seconds, the data will be saved and the menu locked. 5. When the display is on, the dot next to the third digit will flash if there is any DMX signal coming in.
	2	PS.1-PS.2	PS.1-PS.2 are audio control programs (when it display "PS.X",press "UP/DOWN" to get into this menu)	
	3	S.00-S.07	Setting of program running speed, total 8 levels: 0S,1/4S,1/2S,1S,2S,3S,5S,8S	
	4	SS.0-SS.7	Setting of twinkle wheel speed, total 8 levels: 0RPM,1RPM,2RPM,3RPM,4RPM,5RPM,8RPM,12RPM	
	5	d.00-d.99	Adjusting of brightness, total 8 levels :d.00,d.10,d.20, d.35,d.50,d.70,d.85,d.99.(d.99.means100% brightness)	
	6	r.on-r.of	r.on: Remote control is on, r.of: Remote control is off.	
	7	Ch1/Ch2/Ch5	Slaves to CH5	
Slave DMXReceiver	8	001-505	DMX address,"001"-508"are available	

Notice:

1. If you need Master/Slaves to change color synchronously, please set all of slaves into"001 ";
2. If you need Master/Slaves to chase to change color, please set slaves into "006", "011" and so on(add "5" one after another).
3. The connection of OMX Signal Control Mode (See Fig. 2):

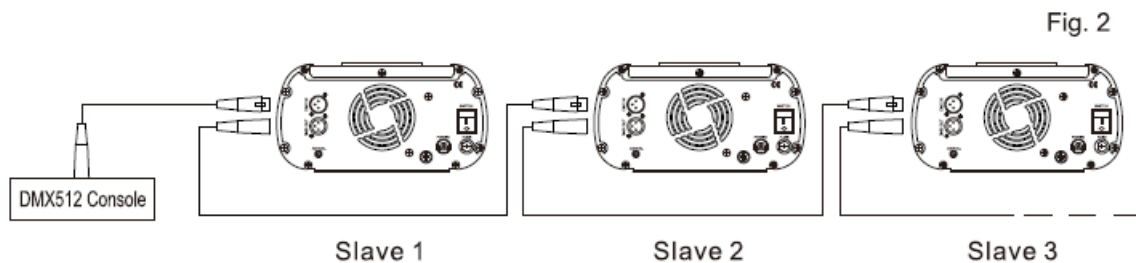


4. The connection of Master/Slave Control Mode (See Fig. 3):



5. Signal cable and connector (See Fig.4):

The signal cable should be 2X0.5mm 2 audio cable.

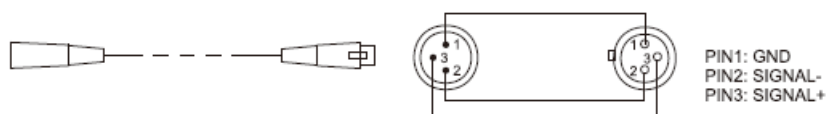

Wireless remote controller

Press the two buttons "UP"/"DOWN" beside the Display at the same time. When it displays "r. on" or "r. of ", press either button of "UP"/ "DOWN" to show" r. on" (status of the remote control). The remote function is on.

15-Key Remote Controller:

1. **Program Selection:** Press "PRO", then press the digit key on the controller, "00"-"13", to choose the desirable program, or you can use "▲", "▼" to select.
2. **Dimming:** Press the key "DIM", then press "0"-"7" to have the desirable brightness, or you can use "▲", "▼" to adjust.
3. **Speed of the color wheel:** Press the key "SP", then press "0"-"7" to adjust the speed, or you can use "▲", "▼" to adjust.
4. **Speed of the twinkle wheel:** Press the key "9", then press "0"-"7" to adjust the speed of the twinkle wheel, or you can use "▲", "▼" to adjust.

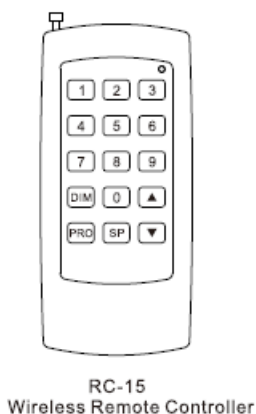


Fig.5

Notice:

1. Address codes of slaves (machines) are not adjustable under remote control status.
2. When you are selecting the program, only double-digit numbers on the controller are recognizable (e.g. 00, 01, 02 ...).

Attached List

Pro. No.	Function	Pro. No.	Function	Pro. No.	Function
P.00	No Light	P.06	Red	PS.1	6 colors skip & audio control
P.01	White	P.07	6 colors skip	PS.2	5 colors skip & audio control
P.02	Sky-B	P.08	5 colors skip		
P.03	Green	P.09	6 colors fade		
P.04	Yellow	P.10	6 colors skip & chase		
P.05	Blue	P.11	6 colors fade & chase		

Installation of Fiber Optic

1. Connecting the fiber optic with the Light Engine:

Solid Core fiber optic(See Fig. 1):

1. Cut the fiber to the specified length. The cross-section should be vertical to the fiber and keep clean and smooth.

2. Peel off 50-100mm of the PVC jacket of the fiber optic cable (not necessary if there is no PVC jacket). Be careful not to hurt the fiber optic.
3. Unscrew the PG Connector and insert the fiber optic cable into the PG Connector and Fiber Connector until the end of the cable is flush with the Fiber Connector. Screw lightly the PG Connector.
4. Insert the finished Fiber Connector into the Fixing Flange, and screw tightly the Screw.

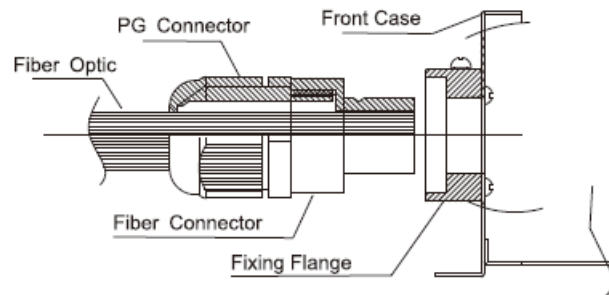


Fig. 1

2. Installation of the end part of the Multi-String fiber optic:

1. Drill holes on the installing board according to the design. Then insert the fiber optic string into holes and fix it with epoxy glue. Trim the end of the fiber string to be flush with the board or at a required length. Fasten the other end of the fiber string to a harness and insert the harness into the PG Connector and Fiber Connector. Apply the hot knife to cut the fiber end flush with the Fiber Connector. (See Fig.2).
2. Insert the finished Fiber Connector into the Fixing Flange and screw tightly the Screw.

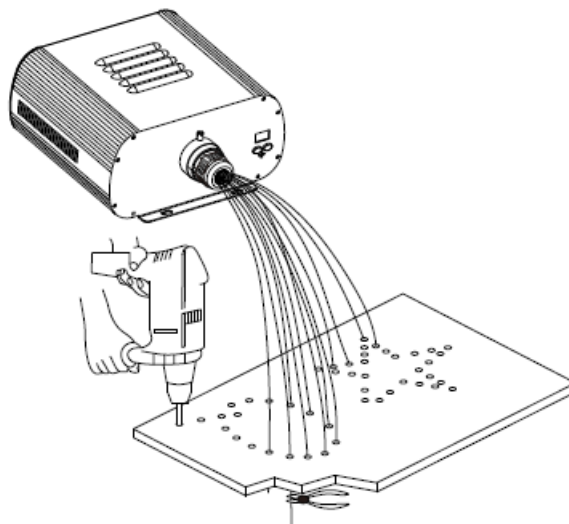


Fig. 2

3. Commonly used installation method of fiber optic cable:

1. Side Lighting Fiber Optic: (See Fig.3).

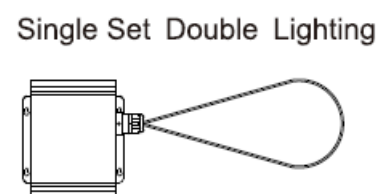
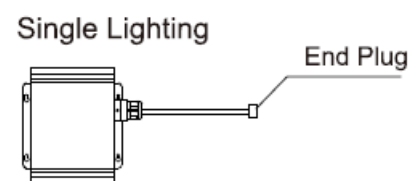
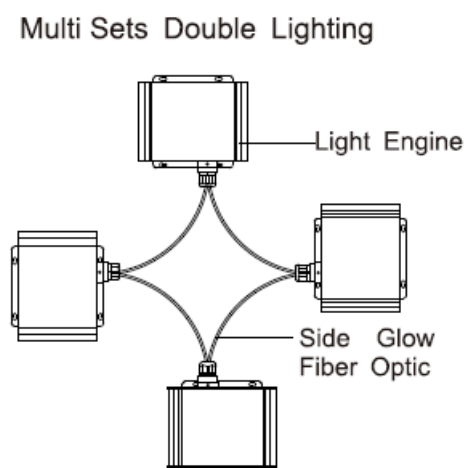


Fig.3

2. End Lighting Fiber Optic. (See Fig.4).

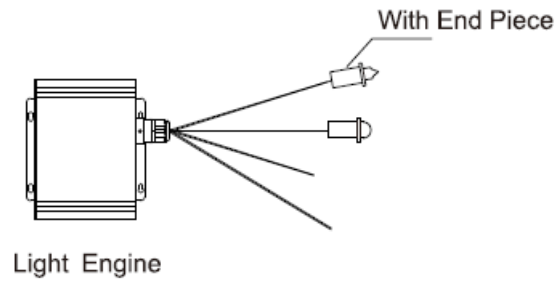



Fig.4

Documents / Resources

	<p>Advanced LEJ-8001DMX 80W Dual Wheel Color + Twinkle DMX LED Illuminator [pdf] User Manual</p> <p>LEJ-8001DMX 80W Dual Wheel Color Twinkle DMX LED Illuminator, LEJ-8001DMX, 80W Dual Wheel Color Twinkle DMX LED Illuminator, Dual Wheel Color Twinkle DMX LED Illuminator, Wheel Color Twinkle DMX LED Illuminator, Color Twinkle DMX LED Illuminator, DMX LED Illuminator, LED Illuminator</p>
---	---