

# ADVENT AKBMM15 Wireless Multimedia Keyboard Instruction Manual

[Home](#) » [ADVENT](#) » ADVENT AKBMM15 Wireless Multimedia Keyboard Instruction Manual 

## > ADVENT Wireless Multimedia Keyboard Instruction Manual AKBMM15



### Contents

- [1 Safety Warnings](#)
- [2 Unpacking](#)
- [3 Product Overview](#)
  - [3.1 Front View](#)
  - [3.2 Bottom View](#)
- [4 Installing the Batteries](#)
- [5 Connecting the USB Receiver](#)
- [6 Function Keys](#)
- [7 Other Function Keys](#)
- [8 Hints and Tips](#)
- [9 Specifications](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

## Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party, make sure to include this manual.

### Wireless Devices:

- Before boarding any aircraft or packing a wireless device in luggage that will be checked in, remove the batteries from the wireless device.
- Wireless devices can transmit radio frequency (RF) energy, whenever batteries are installed and the wireless device is turned on (If it has an On/Off switch).

### Battery-Powered Devices:

- Improper use of batteries may result in battery fluid leakage, overheating, or explosion.
- Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns and is harmful if swallowed.
- Do not disassemble the keyboard or remove any parts.
- Do not immerse the keyboard in water or any liquid.
- Do not use the keyboard close to heat sources or expose it to high temperatures.
- Do not use the keyboard where strong electromagnetic waves are present. Strong electromagnetic waves will cause damage to the keyboard.
- Keep the keyboard away from direct sunlight, moisture, dirt, or abrasive chemical products (cleaning products, etc).

**Thank you** for purchasing your new product.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## Unpacking

 
Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:


- Wireless Keyboard
- USB Dongle
- 2 x AAA Batteries
- Instruction Manual

## Product Overview

### Front View

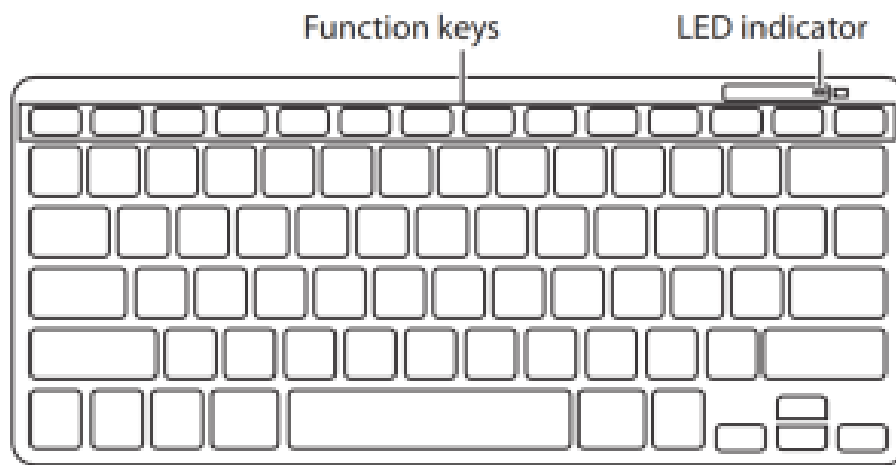


#### Bottom View

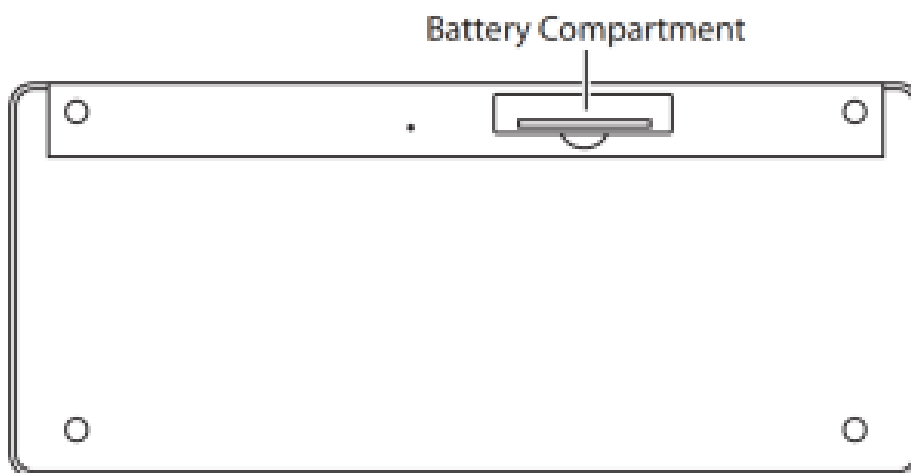 


#### Installing the Batteries

You will need to install 2 x AAA batteries before using the keyboard.

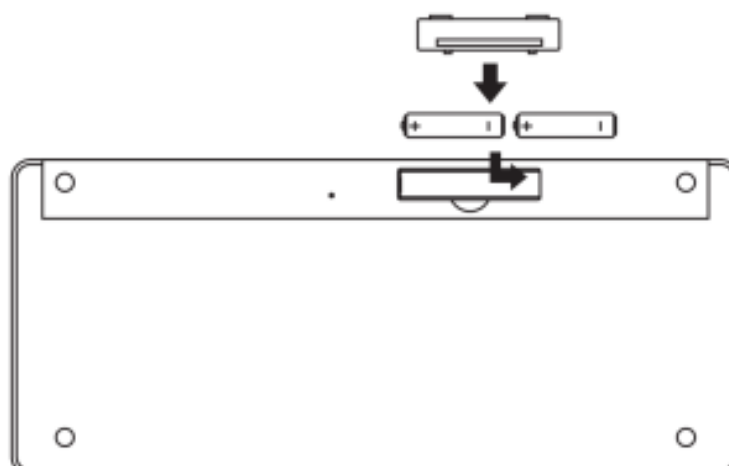

If the battery indicator starts to flash the battery power is getting low. Replace both batteries at the same time.

#### Connecting the USB Receiver

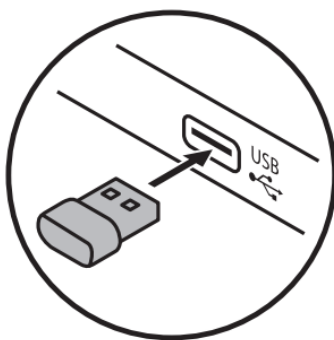 













1. Take out the USB Dongle.
2. Switch on your computer.
3. Plug the USB Dongle directly into your computer's USB port.
4. The keyboard will automatically connect to the computer.

In case the keyboard is not working or is disconnected accidentally, remove the batteries then re-install them back into the keyboard. The keyboard will automatically connect to the computer.

## Function Keys

To access the primary functions, press the keys\* as normal.

To access the secondary functions (different colored text on the keys), press the Fn key and the desired key together.

	Return to the Home screen
	Start the default e-mail program.
	Open up Search
	Stop loading a web page
	Start the default Media Player program.
	Stop playback
	Backward skip music /films; hold to search backward
	Play track
	Forward skip music/films; hold to search forwards
	Mute Sound
	Decrease the Volume
	Increase the Volume

\* Some function keys may not be available depending on the operating system.

## Other Function Keys

To access other function keys (highlighted in a different color on the keyboard), press both the “Fn” button and the desired function key\*.



\* Some function keys may not be available depending on the operating system.

## Hints and Tips

Keyboard Not Working:

1. Change both batteries at the same time.
2. Ensure your computer's operating system supports wireless input devices (e.g. mice and keyboards), and is the latest version.
3. Ensure your computer's wireless feature is active.
4. Move the keyboard closer to the computer.
5. Remove the batteries then re-install them back into the keyboard.

## Specifications

Model	AKBMM15
Operating Systems	Windows® 7 / 8 / 10 Mac® OS X
Frequency Band(s)	2403 – 2477 MHz
Max. Radio Frequency Power Transmitted	Keyboard: -19 dBm Dongle: -1 dBm
Dimension (L x W x H)	120 x 286 x 20 mm
Net Weight	400 g



[www.adventcomputers.co.uk](http://www.adventcomputers.co.uk)

[Currys.co.uk](http://Currys.co.uk)

**All the support you need.**

Whether it's a tech emergency or you need plain good advice, we're always on hand to help. UK: 0344 561 1234  
IRE: 1890818 575



Visit [Partmaster.co.uk](http://Partmaster.co.uk) today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit [www.partmaster.co.uk](http://www.partmaster.co.uk) or call 0344 800

3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.




#### Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.

DSG Retail Ltd. (co. no. 504877) 1 Portal Way, London, W3 6RS, UK  
EU Representative DSG Retail Ireland Ltd (259460)  
3rd Floor Office Suite Omni Park SC, Santry, Dublin 9, Republic of Ireland  
IB-AKBMM15-201102V6

## Documents / Resources

	<p><a href="#">ADVENT AKBMM15 Wireless Multimedia Keyboard</a> [pdf] Instruction Manual AKBMM15, Wireless Multimedia Keyboard, AKBMM15 Wireless Multimedia Keyboard, Multimedia Keyboard, Keyboard</p>
---	--