



# ADZERO S41523 Multifunction Remote Scrolling Ring User Manual

[Home](#) » [ADZERO](#) » ADZERO S41523 Multifunction Remote Scrolling Ring User Manual 

## Contents

- [1 ADZERO S41523 Multifunction Remote Scrolling Ring](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
  - [3.1 Using on TikTok](#)
  - [3.2 Charging](#)
- [4 FAQ](#)
- [5 Two Working Modes](#)
- [6 Using on TikTok](#)
- [7 Using on Music Apps](#)
- [8 Taking Photos/Videos with the Built-in Camera App](#)
- [9 Reading on the Kindle App](#)
- [10 Charging](#)
- [11 FAQ](#)
- [12 How to Move the Small White Dot](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)
- [14 Related Posts](#)



**ADZERO S41523 Multifunction Remote Scrolling Ring**



## Specifications

- **Working Modes:** Video Mode, Music Mode
- **Compatible Apps:** TikTok, Spotify, Apple Music, Kindle app
- **Not Compatible with:** Kindle devices (e.g., Kindle Paperwhite, Kindle Oasis), Huawei P50 folding phone

## Product Usage Instructions

### Video Mode

Video Mode is used for short video apps like TikTok and reading apps.

### Using on TikTok

#### 1. iOS Devices:

1. Go to Settings > Accessibility > Touch.
2. Turn on AssistiveTouch.
3. Power on the ring.
4. Pair with the Bluetooth device "D01 Pro".
5. Open TikTok.
6. Button Functions on TikTok:
  - **Single Click:** Next video
  - **Double Click:** Swipe left
  - **Long Press:** Volume +

#### 2. Android Devices:

1. Go to Settings > Bluetooth.
2. Turn on Call audio.
3. Power on the ring.
4. Pair with the Bluetooth device "D01 Pro".
5. Open TikTok.
6. Button Functions on TikTok:
  - **Single Click:** Next video
  - **Double Click:** Like

- **Long Press for seconds:** Screen off

## **Music Mode**

Music Mode is used for music apps like Spotify and Apple Music.

## **Using on Music Apps**

- Follow the same steps as in the “Using on TikTok” section, but open the desired music app instead of TikTok.
- Button Functions on Music Apps:
  - **Single Click:** Play / Pause
  - **Double Click:** Like
  - **Long Press:** Volume-

## **Taking Photos/Videos with the Built-in Camera App**

1. Switch to video mode (refer to page 2, step 4 for detailed instructions).
2. To take pictures, long press the up/down button for 2 seconds.
3. To take videos, long press the up/down button for 2 seconds to start/stop video recording.

## **Reading on the Kindle App**

**Note:** This feature is only for the Kindle app, not for any Kindle devices such as the Kindle Paperwhite and Kindle Oasis.

1. Switch to video mode (refer to page 2, step 4 for detailed instructions).
2. Turn off Continuous Scrolling: Aa > Layout > Turn off Continuous Scrolling.
3. Open the Kindle app.
4. Double-click the up/down button to turn the page forward and backward.

## **Charging**

**Note:** Charging case and ring have separate charging processes.

### **1. Charging the Charging Case**

1. Charge the charging case using a DC 5V power source.

#### **2. LED Indicator:**

- **Red light flashing slowly:** Charging
- **Steady red light:** Fully charged

### **2. Charging the Ring**

1. Only charge the ring (not the charging case).

#### **2. LED Indicator:**

- **Steady blue light:** Charging
- **Blue light off:** Fully charged

## **Low Battery Warning**

When the indicator on the ring and charging case flashes red slowly, it indicates low battery and requires charging.

## FAQ

- **Why does the Remote Ring not work?**

1. Make sure your iOS version is 14.8 or above.
2. Make sure AssistiveTouch is turned on if using an iOS device. Refer to page 2 for detailed instructions.
3. Make sure the ring is in the correct mode. Refer to page 2 and step 4 for detailed instructions.

- **Why can't the ring scroll up/down on TikTok even after switching to short video mode and turning on 'AssistiveTouch'?**

This issue may occur due to compatibility or other technical factors. Please refer to the troubleshooting section in the user manual or contact customer support for further assistance.

## Two Working Modes

1. **Video Mode:** function as a remote for short video apps and reading apps like TikTok & books.
2. **Music Mode:** function as a remote for music apps like Spotify, Apple Music.

Mode	Video Mode	Music Mode
<b>Compatibility</b>	Short video apps: TikTok ..... Reading apps on smartphones: Kindle app ..... Built-in camera apps ..... <b>NOT for</b> kindle devices and other eReader devices like Kindle Paperwhite and Kindle Oasis, Huawei P50 folding phone.	Music app: Spotify, Apple Music ..... Phone call


### Tips

Please select the appropriate mode for the desired functionality: video mode for TikTok & reading apps, and music mode for music apps.

## Using on TikTok

		iOS Devices	Android Devices
<b>Step 1</b>	Turn on "AssistiveTouch" if using iOS devices. And if you use Android devices, please turn on "Call audio".	Settings>Accessibility>touch>turn on AssistiveTouch 	Settings>Bluetooth 
<b>Step 2</b>	Power on the ring	Press and hold the middle button for one second until the indicator flashes red and blue alternately. 	
<b>Step 3</b>	Pair with the Bluetooth device "D01 Pro"	Settings >> Bluetooth >>Search Bluetooth device " <b>D01 Pro</b> ">> Click to connect device>>Finish Bluetooth connection, you can use the ring. 	
<b>Step 4</b>	Open TikTok	Press the button to check if it works. <b>If not, please switch to video mode first.</b> Press both the up and down button at the same time until the indicator flashes purple 3 times. <b>Switching Mode</b>  <b>Switch Successfully</b> 	


### Button's Function on TikTok

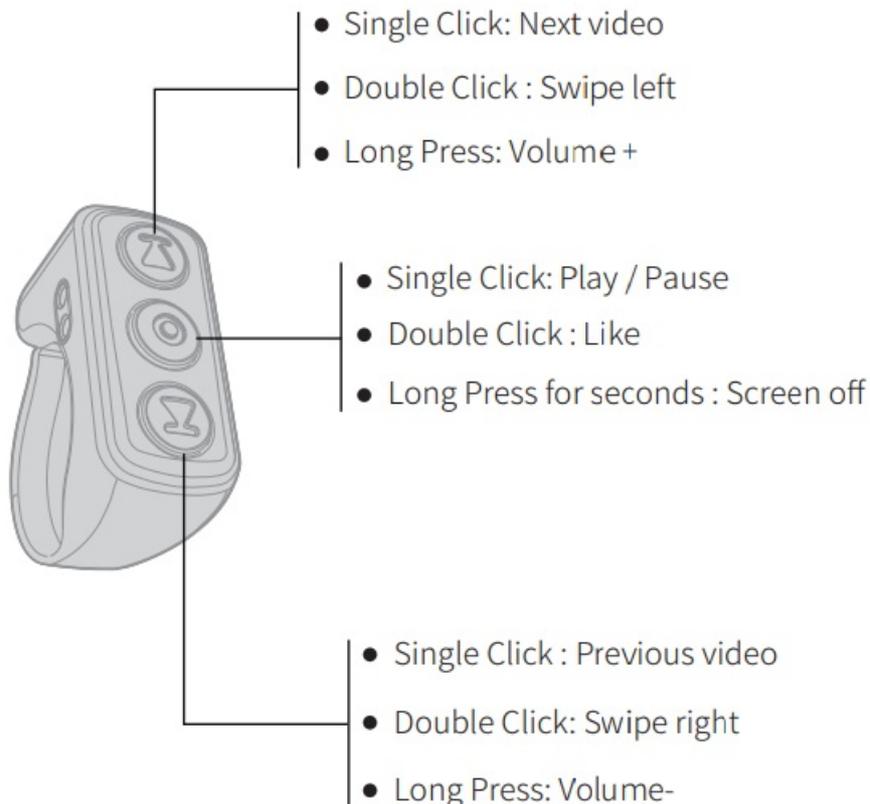


### Using on Music Apps

- **Step 1** Turn on “AssistiveTouch” for iOS devices or enable “Call audio” for Android devices. Refer to page 2 for detailed instructions.
- **Step 2** Power on the ring. Refer to page 2, step 2.
- **Step 3** Pair with the Bluetooth device “D01 Pro”. Refer to page 2, step 3.
- **Step 4** Open a music app like Spotify and press the up/down button to check if it works. If not, please switch to music mode first. Press both the up and down button at the same time until the indicator flashes purple 3 times.


### Switching Mode

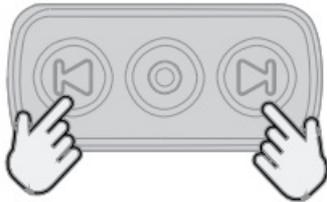

### Switch Successfully

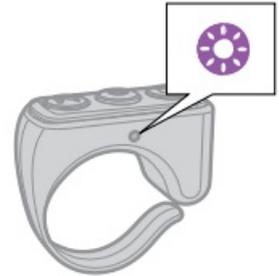

### Button’s Function on Music Apps

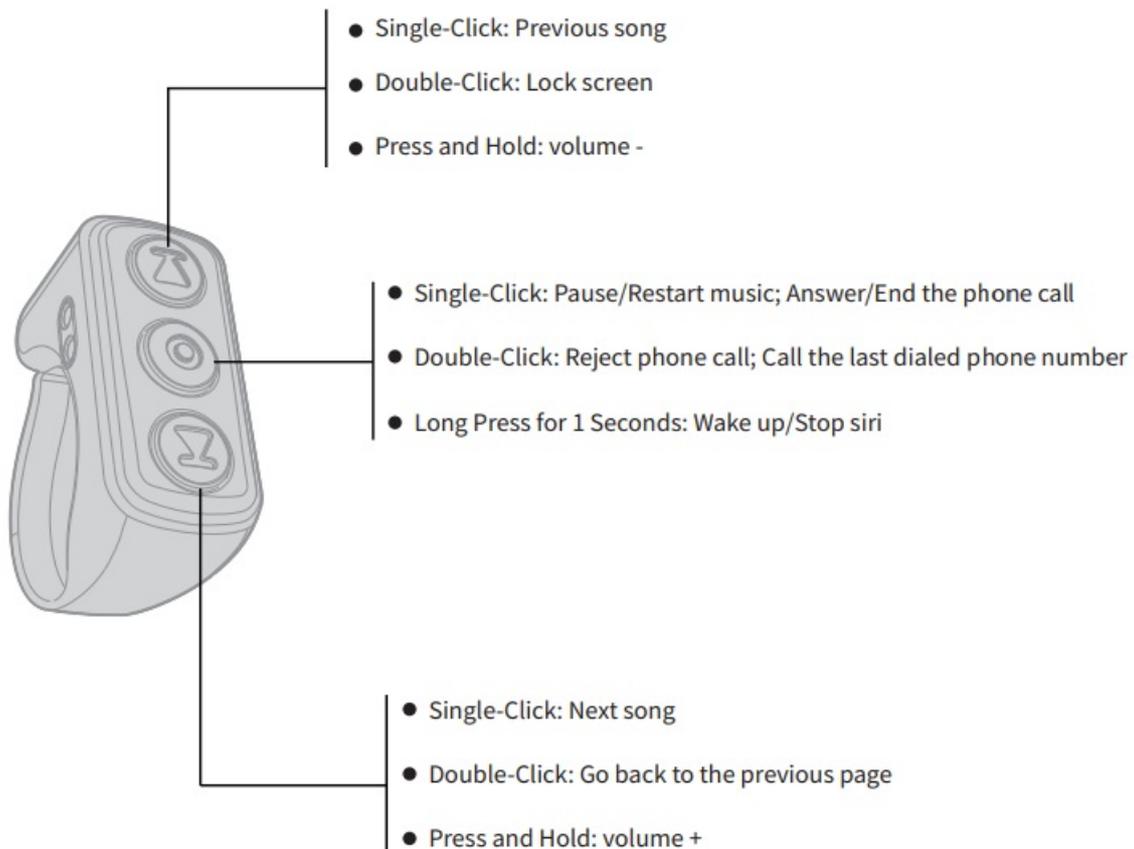

### Taking Photos/Videos with the Built-in Camera App

**Step 1.** Switch to video mode. Refer to page 2, step 4 for detailed instructions.


1. Take pictures. Long press the up/down button for 2 seconds.
2. Take videos. Long press the up/down button for 2 seconds to start/stop video recording.



## Reading on the Kindle App


**Tips:** Only for the Kindle app, not for any Kindle devices such as the Kindle Paperwhite and the Kindle Oasis...

- **Step 1.** Switch to video mode. Refer to page 2, step 4 for detailed instructions.
- **Step 2.** Turn off “Continuous Scrolling”. Aa > Layout > turn off Continuous Scrolling
- **Step 3.** Open the Kindle app and double-click the up/down button to turn the page forward and backward.

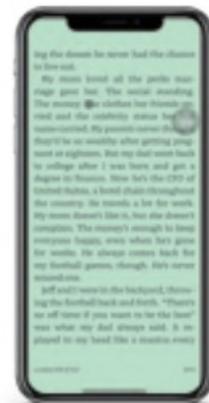

## Charging

### 1. Charge the charging case

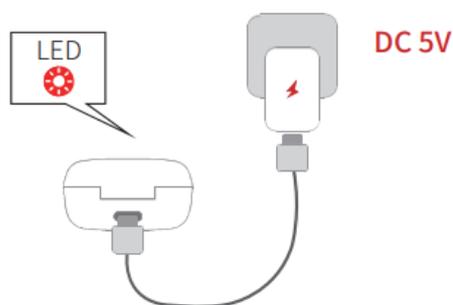

Components	 Charging	 Fully charged
Charging case	Red light flashing slowly	Steady red light

### 2. Only charge the ring

		
Components	 Charging	 Fully charged
Charging case (the ring in the case)	Steady blue light	Blue light off

### Low Battery Warning

When the indicator on the ring and charging case flashes red slowly, it indicates low battery and requires charging.

### FAQ

- **Why the Remote Ring Does Not Work?**

1. Make sure iOS is 14.8 or above.
2. Make sure the “AssistiveTouch” is turned on if using an iOS device. Please refer to page 2 for detailed instruction.
3. Make sure the ring is in correct mode. Please refer to page 2 and step 4 for detailed instruction.

- **Why can't the ring scroll up/down on TikTok even after switching to short video mode and turning on 'AssistiveTouch'?**

Please adjust the position of the small white dot to 1/3 of the screen. Refer to the final page for detailed instructions.

- **How can I know which mode the remote ring is currently in?**

1. Double-click the middle button. If your phone makes a call, it's in music mode. Otherwise, it's in video mode.
2. Open TikTok and press the button to see if the remote ring controls it. If yes, it's in video mode.

- **Why couldn't connect the Bluetooth “D01 Pro”?**

The ring has automatically connected to the last paired device. Please disconnect Bluetooth before connecting to another smartphone or tablet.

- **Will it work with a Bluetooth headset or speaker?**


Yes, it can work with Bluetooth headset or speaker

- **Does it work with the foldable phone?**


Yes, it works with foldable phones. Ensure the phone is unfolded and held upright. If it still doesn't work, try restarting your phone.

### How to Move the Small White Dot

- **Step 1.** Settings > Accessibility > touch > AssistiveTouch > turn on Use Game Controller
- **Step 2.** Adjust the tracking sensitivity by swiping left or right.
- **Step 3.** Single click the middle button to adjust the position of the small white dot.

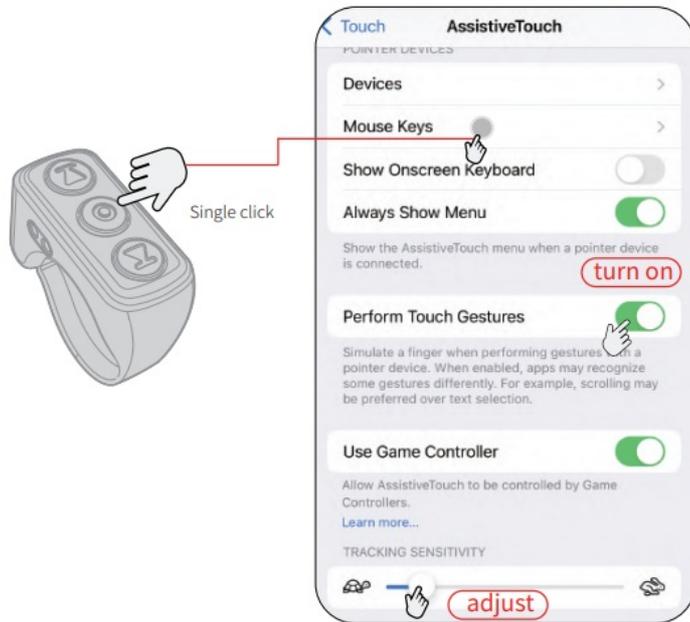

## Documents / Resources

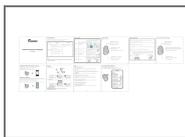

[ADZERO S41523 Multifunction Remote Scrolling Ring](#) [pdf] User Manual  
S41523 Multifunction Remote Scrolling Ring, S41523, Multifunction Remote Scrolling Ring, Remote Scrolling Ring, Scrolling Ring, Ring

## References

- [User Manual](#)