

AEE DRONES S71T Plus Action Camera



AEE DRONES S71T Plus Action Camera User Guide

[Home](#) » [AEE DRONES](#) » AEE DRONES S71T Plus Action Camera User Guide 

Contents

- [1 AEE DRONES S71T Plus Action Camera](#)
- [2 Introductions](#)
- [3 Overview](#)
- [4 Inserting battery and charging](#)
- [5 Connection to Remote Control](#)
- [6 Limited Warranty](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)





AEE DRONES S71T Plus Action Camera



Introductions

- Congratulations on your purchase of a mini UHD digital camera produced by AEE!!
- This Manual provides instructions on how to use this camera and its accessories.
- Please read this Manual carefully before use and keep it handy for future reference. We hope you enjoy your photo-shooting experience with this product!
- Due to the difference in product version, the product and its accessories you have purchased may be slightly different from those described herein. All items are offered subject to availability.

Overview

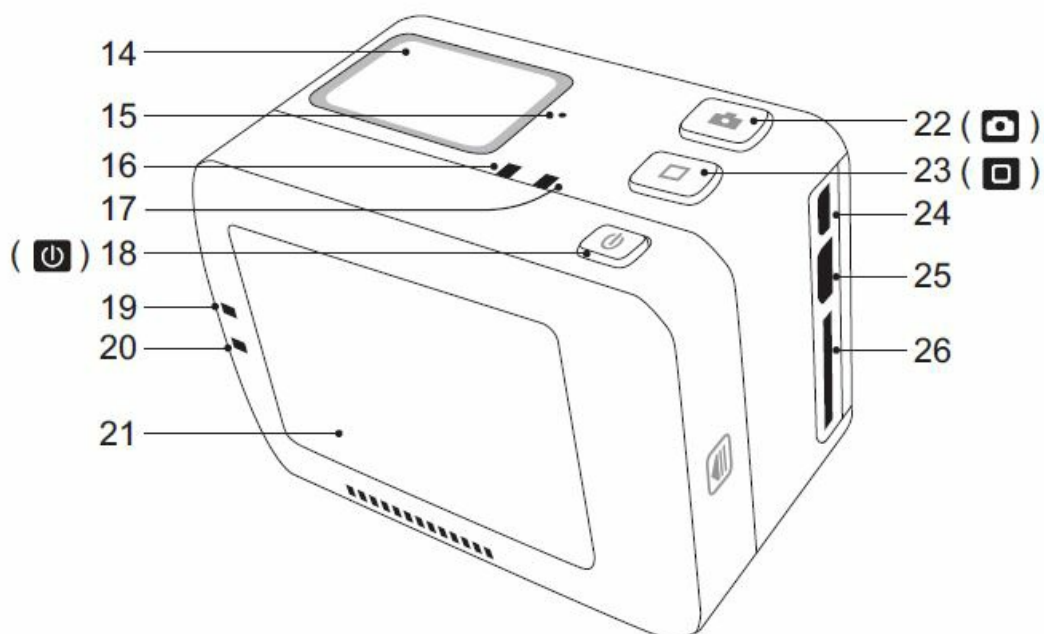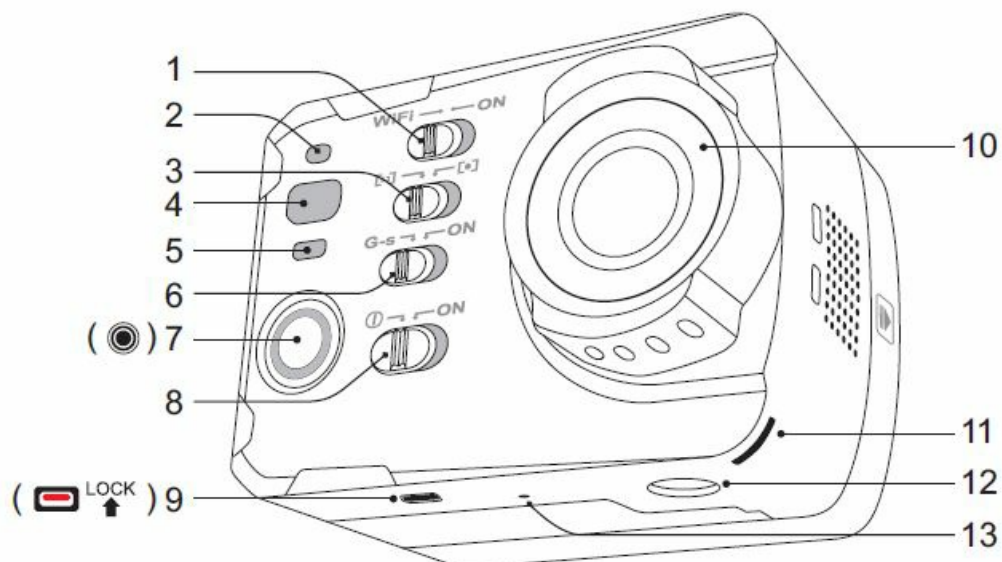

1. Wi-Fi key
2. Wi-Fi status indicator
3. Light meter mode key
4. Recording status indicator
5. Charging status indicator
6. G-Sensor key
7. Video/audio recording key
8. Power on/off key
9. Battery lock
10. Lens
11. Recording Status Indicator
12. Tripod mount
13. Microphone
14. LCD segment display
15. Microphone
16. Recording status indicator

17. Charging status indicator
18. Recording status indicator
19. Charging status indicator
20. TFT touch screen
21. Shutter key
22. Stop key
23. Mini HDMI interface
24. USB interface
25. TF card slot
26. TFT touchscreen switch

Inserting battery and charging



- Slide the battery into the camcorder, and then move the switch on the bottom into the lock position to lock the battery into place.
- To charge the camcorder, connect it to a USB port using the supplied USB cable.
- The red LED will flash whilst charging.
- It will take approximately 4 hours for the camcorder to fully charge.
- Once fully charged the red LED will stop flashing and stay on.

Inserting microSD card and turning on



With the camcorder off, remove the port cover on the side of the camcorder and insert the microSD card into the microSD slot. You will hear a click to indicate that the card has been inserted correctly.

Turn on the camcorder by moving the power switch on the front of the camcorder to the on position. The start-up AEE logo will appear on the screen. Once the top screen changes to the information display the camcorder is ready to use. Please note that the camcorder will become warm during use.

Recording



- To start recording press the “” key on the front of the camcorder. The green LED of the camcorder will flash to indicate that it is recording.
- To stop recording press the “” key on the top of the camcorder.

Snapshot

When you turn the camcorder on, it will be in video mode. To change to photo mode press the “” key on the top of the camcorder. The video logo on the information display will change to the camera logo. To take a snapshot press the “” key again. The green LED will flash once.

To return to video mode press the “” key on the front of the camcorder.

Accessing the settings menu

Gently touch the screen in the preview state, Press “” to enter the main menu to select the desired function. Press “” to go back to the preview state.

Download app

Download the app by visiting the App Store or the Play Store, searching for AEE and selecting Install.




Turn on the WiFi and connect to the app

To connect to the app you will need to turn on the Wifi on the camcorder. Turn the camcorder on and then move the WiFi switch on the front of the camcorder to the WiFi position. The blue LEDs of the camcorder will flash whilst the WiFi is on. Search for "AEE Magicam" in your phone's Wifi settings and select Connect. Please enter AEE12345 as the password. Open the app and click on the arrows to finish connecting.

Connecting to PC/Mac

To connect to a PC or Mac, attach the USB cable to the camcorder and the other end to your computer. Move the power switch to the on position. The camcorder will then appear as a removable disc in My Computer (PC) or on the desktop (Mac). You can then open the folder to view or drag and drop your files to save them to your computer.

Connection to Remote Control

- Set the Wi-Fi mode of the camera to [STA]. Long press "M"  on the remote control for 3s to turn on the red power indicator, and the remote control will enter the auto search state.
- When the remote control asks whether to connect more cameras, press " "  to select "No" and press " "  to confirm and finish the one-to-one connection.
- If you select "Yes", the remote control will auto-search for other cameras and finish the one-to-many connection.

Limited Warranty

AEE products are guaranteed against manufacturing defects one (1) year from the original date of purchase. AEE's sole obligation in the event of such defects during this period is to repair or replace the defective part or product with a comparable part or product at AEE's sole discretion. Except for such repair or replacement, the sale, processing or other handling of this product is without warranty, condition or other liability even though the defect or loss is caused by negligence or other fault. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. AEE assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of this product. In no event shall AEE be liable for incidental or consequential damages relating to or resulting from the use of this product or any of its parts. Because of possible user resealing errors, this product is not warranted against waterproof housing leakage or any resulting damage. Returns or replacements of parts and/or products may be subject to shipping, handling, replacement and/or restocking fees.

If you are experiencing a problem with an At purchase, please contact our Customer Support Team by visiting our website www.aeeusa.com or calling +1 877-414-7993 or sending us a mail at usatechsupport@aee.com. We are often able to solve the problem quickly via email or phone calls.

www.aeeusa.com.





[AEE DRONES S71T Plus Action Camera](#) [pdf] User Guide

S71T Plus Action Camera, S71T, Plus Action Camera, Action Camera, Camera

References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.