

# AEi SGR-8206-SMC, SGR-8106-SMC SIP DECT Phone User Manual

Home » AEi » AEi SGR-8206-SMC, SGR-8106-SMC SIP DECT Phone User Manual

#### Contents

- 1 AEi SGR-8206-SMC, SGR-8106-SMC SIP DECT Phone
- 2 OVERVIEW
- 2 OVERVIEW
- **3 PRODUCT DESCRIPTION**
- 4 Operation
- 5 Making a Call
- **6 Checking Voice Messages**
- 7 Support
- 8 Documents / Resources



AEi SGR-8206-SMC, SGR-8106-SMC SIP DECT Phone



#### **Product Information**

The SIP DECT Phone (SGR-8206-SMC / SGR-8106-SMC) is a full-feature telephone that provides voice communication. It is a VoIP phone with various features to enhance communication.

# **Package Contents**

- · Base Unit
- · Cordless Handset
- Stand
- Battery
- AC Adaptor (Optional)
- RJ-45 Cable
- Quick Installation Guide (This document)

# **Product Description**

The VoIP phone has the following key components:

#### **Front View**

- Handset keys
- · Message waiting indicator
- · Display screen
- · Speed dial keys
- LINE 1 / LINE 2
- End key
- · Alphanumerical keys
- Function keys (HOLD, MUTE, SPEAKER, VOLUME)

# Base unit keys

Message waiting indicator

#### **Back View**

- LAN port
- DC jack

# Product Usage Instructions Connecting the Phone

To connect to the VoIP phone, follow these steps:

- 1. Connect the LAN port of the phone to a HUB, ADSL, or Switch (PSE).
- 2. Connect the DC jack of the phone to an AC power adapter (optional, if not powered via a PSE).

# **Operations**

**Answering a Call** 

To answer an incoming call, you can do one of the following:

- · Pick up the handset.
- Press the Line (Line1/Line2) key on the base or handset.

#### Making a Call

To make a call, you can use one of the following methods:

- 1. Dial the telephone number using the alphanumerical keypad. The call will start automatically.
- 2. Use the pre-assigned speed dial hotkeys to quickly dial a number. Press the speed dial hotkey assigned to the desired number and the call will start automatically.

# **Call Options**

While a call is in progress, you have additional options:

# **Using the Speaker Phone**

To use the speakerphone for hands-free operation, follow these steps:

- 1. While talking on the phone, press the SPEAKER key on the phone to enable the Speakerphone function.
- 2. Press the SPEAKER key again to terminate the call.

#### **OVERVIEW**

This phone is a full-feature telephone that provides voice communication. Read this QIG carefully to learn how to operate this product and take advantage of its features.

#### **Package Content**

When unpacking the phone, ensure all the following items are present and undamaged. If anything appears to be missing or broken, contact your dealer for a replacement.

- 1. Base Unit
- 2. Cordless Handset
- 3. Stand
- 4. Battery
- 5. AC Adaptor (Optional)
- 6. RJ-45 Cable
- 7. Quick Installation Guide (This document)

# PRODUCT DESCRIPTION

The following contains important information to help you familiarize yourself with the functions of the VoIP phone.

### **FRONT VIEW**




# Handset keys

	Name	Description
1	Message waiting indicator	To indicate an incoming call or unread messages.
2	Display screen	To display calls and status information.
3	Speed dial keys	Press to dial the preset number.
4	LINE 1 / LINE 2	To indicate a line been used as the following status:
		- Idle: No LED indication.
		– In call: Red LED.
		– In on-hold call: Blinking red LED.

	Name	Description
5	End key	Press to end a phone call
6	Alphanumerical keys	Press these keys to enter phone numbers or texts.
7	Function keys	
	HOLD (two line model only)	Press to put an active call on hold.
	MUTE (single line model only	Press to mute handset MIC.
	SPEAKER	Press to activate the speakerphone for hands free conversations.
	VOLUME	Press to increase or decrease the volume of the ringer tone, ha ndset, or speakerphone.

	Name	Description
1	Message waiting indicator	To indicate an incoming call or unread messages.


# **BACK VIEW**

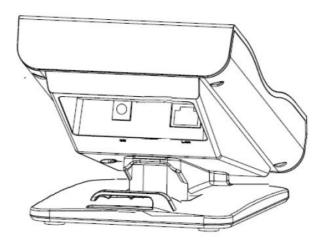

NO.	Name	Description
1	LAN port	Connects to HUB, ADSL, or Switch(PSE)
2	DC jack	Connects to AC power adapter. (Optional. While base unit is not powered v ia a PSE)

# **CONNECTING PHONE**


The following illustration shows how to connect the power and LAN ports of VoIP phone. The following illustration shows how to install the phone and stand. The following illustration shows how to install the handset and battery.

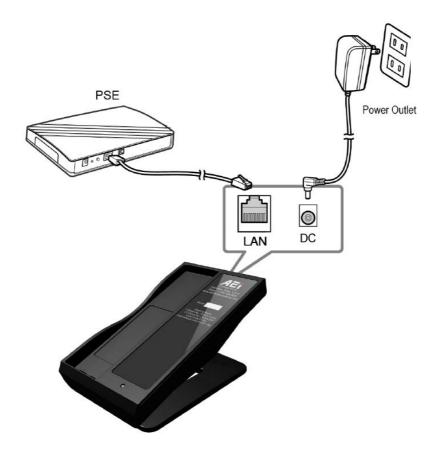


# Operation

# **Answering a Call**

An incoming call is indicated by a ringing tone and a flashing indicator at the top of both the handset and base units. You can answer the call by dome one os the following: Pick up the handset to answer the call.

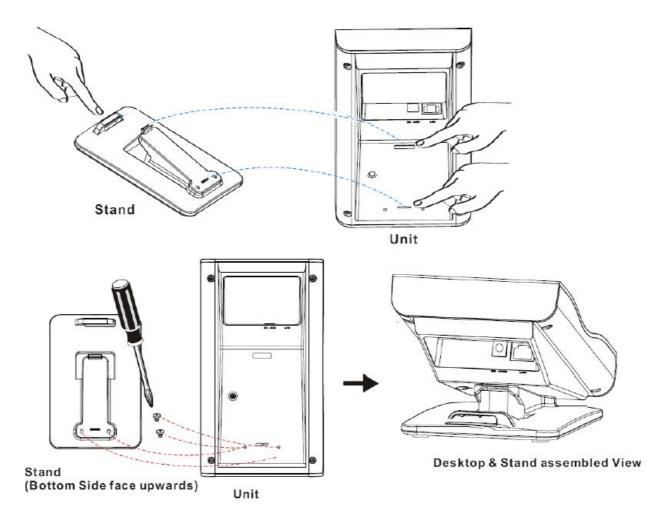

Press the Line Linel/Line key on the base or handset to answer the call

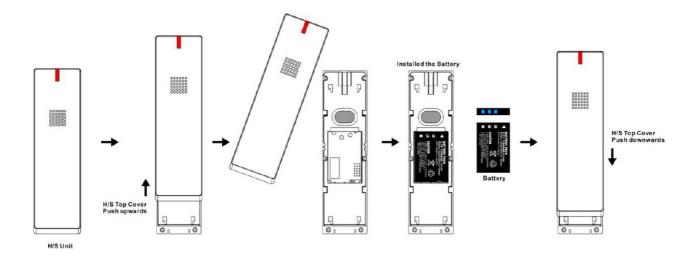

# Making a Call

# Dialing with the Keypad

Enter the telephone number with the alphanumerical keypad and the call will start automatically.

# Using the Speed dial keys

You can use the o pre-assigned speed dial hotkeys, to contour the most commonly dialed numbers. Use the function to dial a number quickly, instead of keying in a complete number.

# To call a number using speed dialing, follow the steps below

Tress the speed dial hokey that has been pre-assigned to the phone number and the call will start automatically

#### **Call Options**

While a call is in progress, a number of additional options are available

### **Using the Speaker Phone**

For hands-free operation, you can use the built-in speaker to talk on the phone. To use the speakerphone, follow the While talking on the phone, press the SPEAKER key on the phone to enable the Speakerphone function. Press the SPEAKER key again to terminate the call.

### Putting a Call on Hold (two-line model only)

You may want to put a call on hold temporarily while doing some work or attend to a second incoming or cutscenes call. 10 put a call on hold, do one of the following: Press the HOLD key on the handset to pat the call on hold When you receive a second call, press the next available LINE key to attend to the new call, and the first call will be put on hold automatically.

# Mute a Call (single-line model only)

You may need to mute MIC temporarily during a call, do one of the following Press the MUTE key on the handset to mute the microphone. Press the MUTE key again to unmute the microphone

# **Charging the Handset Battery**

You would need to charge the handset battery before using the handset install the battery into the handset Place the handset onto the base unit and the base unit will start to charge the handset automatically.

The charging indicator lights up in red during charging progress. The LED goes off after the handset battery is fully charged

# **Checking Voice Messages**

If the message waiting indicator at the top of the handset or base unit lights up in red, it indicates that there are one or more new messages in the voicemail box.

- Press the MESSAGE key on the phone to retrieve voice messages
- An external label or l'BA must support the voice message feature. And you need to set a voice message code between using

# Support

To configure through the web browses, do the following:

- Ensure the phone is powered up and connected to a DCHP network
- Press \*112°113 and then "LINE 1" (for 2-line phone) or a green button (for 1-line phone) on the cordless handset, the IP address is displayed on the LCD screen.
- Open your browser such as Internet Explorer, Firefox, etc. and type in the web address on the phone. For example, if the II address you obtain in the steps above is 192.165.1.2.
- When the Web login front pase is displaced. Enter the user name and the password and did Login
- The administrator's username and password are "admin" and "1234" respectively

#### **Documents / Resources**



AEi SGR-8206-SMC, SGR-8106-SMC SIP DECT Phone [pdf] User Manual SGR-8206-SMC, SGR-8106-SMC, SGR-8206-SMC SGR-8106-SMC SIP DECT Phone, SGR-8206-SMC SIP DECT Phone, SIP DECT Phone, SIP Phone, DECT Phone, Phone

Manuals+,