



# AEMC 6422 Calibration Checker For Ground Tester User Manual


[Home](#) » [AEMC](#) » AEMC 6422 Calibration Checker For Ground Tester User Manual 

## Contents

- [1 AEMC 6422 Calibration Checker For Ground Tester](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 HOW TO USE](#)
- [5 Technical and Sales Assistance](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)



**AEMC 6422 Calibration Checker For Ground Tester**

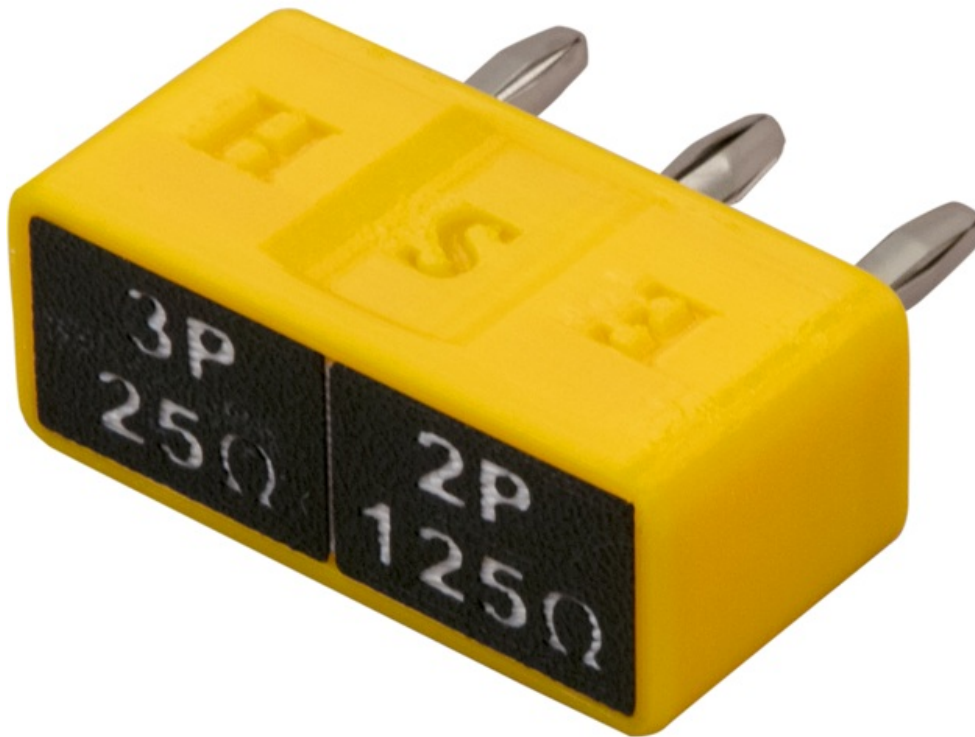

## Product Information

### Specifications:

- **Product Name:** Calibration Checker For Ground Tester Models 6422/6424
- **Test Resistances:** 25 and 125
- **Compatible Models:** Model 6422 and Model 6424
- **Manufacturer:** AEMC
- **Website:** [www.aemc.com](http://www.aemc.com)

## Product Usage Instructions

### Step 1: Inserting the Calibration Checker

1. Locate the instrument's terminals labeled H-S-E.
2. Take the Calibration Checker and insert it into the instrument's terminals.
3. Ensure each pin on the Calibration Checker is inserted into its corresponding terminal, matching H to H, S to S, and E to E.

### Step 2: Checking Accuracy

Once the Calibration Checker is properly inserted, you can proceed with checking the accuracy of your Model 6422 or 6424.

1. Select the desired test resistance (25 or 125) on the Calibration Checker.
2. Refer to your instrument's user manual to determine the appropriate procedure for performing accuracy checks.
3. Follow the instructions provided in your instrument's user manual to complete the accuracy check process.

## Frequently Asked Questions (FAQ)

- **Q: What is the purpose of the Calibration Checker?**

A: The Calibration Checker is used to check the accuracy of your Model 6422 or 6424 Ground Tester.

- **Q: How many test resistances does the Calibration Checker provide?**

A: The Calibration Checker provides two test resistances – 25 and 125.

- **Q: Where can I find technical and sales assistance for this product?**


A: For technical problems, starting assistance, configuration help, or general operation support, you can contact our technical support team through the following options:

- **Phone:** (508) 698-2115
- **Fax:** (508) 698-2118
- **E-mail:** [techsupport@aemc.com](mailto:techsupport@aemc.com)
- **Website:** [www.aemc.com](http://www.aemc.com)

## HOW TO USE

The Calibration Checker provides two test resistances (25Ω and 125Ω) to check the accuracy of your Model 6422 or 6424.

1. Insert the Calibration Checker into the instrument's terminals. Ensure each pin is inserted in its corresponding terminal (H-S-E).

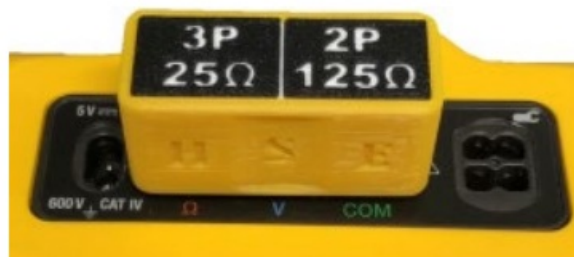

2. Observe the reading. This should be  $125\Omega \pm 2.7\Omega$ .



3. Press TEST. After a few moments, the reading appears. This should be  $25\Omega \pm 0.35\Omega$ .



## Technical and Sales Assistance

If you are experiencing any technical problems, or require any assistance with starting, configuring, or operating your instrument, please call, mail, fax, or e-mail our technical support team:


Phone: (800) 343-1391 (508) 698-2115

Fax: (508) 698-2118



E-mail: [techsupport@aemc.com](mailto:techsupport@aemc.com)

[www.aemc.com](http://www.aemc.com)

## Documents / Resources

	<p><a href="#">AEMC 6422 Calibration Checker For Ground Tester</a> [pdf] User Manual 6422 Calibration Checker For Ground Tester, 6422, Calibration Checker For Ground Tester, Checker For Ground Tester, Ground Tester, Tester</p>
---	--

## References

-  [Get Electrical Testers – Power Analyzers | AEMC Instruments](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.