



External Power Supply for Keypad user guide Print

[Home](#) » [Aeotec](#) » External Power Supply for Keypad user guide Print 

External Power Supply for Keypad



The External Power Supply (POPE_700663) has been crafted as a an add-on product to POPP Keypad ([POPE700045](#)). It is designed to power the POPP Keypad.

The scope of delivery includes 1 connector of the type: **JST ZH 2** ([Datasheet](#))


Important safety information.

Please read this and other device guides carefully. The failure to follow the recommendations set forth by Aeotec Limited may be dangerous or cause a violation of the law. The manufacturer, importer, distributor, and / or reseller will not be held responsible for any loss or damage resulting from not following any instructions in this guide or in other materials.


Keep product away from open flames and extreme heat. Avoid direct sun light or heat exposure.

Plug the terminal in the connection jack on the backside of the Keypad and then connect red wire with plus pole of

your mains connection and the blue one with minus pole. However, at least two batteries must still be inserted in the keypad.

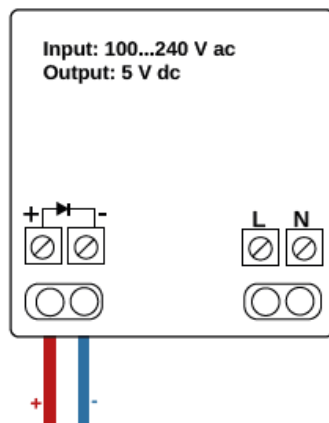

Connection to the external power supply

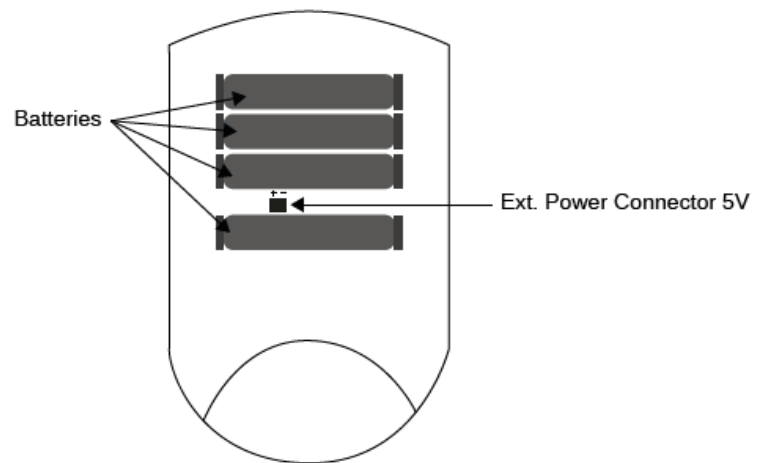

Connection to the POPP Keypad.

Connection description.

L: Live

N: Neutral

+: 5V red

- : 0V blue