



AeroCool Aero One Mid Tower CPU Case User Manual

[Home](#) » [AeroCool](#) » AeroCool Aero One Mid Tower CPU Case User Manual 

Contents

- [1 AeroCool Aero One Mid Tower CPU Case](#)
- [2 Front I/O Panel Cable Connection](#)
- [3 Accessory Bag Contents](#)
- [4 How to install Guide](#)
- [5 I/O Panel](#)
- [6 RGB Fan Hub \(H66C\)](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



AeroCool Aero One Mid Tower CPU Case




Front I/O Panel Cable Connection


Front Panel Connector

(Please refer to the motherboard's manual for further instructions).

Note: Specifications may vary depending on your region. Contact your local retailer for more information.

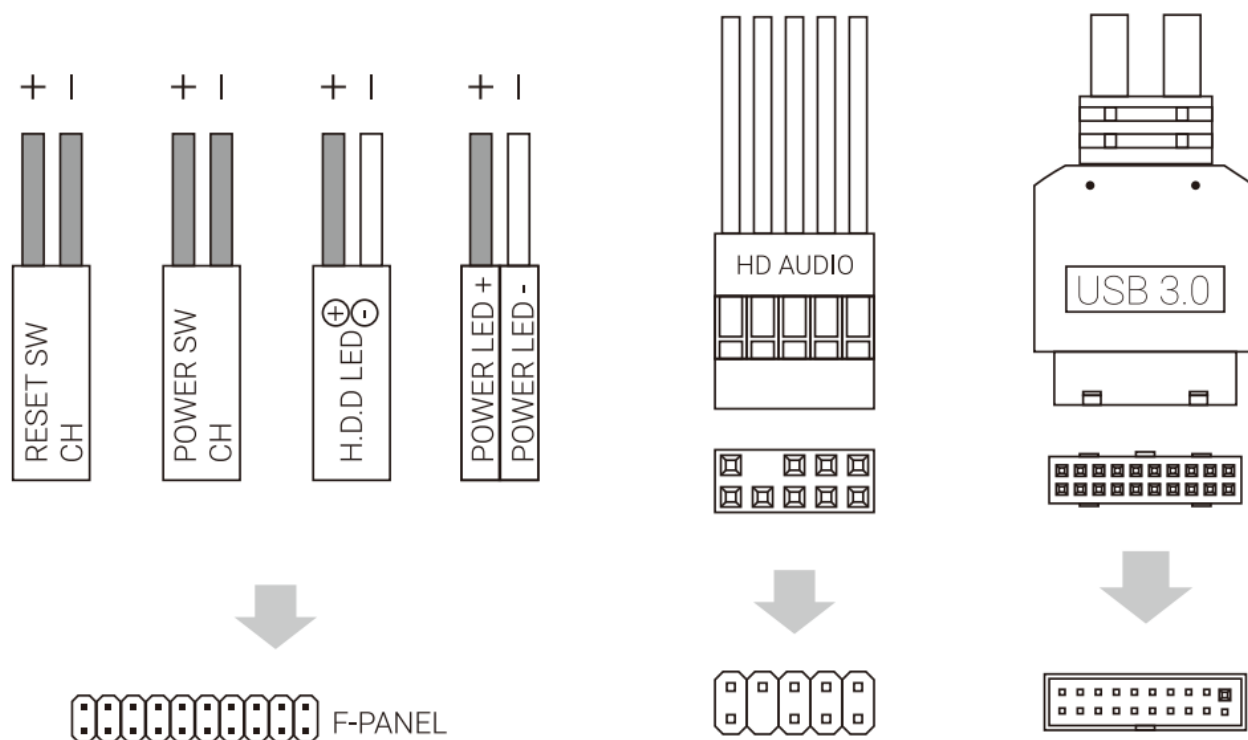


Accessory Bag Contents

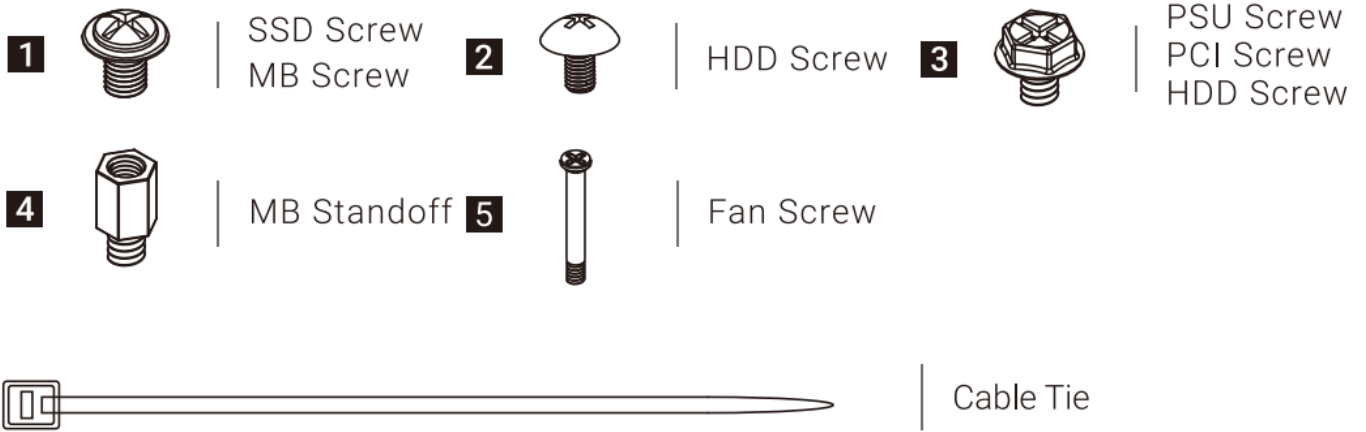


How to install Guide


- Install Motherboard
- Install PsU
- Install add-on-Card

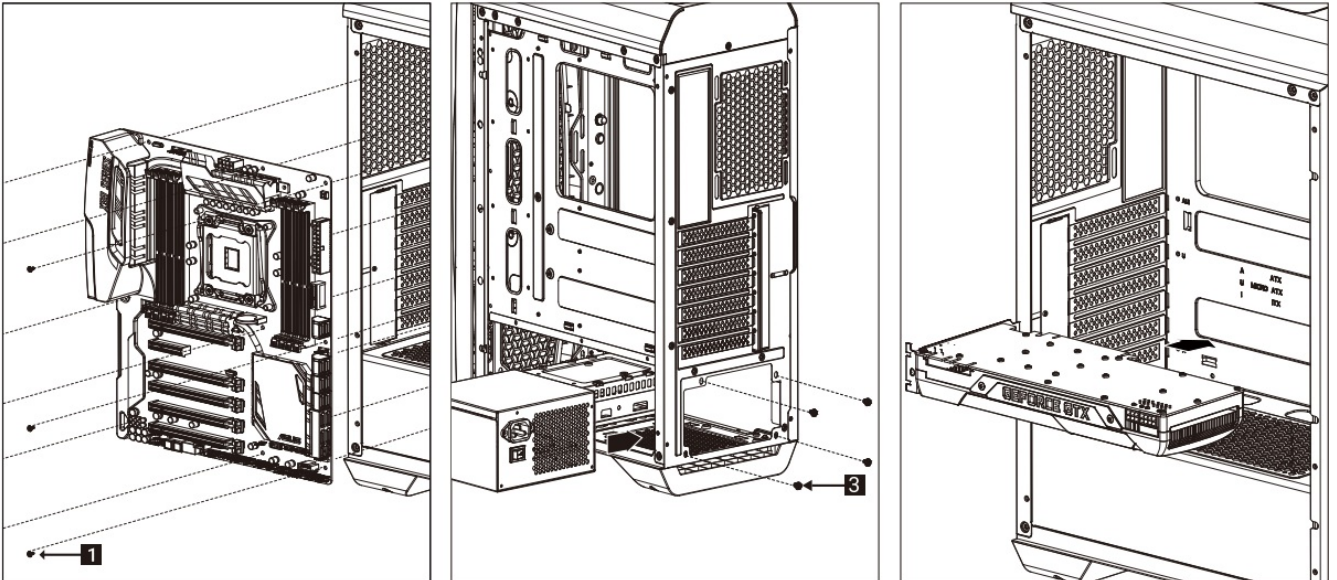

(4a) Install 3.5" HDDx1




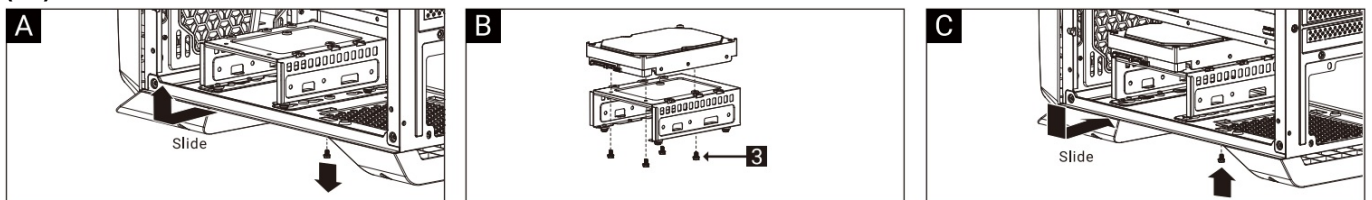


(4b) Install 3.5" HDDx1

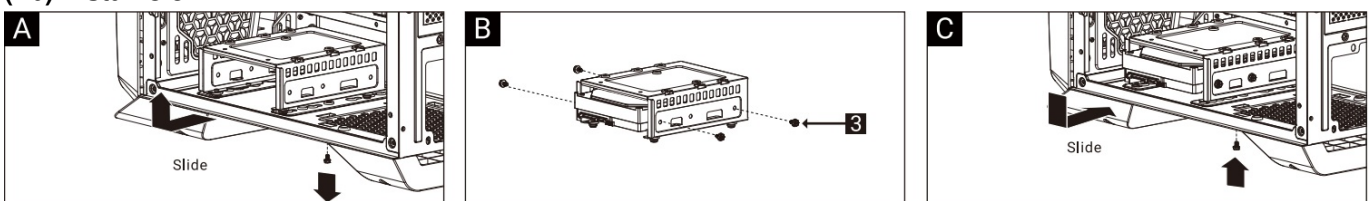

(5a) Install SSD 2.5"x2





(5b) Install SSD 2.5"x1

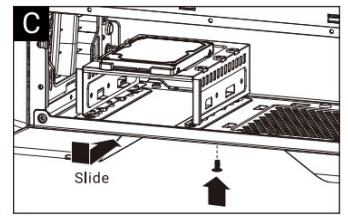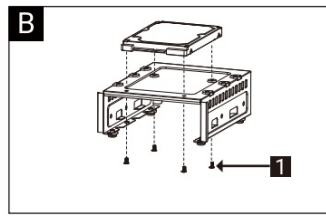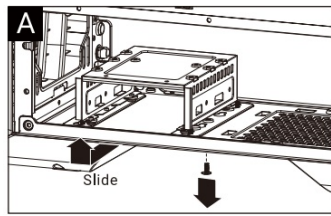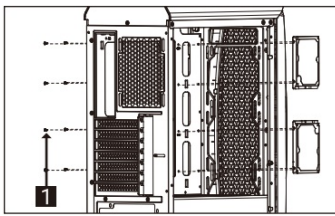





(6a) Install Front Radiator

(6b) Install Top Radiator


(6c) Install Rear Radiator

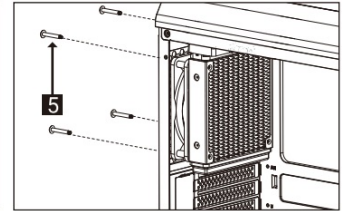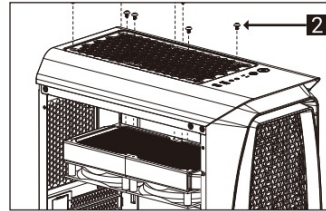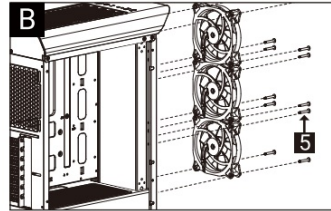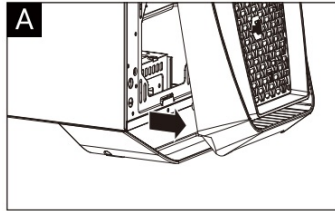


(7a) Install Front Fans

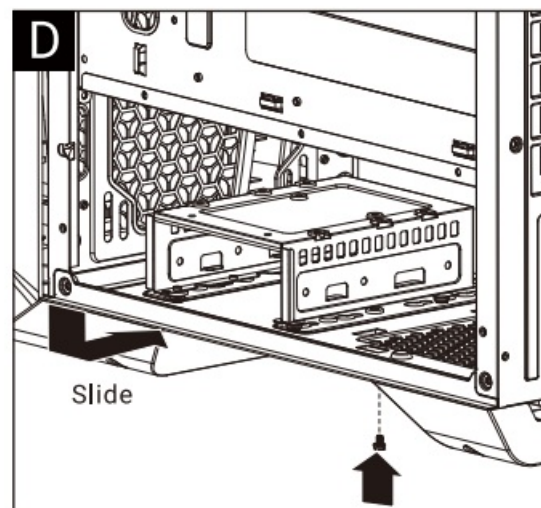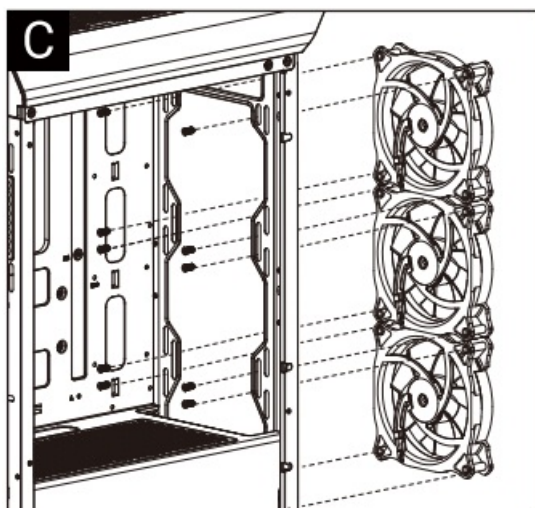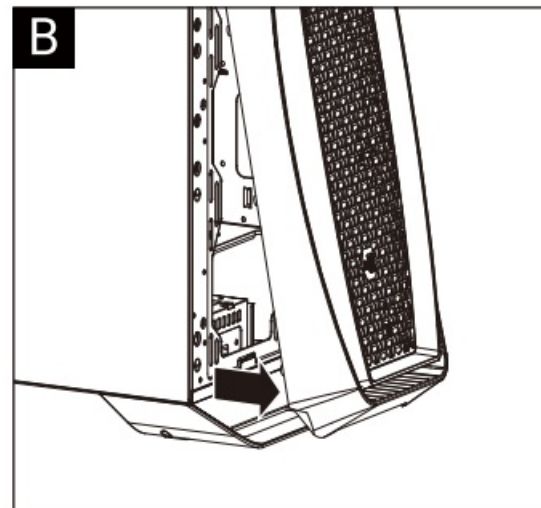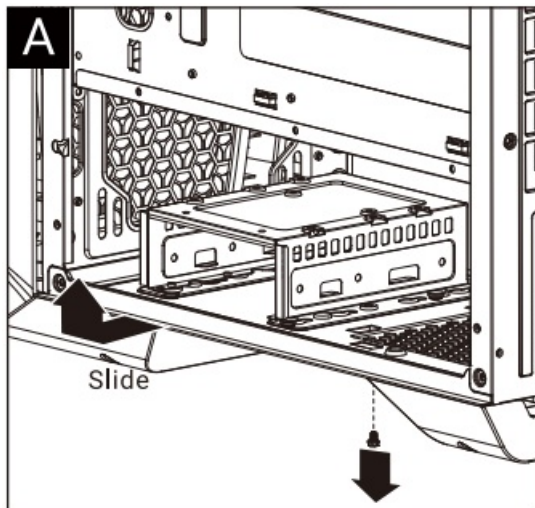


(7b) Install Top Fans

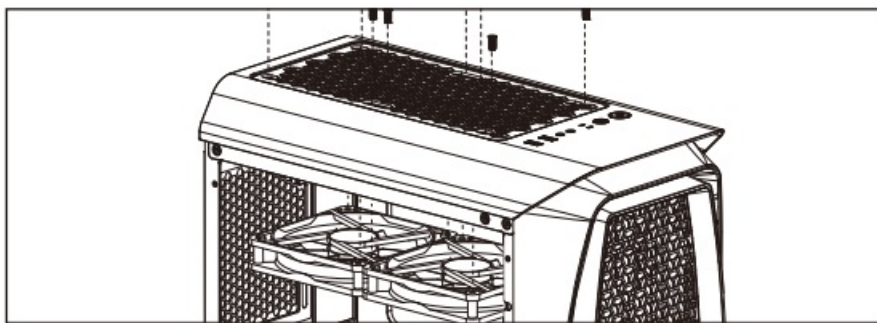



(7c) Install Rear Fans

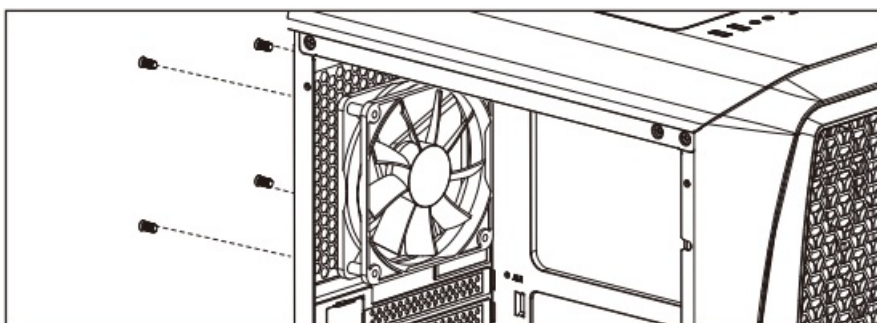

(7d) Install PSU Fans

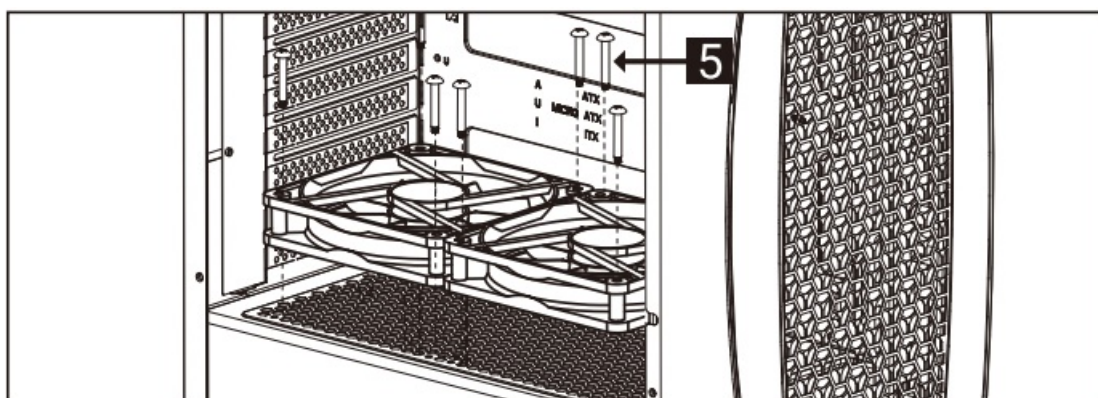


I/O Panel

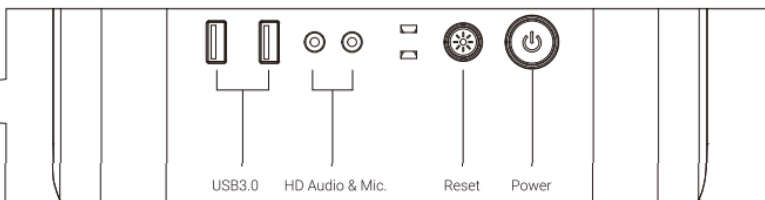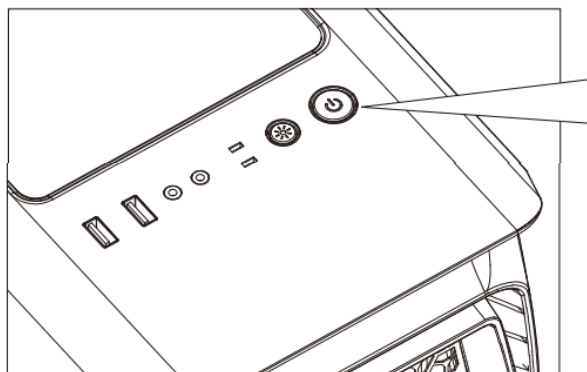

Reset : Also used as LED button if connected to the hub
 Hold for 3 secs to switch between motherboard and button control
 Hold Reset for 6 secs to turn off LED and press once to turn it back on

Note : Specifications may vary depending on your region.
 Contact your local retailer for more information.

RGB Fan Hub (H66C)

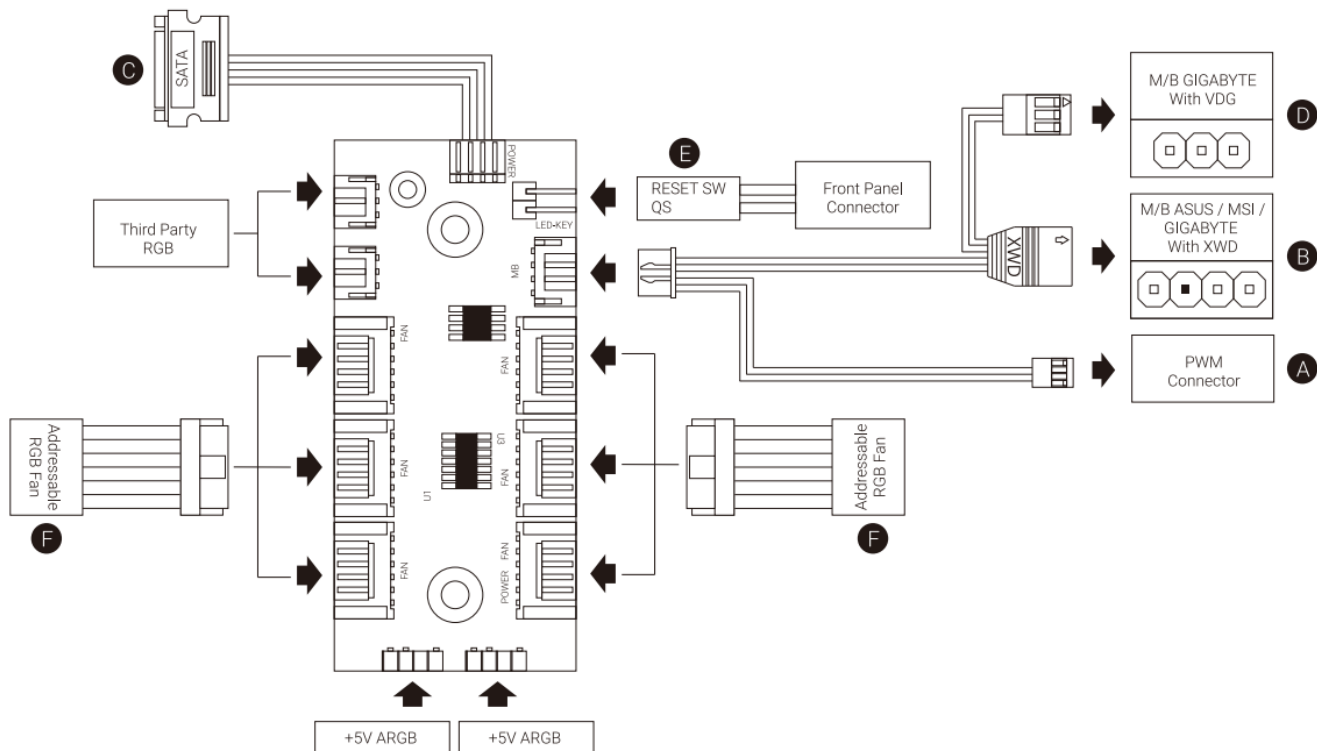

Connection Set Up User Guide

For ASUS Aura Sync, MSI Mystic Light Sync, and GIGABYTE

RGB Fusion Motherboards

1. Connect (A) to the motherboard's PWM socket
2. Connect (B) to the motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

For GIGABYTE RGB Fusion Motherboards

1. Connect (A) to the motherboard's PWM socket
2. Connect (D) to the motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

For Non-Addressable RGB Motherboards

1. Connect (A) to the motherboard's PWM socket
2. Connect the 2-Pin reset switch connector (E) with your hub.
3. Connect (C) to PSU's SATA connector
4. Use the RGB fan connectors (F) to connect the Addressable RGB fans with your hub.

Documents / Resources



[AeroCool Aero One Mid Tower CPU Case](#) [pdf] User Manual
Aero One, Aero One Mid Tower CPU Case, Mid Tower CPU Case, CPU Case