



AeroCool Aero One Mini Tower CPU Case User Manual

[Home](#) » [AeroCool](#) » AeroCool Aero One Mini Tower CPU Case User Manual 

Contents

- [1 AeroCool Aero One Mini Tower CPU Case](#)
- [2 Front I/O Panel Cable Connection](#)
- [3 Accessory Bag Contents](#)
- [4 How to install Guide](#)
- [5 Install the radiator](#)
- [6 I/O Panel](#)
- [7 RGB Fan Hub \(H66C\)](#)
- [8 Connection Set Up User Guide](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

 


AeroCool Aero One Mini Tower CPU Case



Front I/O Panel Cable Connection


Front Panel Connector

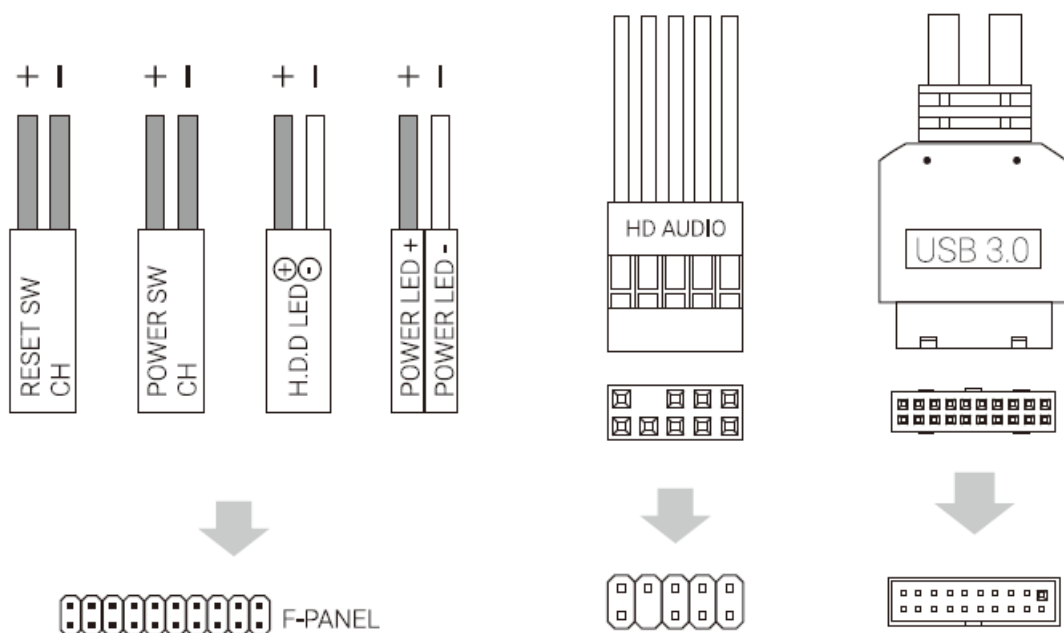

(Please refer to the motherboard's manual for further instructions).


Note: Specifications may vary depending on your region. Contact your local retailer for more information.

 Accessory Bag Contents

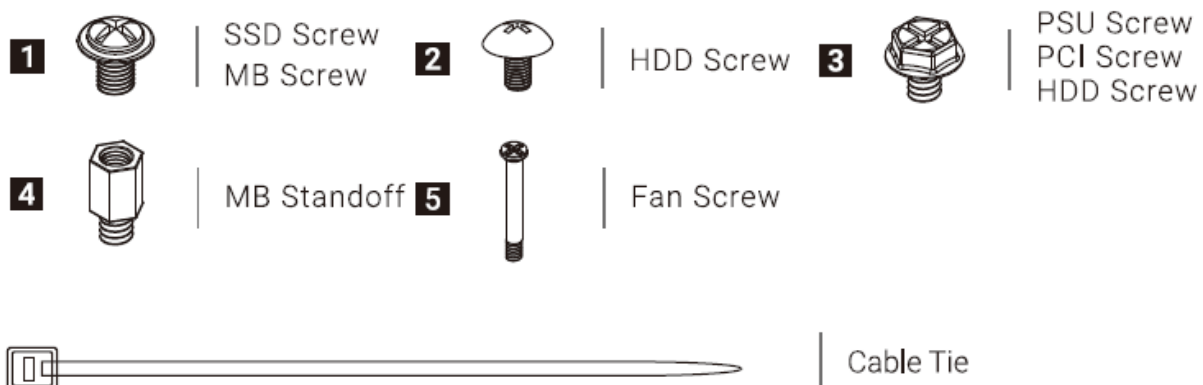


How to install Guide

 
Install Motherboard

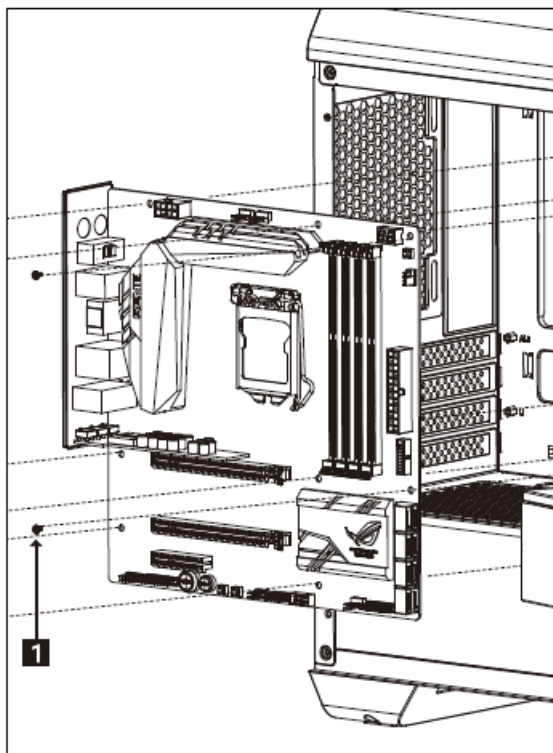




Install PSU

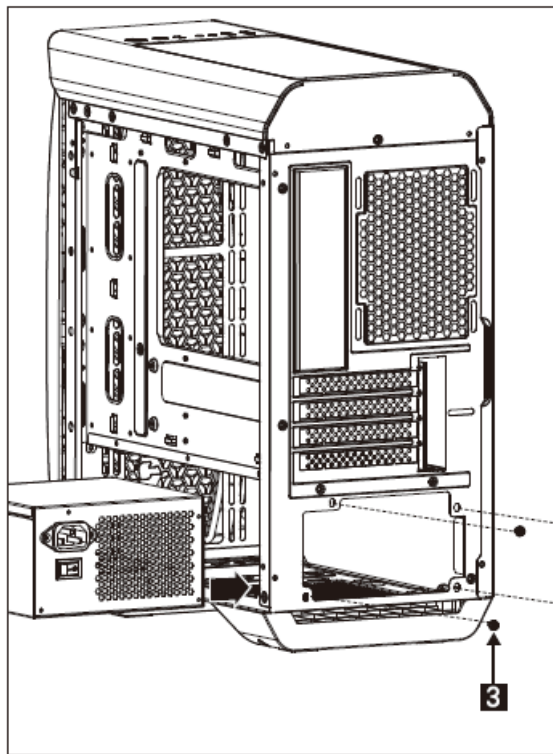 




Install add-on-Card

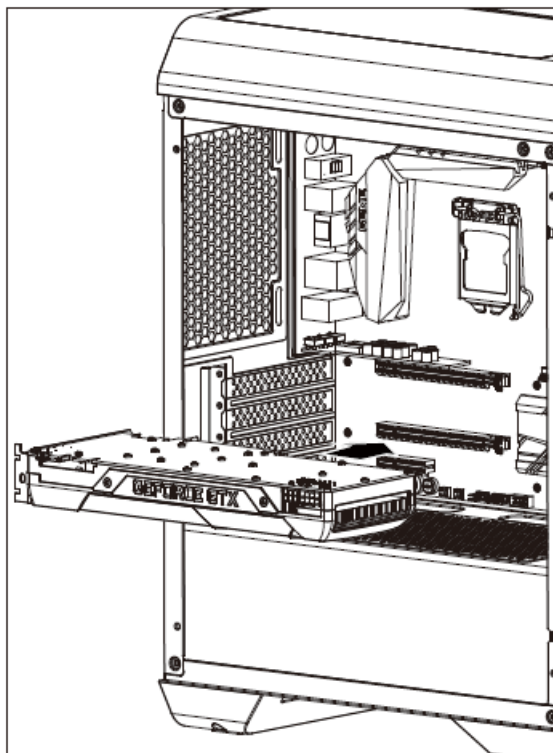 


Install 3.5" HDDx1

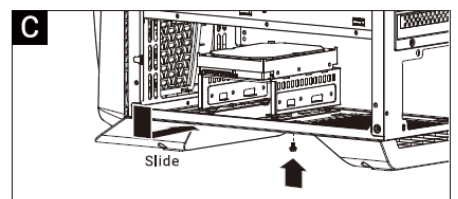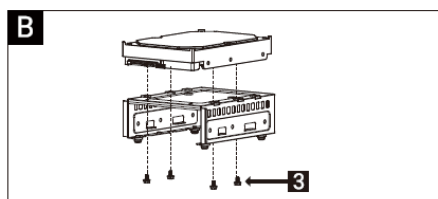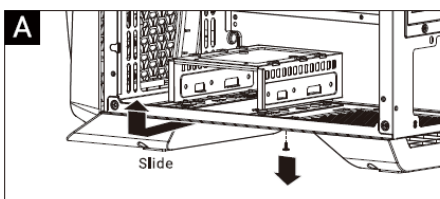   




Install 3.5" HDDx1

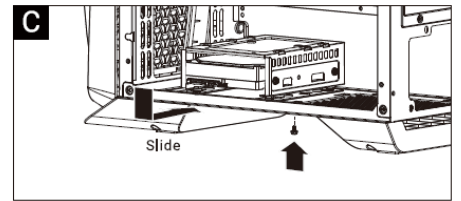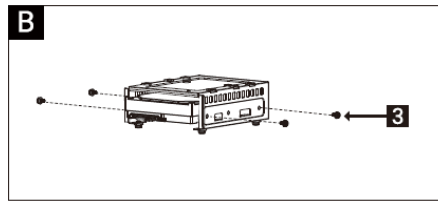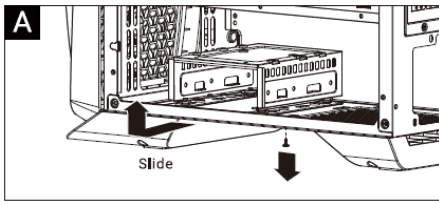   



Install SSD 2.5" x 2

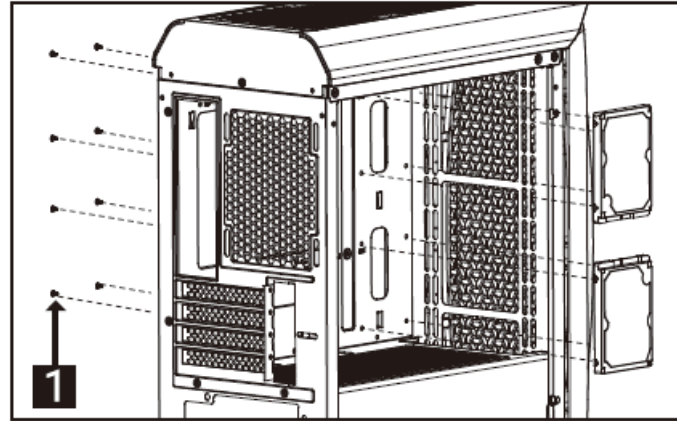 



Install SSD 2.5" x 1

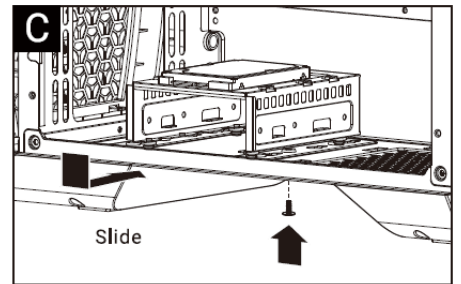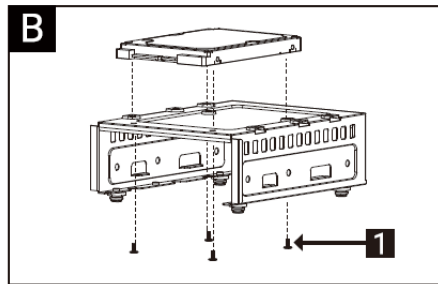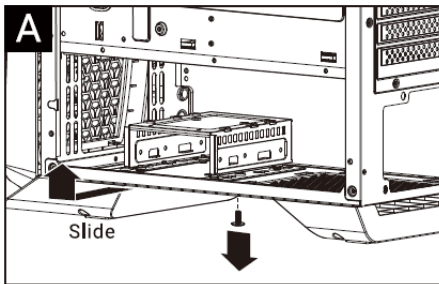   

Install Front Radiator



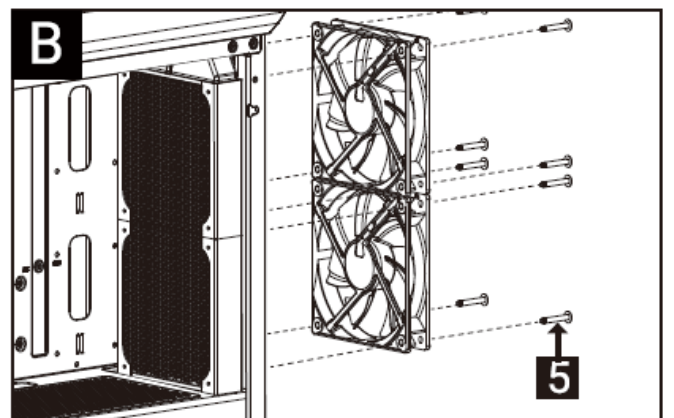 
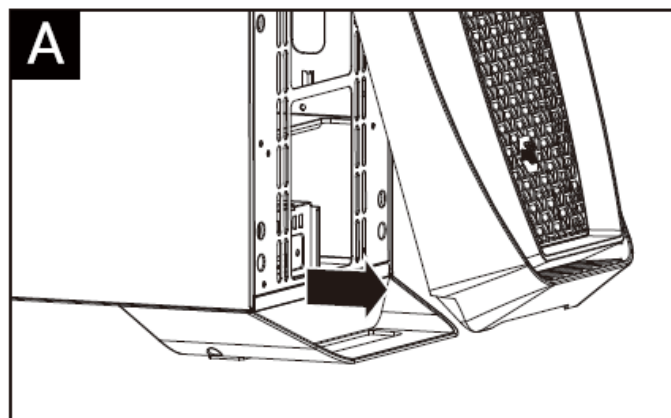 


  Install Top Radiator/ Install Rear Radiator

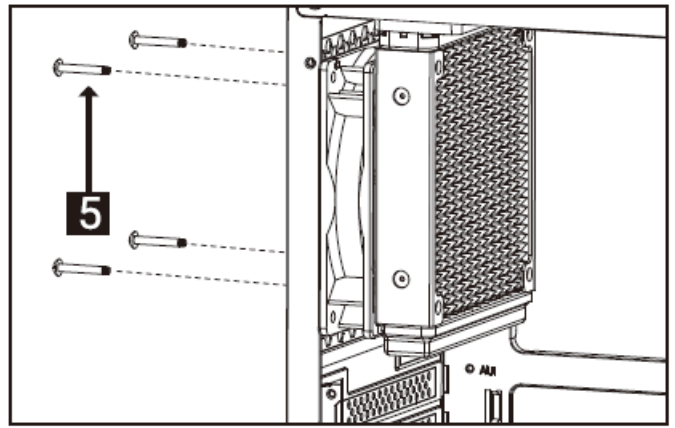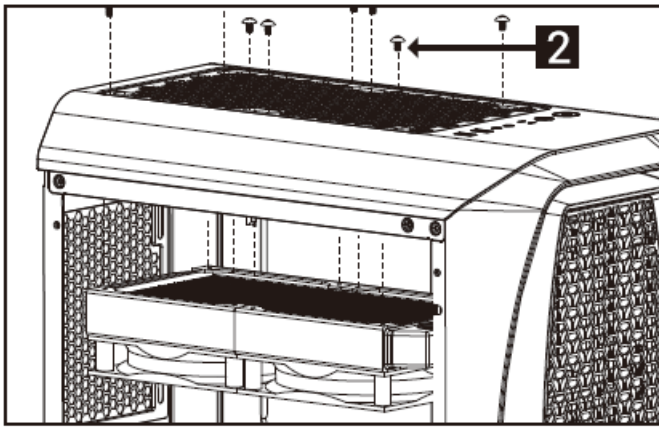


Install the radiator

    
Install Front Radiator

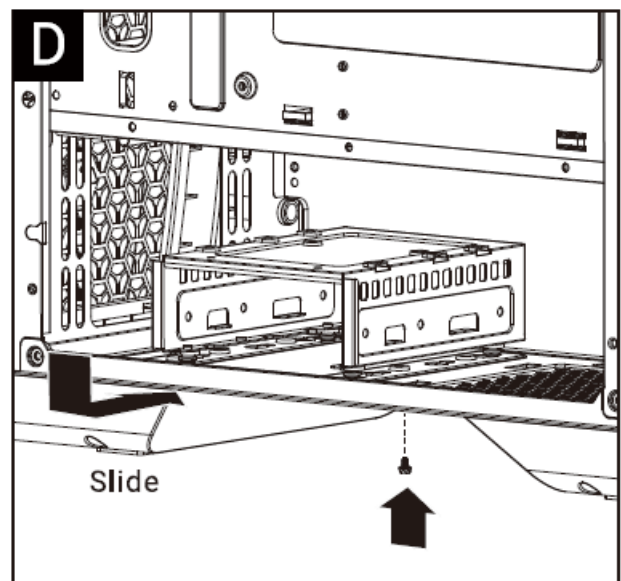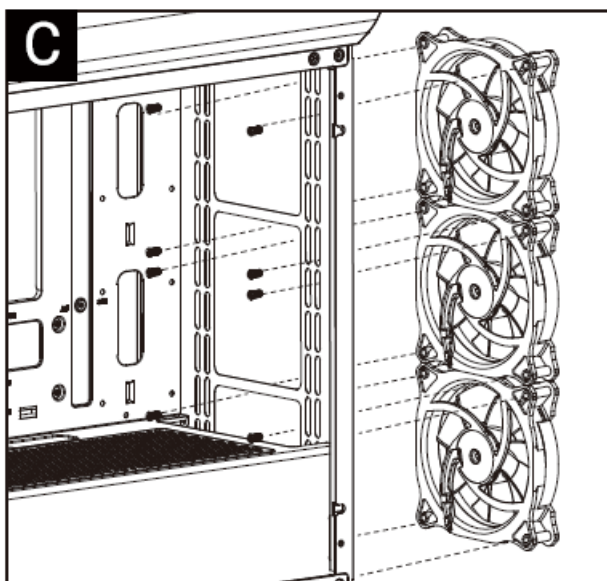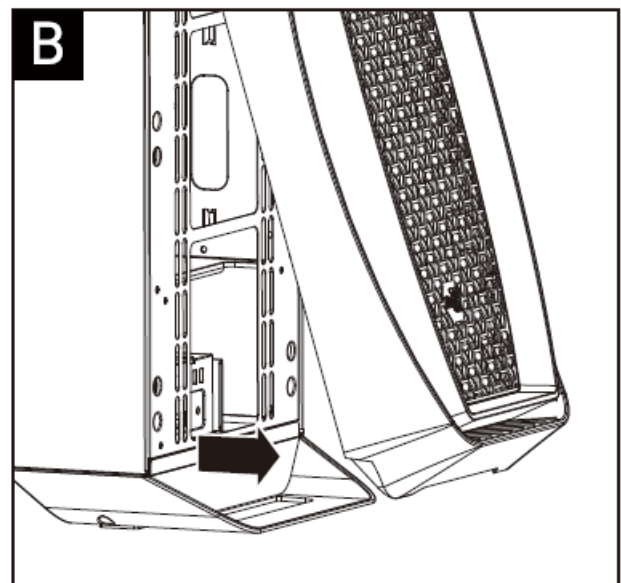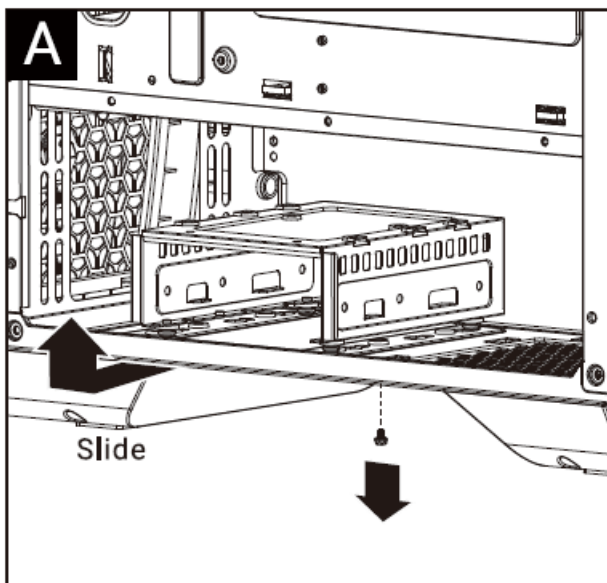


Install Top Fans

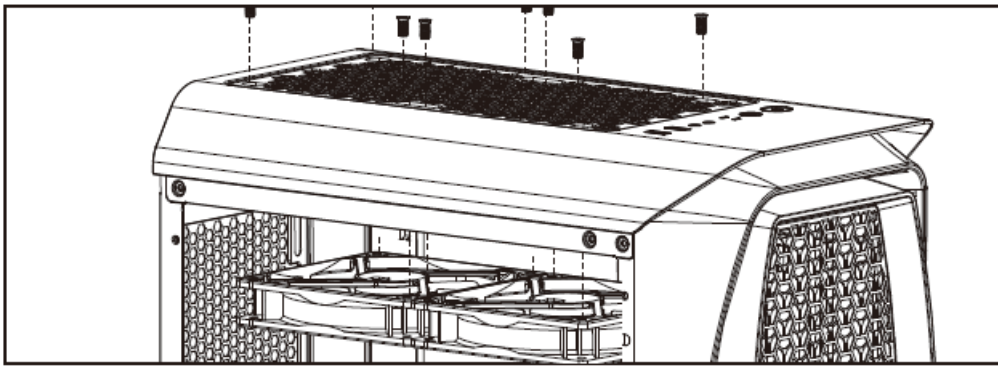 


Install Rear Fans

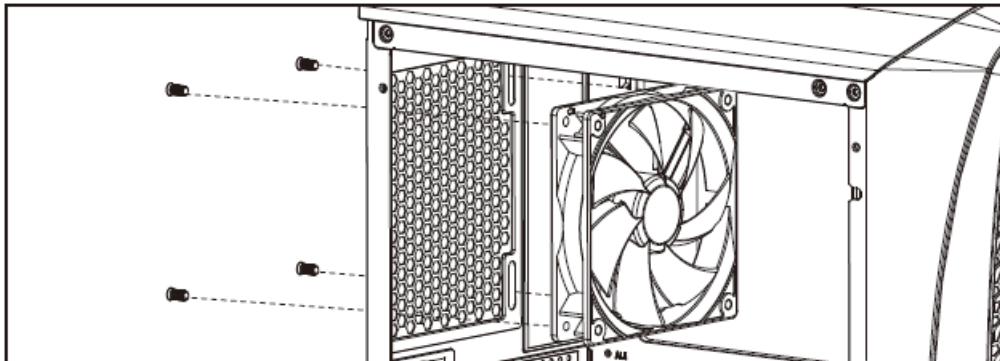 

Install PSU Fans

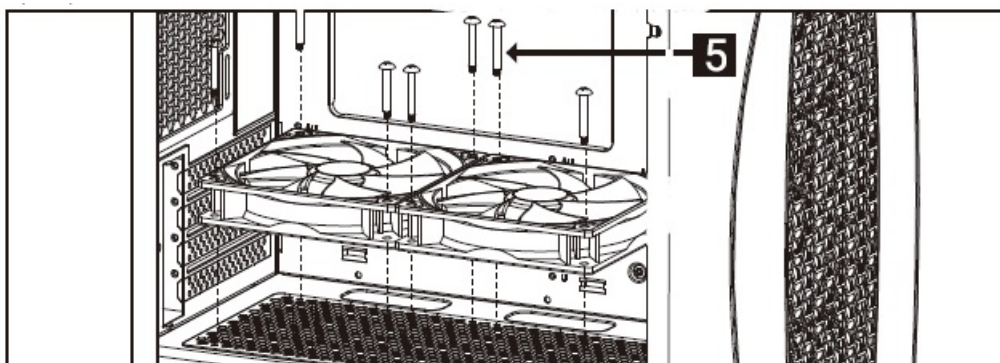 

I/O Panel

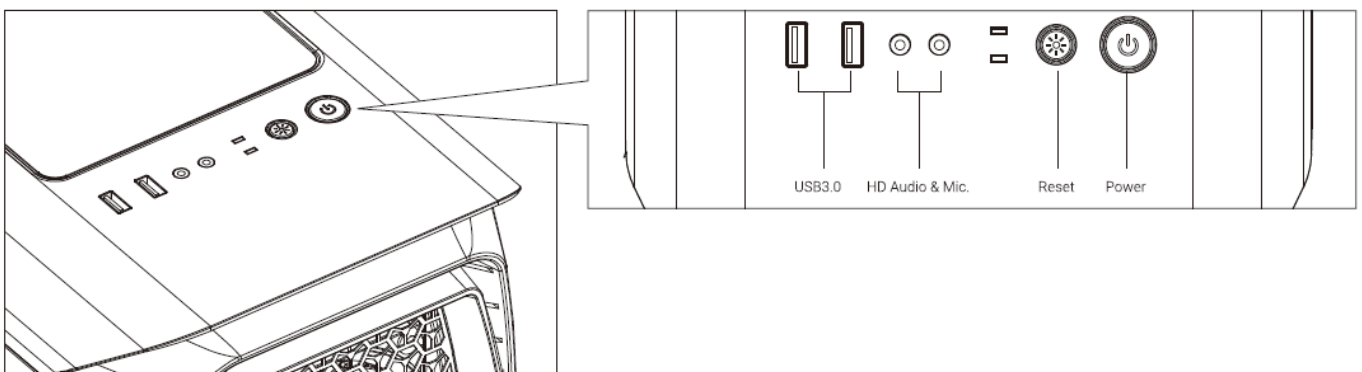 

Reset: Also used as LED button if connected to the hub

 
- Hold for 3 secs to switch between motherboard and button control

- Hold Reset for 6 secs to turn off LED and press once to turn it back on

Note

- Specifications may vary depending on your region.
- Contact your local retailer for more information.

RGB Fan Hub (H66C)

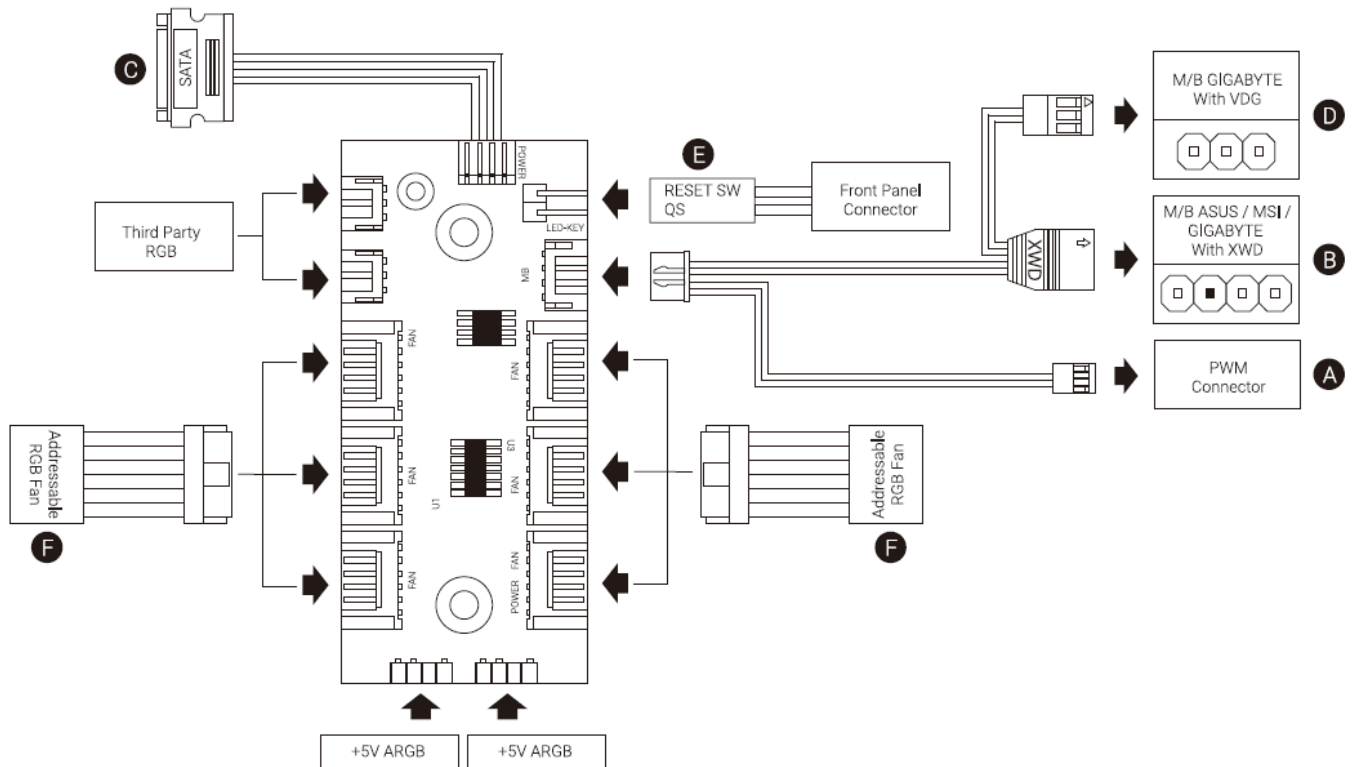

Connection Set Up User Guide

For ASUS Aura Sync, MSI Mystic Light Sync, and GIGABYTE

RGB Fusion Motherboards

1. Connect (A) to motherboard's PWM socket
2. Connect (B) to motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

 
For GIGABYTE RGB Fusion Motherboards

1. Connect (A) to motherboard's PWM socket
2. Connect (D) to motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

For Non-Addressable RGB Motherboards

1. Connect (A) to motherboard's PWM socket
2. Connect the 2-Pin reset switch connector (E) with your hub.
3. Connect (C) to PSU's SATA connector
4. Use the RGB fan connectors (F) to connect the Addressable RGB fans with your hub.

Documents / Resources

	AeroCool Aero One Mini Tower CPU Case [pdf] User Manual Aero One Mini, Aero One Mini Tower CPU Case, Tower CPU Case, CPU Case
	AeroCool Aero One Mini Tower CPU Case [pdf] User Manual Aero One Mini, Aero One Mini Tower CPU Case, Tower CPU Case, CPU Case

Manuals+.