


AeroCool Atomic User Manual

Home » AeroCool » AeroCool Atomic User Manual



Atomic

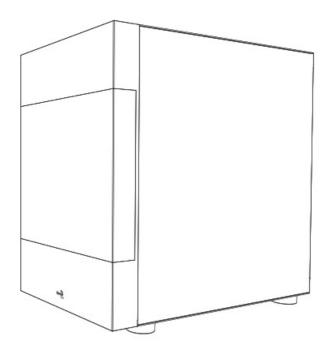

User Manual


Contents

- 1 Front I/O Panel Cable Connection
- **2 Accessory Bag Contents**
- 3 How to Install
- 4 Front |/O Panel Cable Connection
- 5 Documents / Resources
- **6 Related Posts**


Front I/O Panel Cable Connection

Front Panel Con nector

(Please refer to the motherboard's manual for further instructions).

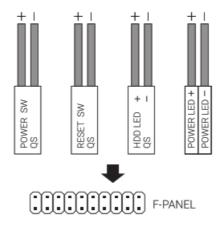

Note: Specifications may vary depending on your region. Contact your local retailer for more information.

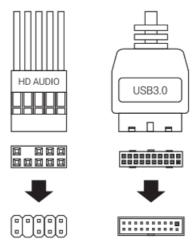

Accessory Bag Contents





SSD Screw MB Screw





HDD Screw






PSU Screw






MB Standoff

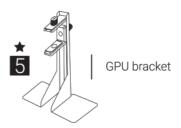


How to Install

1. Install Motherboard

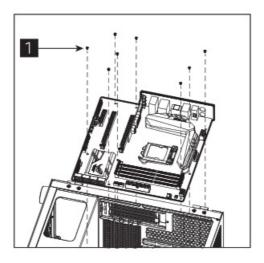


2. Install PUS

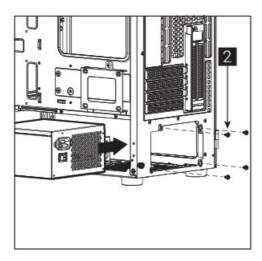


Front |/O Panel Cable Connection


* GPU Bracket included only for a specific version(s). Compare the EAN code on the package sticker with website specs to find out if your version comes with a bracket.


(5a) Install 2.5" SSD x 1

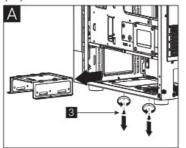

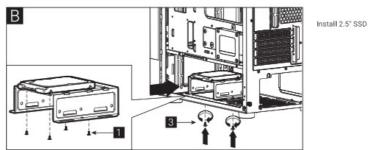


(5b) Install 2.5" SSD x 1

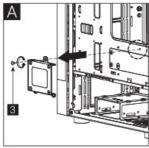

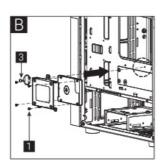

(5c) Install 2.5" SSD x 2

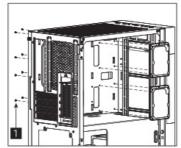


(6a) Instal



(6b) Insta



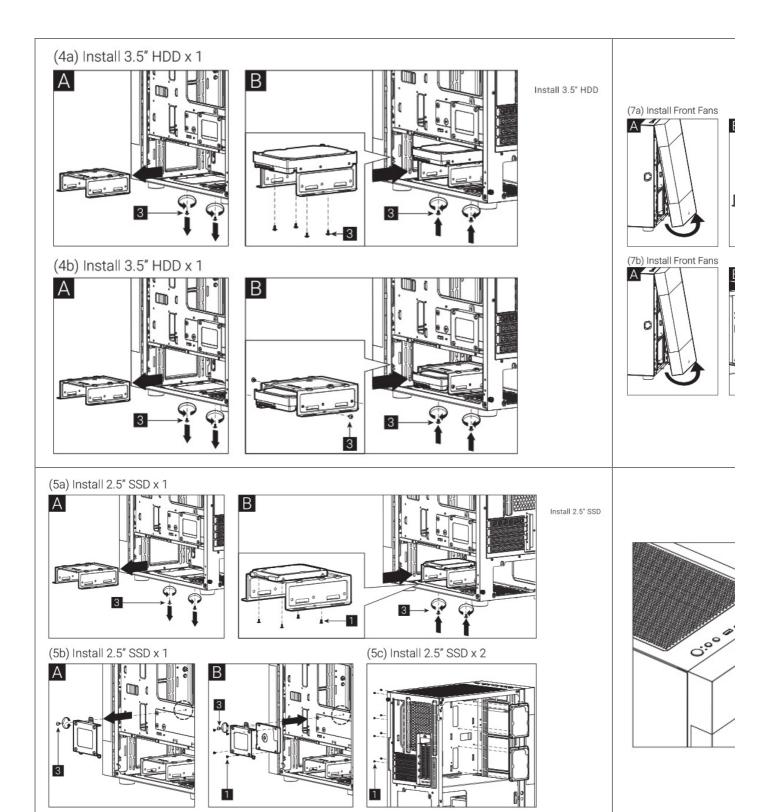

*LED Control Button Instructions

Press and hold the LED control button for 2 sec to switch between MB and LED button control mode. To Turn off the LED, cycle through the LED modes.

Note: Specifications may vary depending on your region.

Contact your local retailer for more information.

To learn more about how to connect your ARGB, please visit the product page at aerocool.io (for ARGB compatible versions)

site: https://andpro.ru ten: +7 (495) 545-4870 email: info@andpro.ru

Documents / Resources



AeroCool Atomic [pdf] User Manual Atomic, Computer Case, System Case

Manuals+,