



AeroCool BAS Series CPU Air Cooler User Manual

[Home](#) » [AeroCool](#) » AeroCool BAS Series CPU Air Cooler User Manual 



BAS Series
BAS AUG / BAS U / BAS U-PWM

Contents

[1 BAS Series CPU Air Cooler](#)

[2 Documents / Resources](#)

[3 Related Posts](#)

BAS Series CPU Air Cooler










Socket : LGA 1150 / 1151 / 1155 / 1156


Socket : AM4 / AM3+ / AM3 / AM2+ / AM2 / FM2 / FM1

User's Manual

Intel

AMD

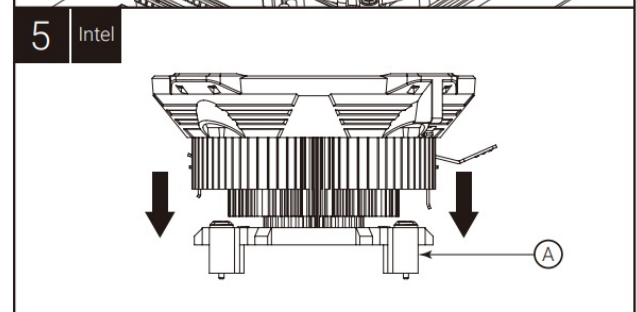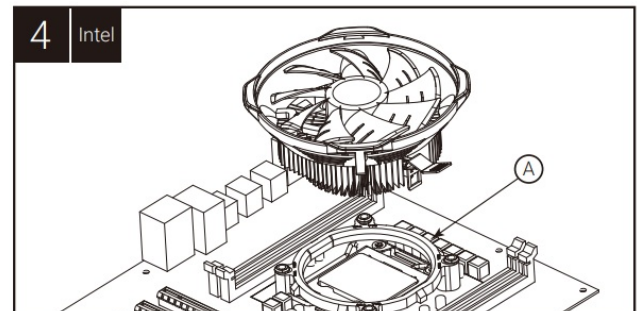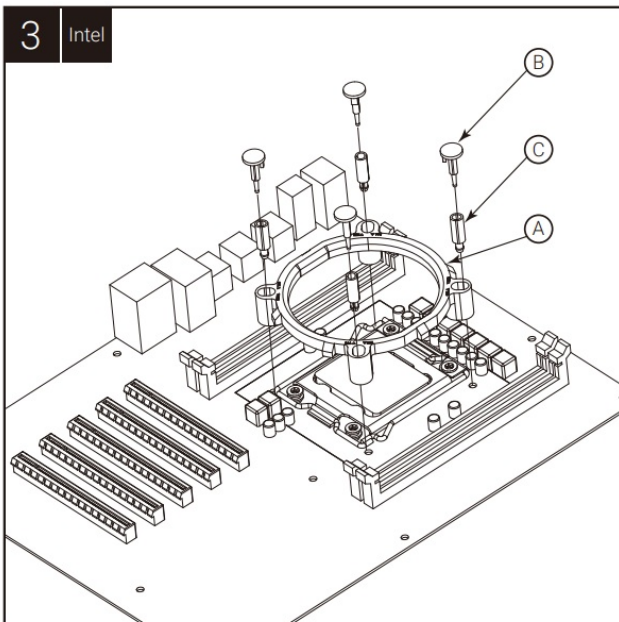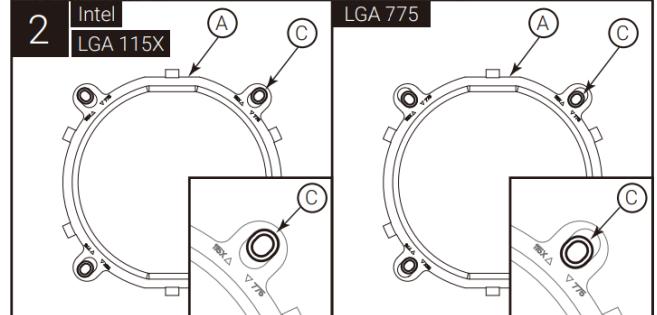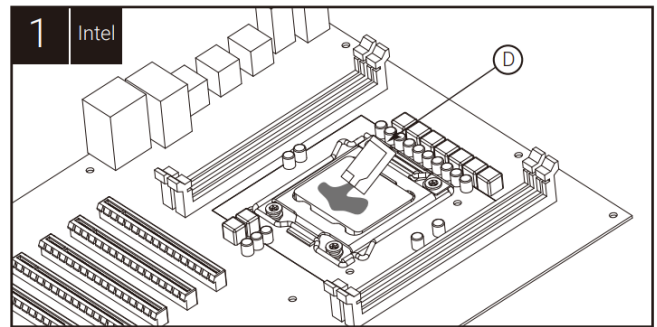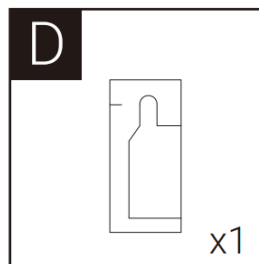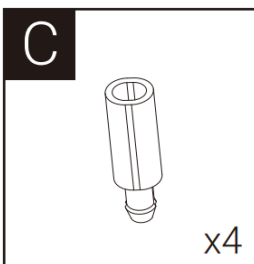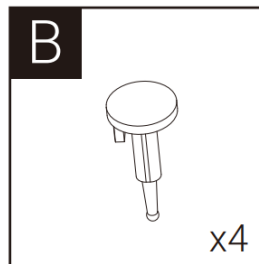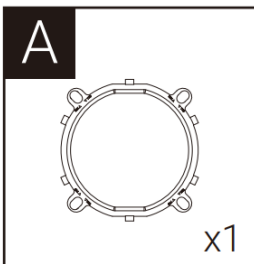




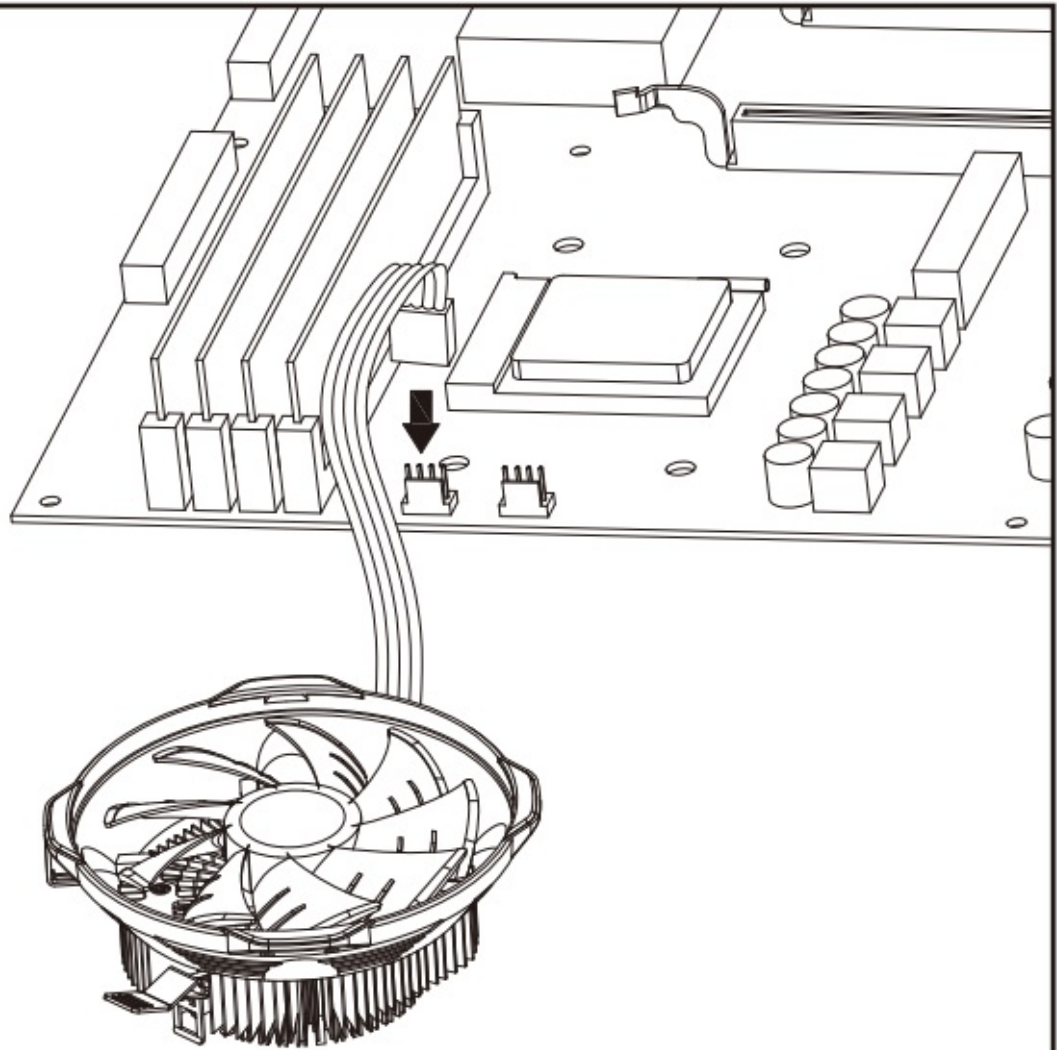


BAS Series

BAS AUG / BAS U / BAS U-PWM

Socket : LGA 1150 / 1151 / 1155 / 1156

Socket : AM4 / AM3+ / AM3 / AM2+ / AM2 / FM2 / FM1

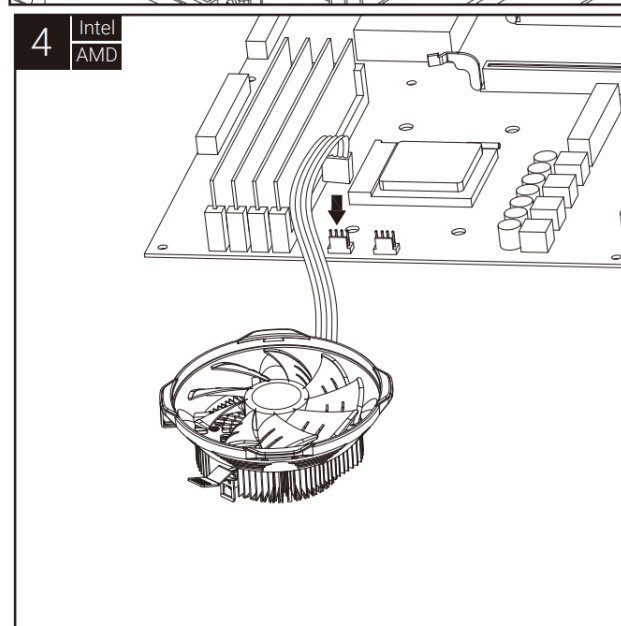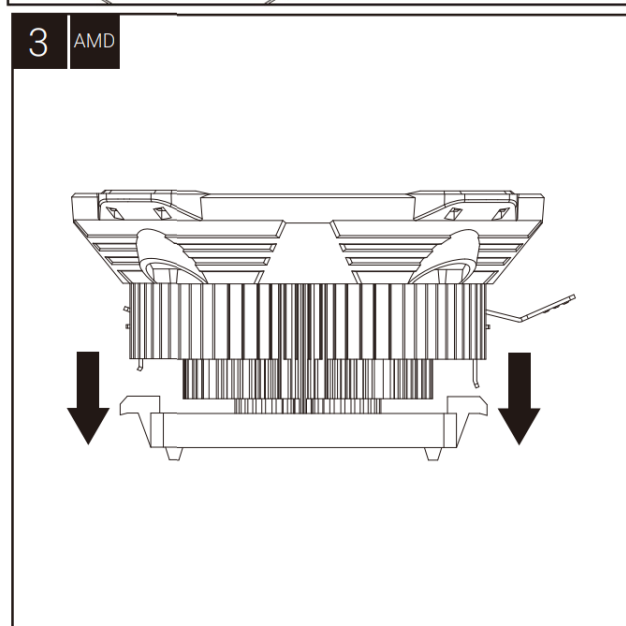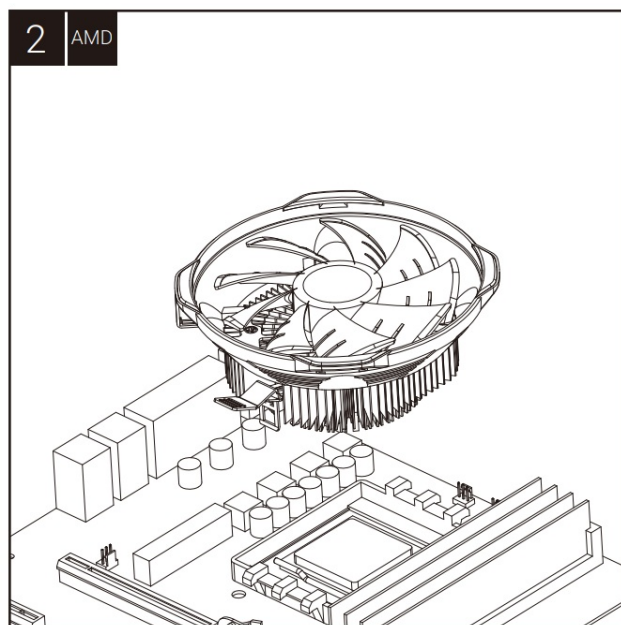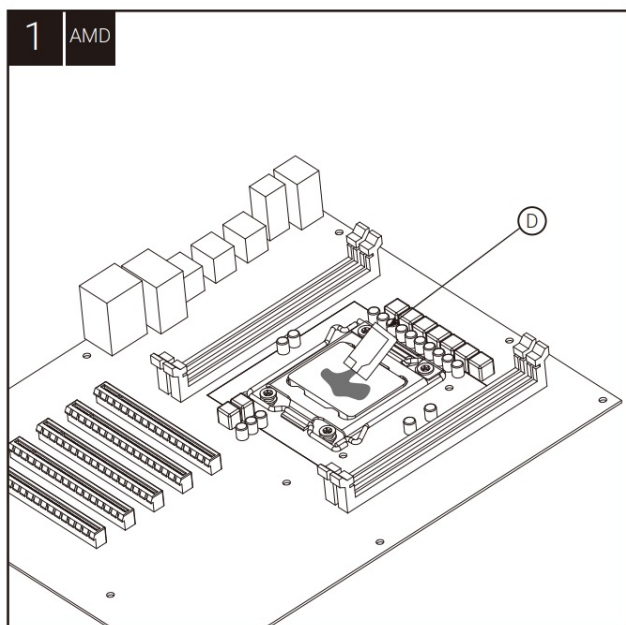

TM.by
ONLINE STORE

<https://tm.by>
[TM.by](https://tm.by)

Documents / Resources

	AeroCool BAS Series CPU Air Cooler [pdf] User Manual BAS AUG, BAS U, BAS U-PWM, BAS Series CPU Air Cooler, BAS Series, CPU Air Cooler, Air Cooler, Cooler
---	--