



AeroCool Cylon RGB microATX Case User Manual

[Home](#) » [AeroCool](#) » AeroCool Cylon RGB microATX Case User Manual 

Contents

- [1 AeroCool Cylon RGB microATX Case](#)
- [2 Front /O Panel Cable Connection](#)
- [3 INSTALLATION INSTRUCTIONS](#)
- [4 LED SWITCH](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)




AeroCool Cylon RGB microATX Case



Front /O Panel Cable Connection

(Please refer to the motherboard's manual for further instructions).

Front Panel Connector

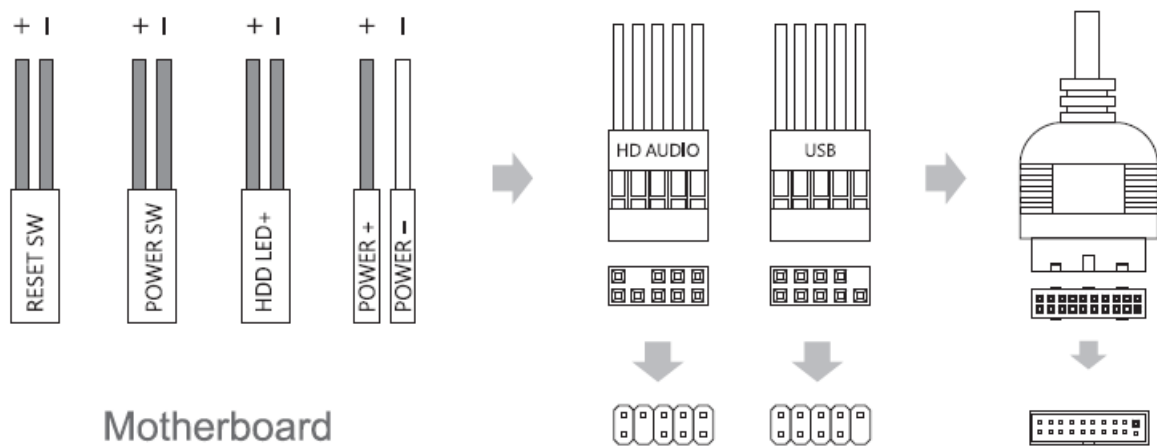

Accessory Bag Contents



Fan Screw



MB Standoff




SSD Screw
MB Screw




PSU Screw
PCI Screw

INSTALLATION INSTRUCTIONS


1. MOTHERBOARD

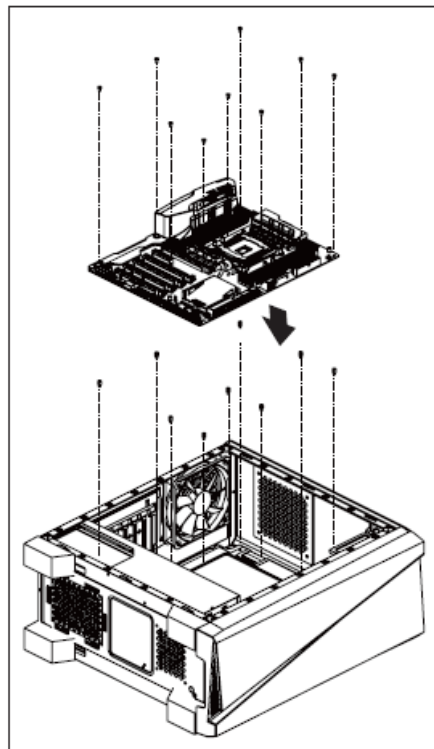



2. PSU

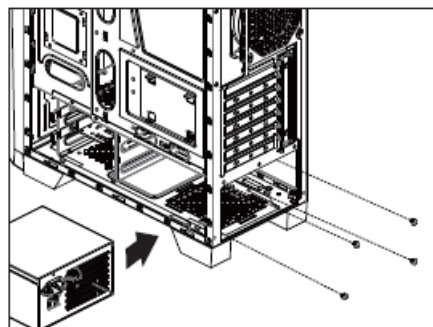



3. ADD ON CARD

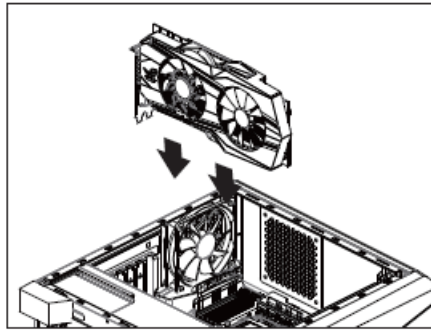


4. 3.5" HDD x 2

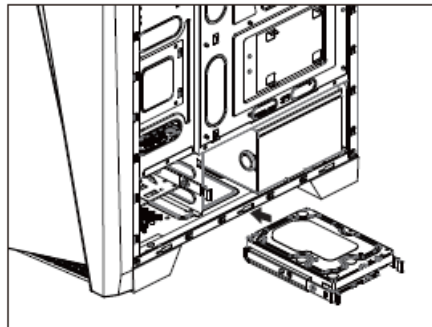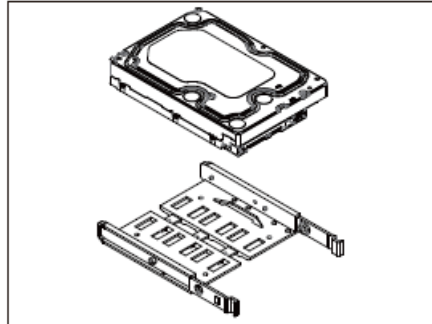


5. 2.5" SSD x 2

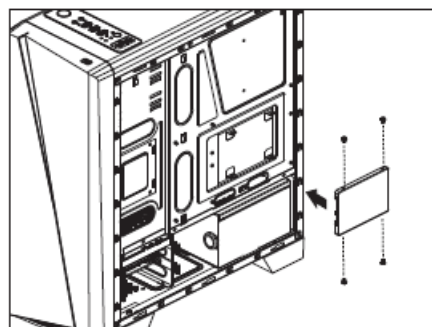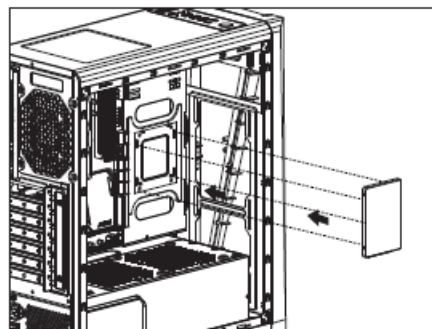


6. RADIATOR

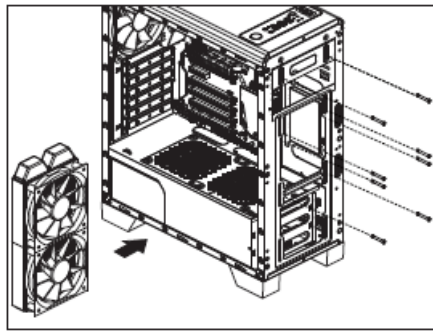


7. FAN

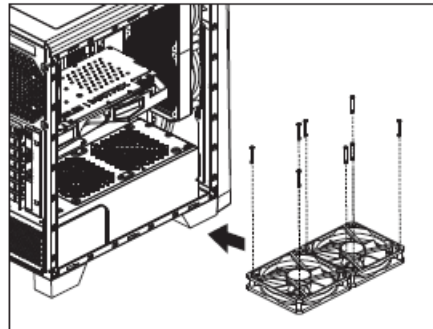


LED SWITCH

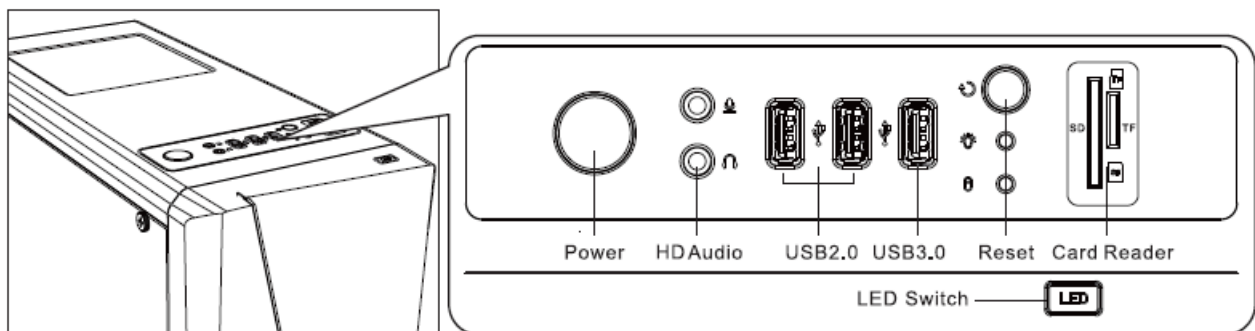

 LED Mode Switch (Hold switch for secs to turn off LED)



Documents / Resources

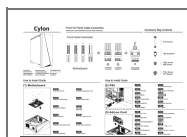

[AeroCool Cylon RGB microATX Case](#) [pdf] User Manual
Cylon, Cylon RGB microATX CPU Case, RGB microATX CPU Case, CPU Case