



AeroCool Interstellar ARGB Mid Tower Case User Manual

[Home](#) » [AeroCool](#) » AeroCool Interstellar ARGB Mid Tower Case User Manual 

AeroCool Interstellar ARGB Mid Tower Case User Manual



Contents

[1 Front I/O Cable Connection](#)

[2 Accessory Bag Contents](#)

[3 How to Install](#)


[4 Install add-on Card](#)

[5 Documents / Resources](#)


[5.1 References](#)

[6 Related Posts](#)

Front I/O Cable Connection

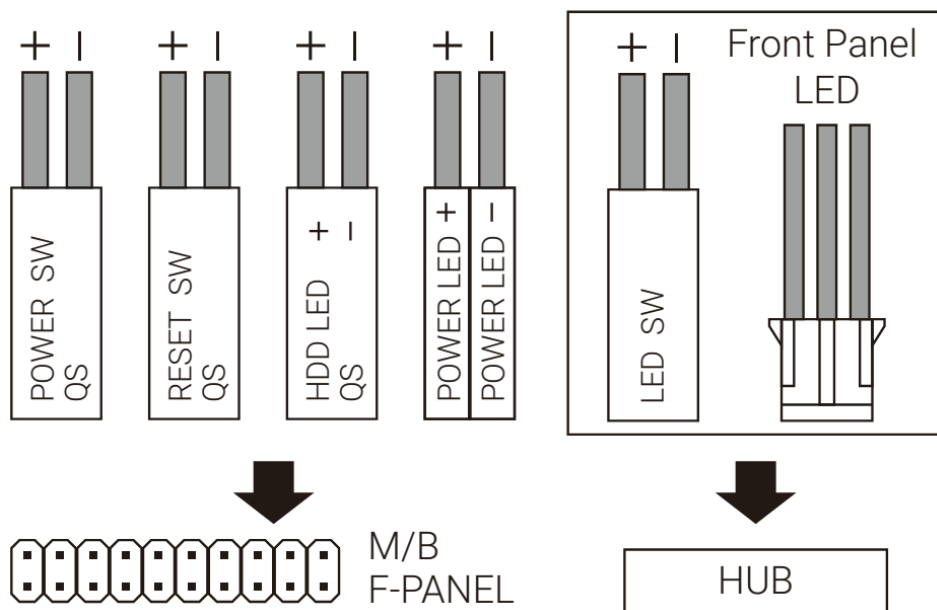

Note : Specifications may vary depending on your region. Contact your local retailer for more information.

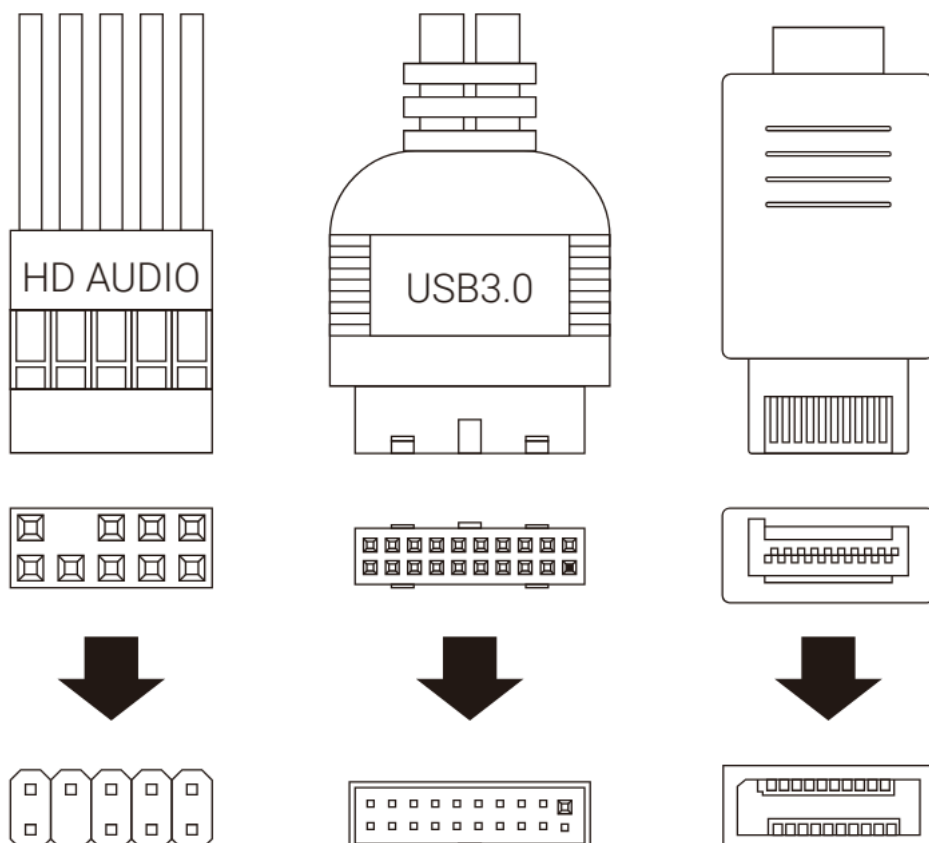

Accessory Bag Contents

1. SSD Screw MB Screw



2. PSU Screw PCI Screw



3. HDD Screw



4. 3.5" HDD Thumb Screw



5. MB Standoff



6. Standoff Socket



7. GPU bracket




8. Cable tie




How to Install

(1) Install Motherboard

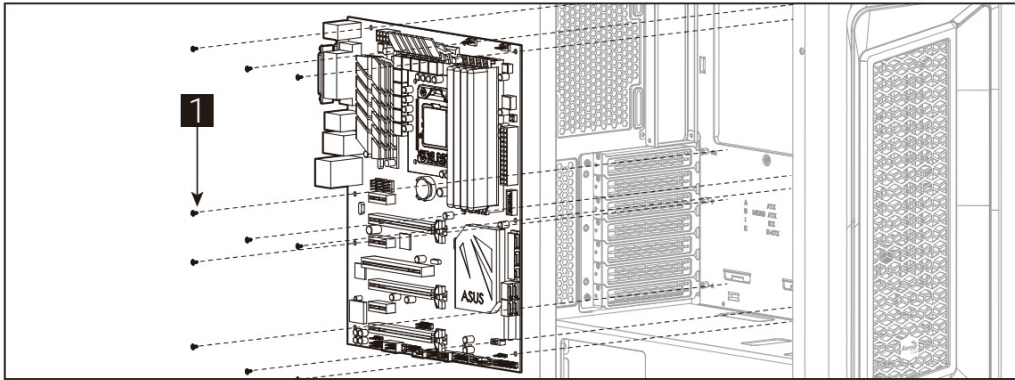



Install Motherboard


(2) Install PSU

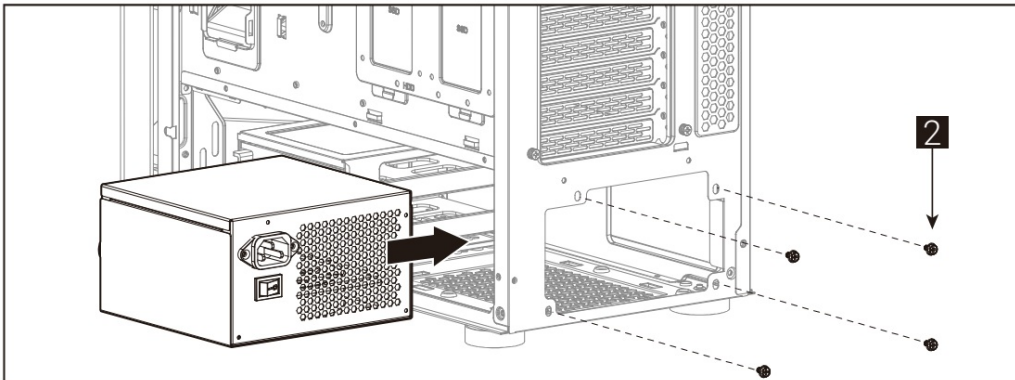


Install PSU



(3a) Install Add-on Card

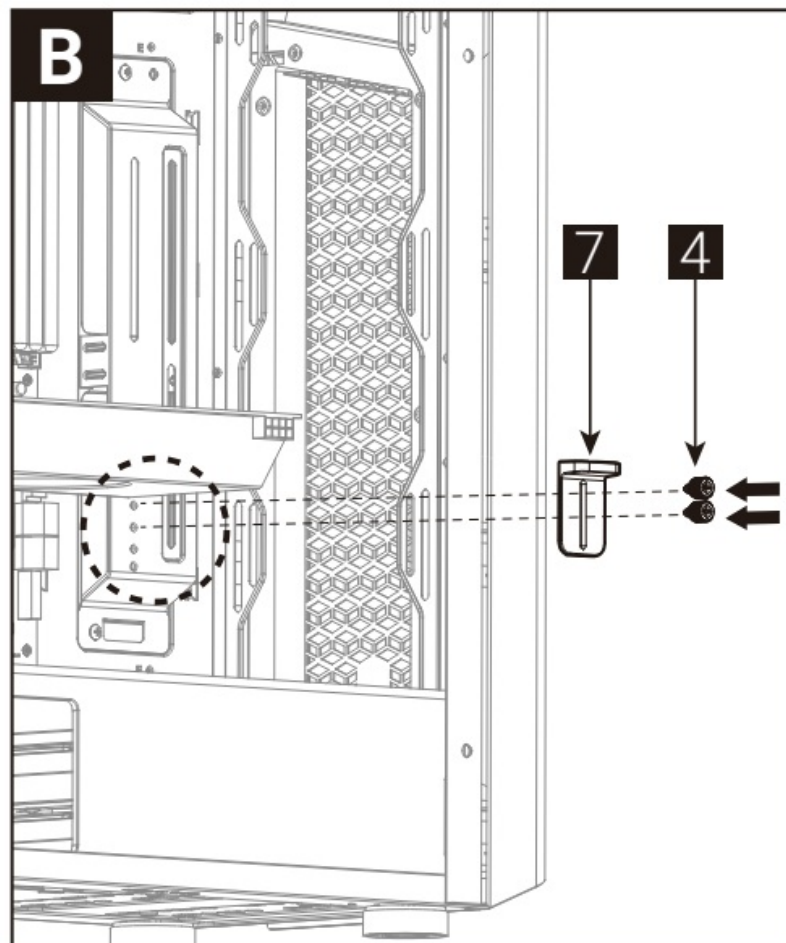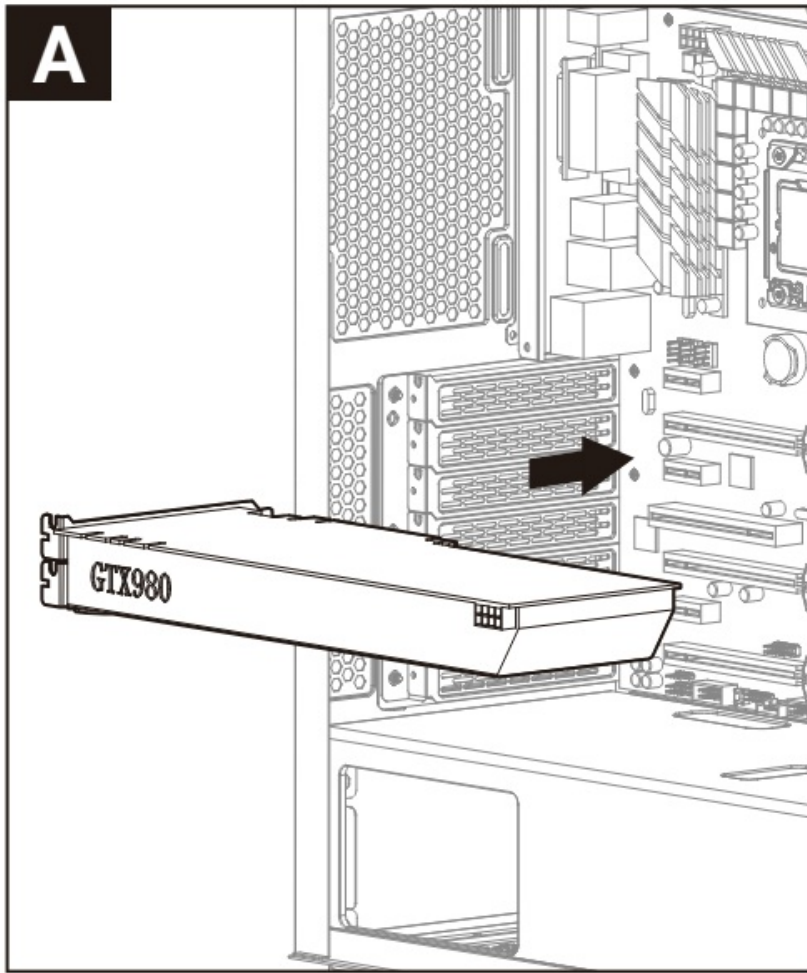


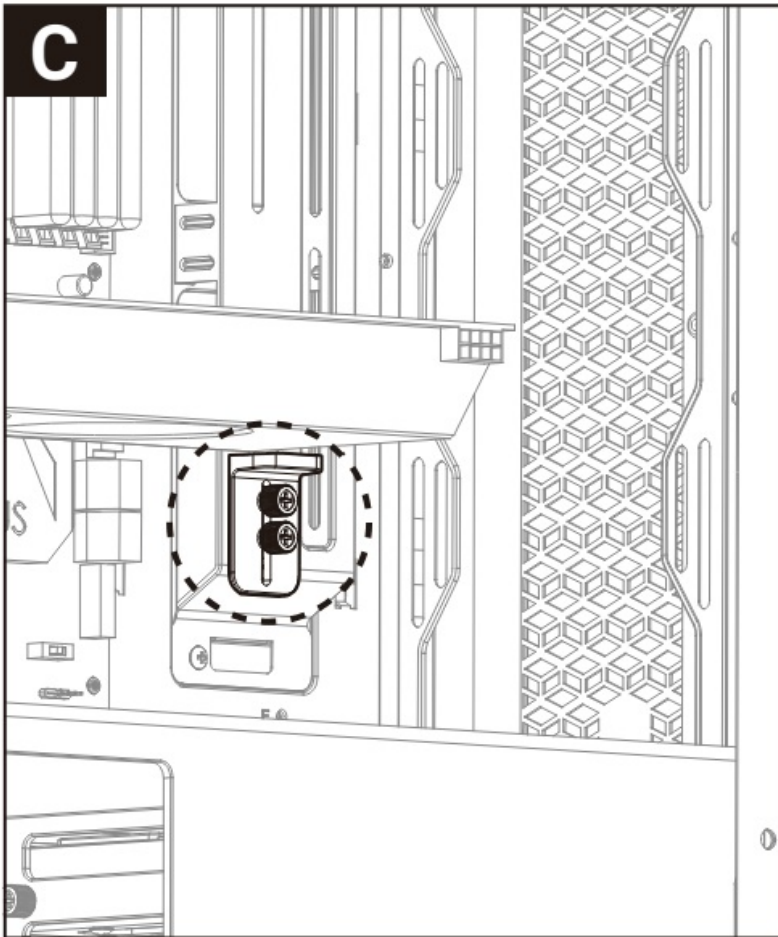

(3b) Install Add-on Card

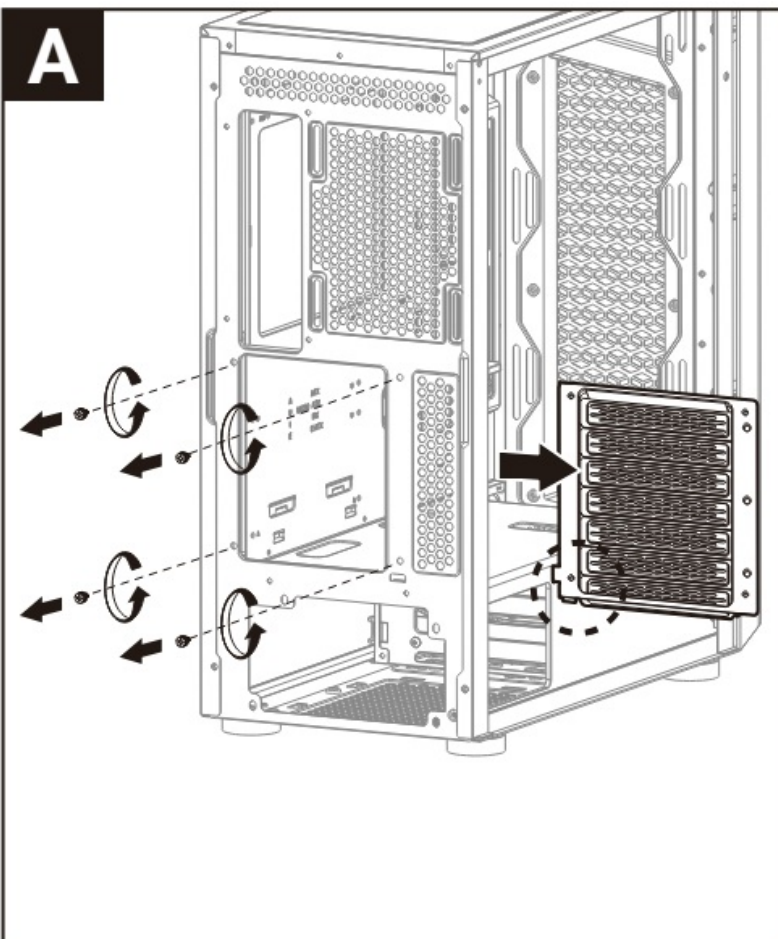


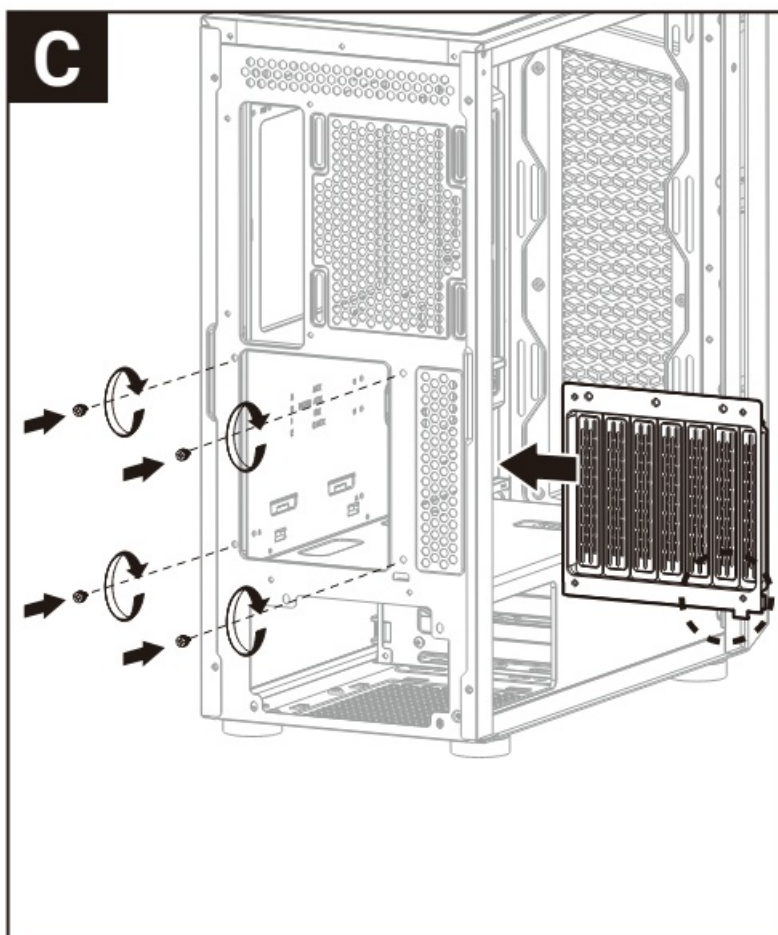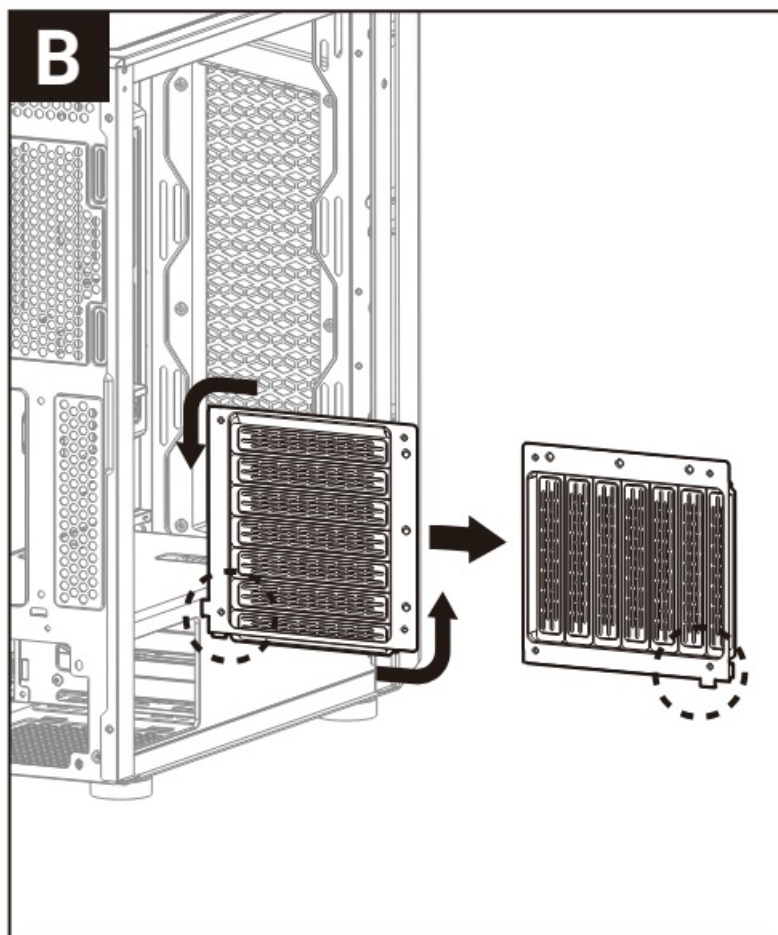

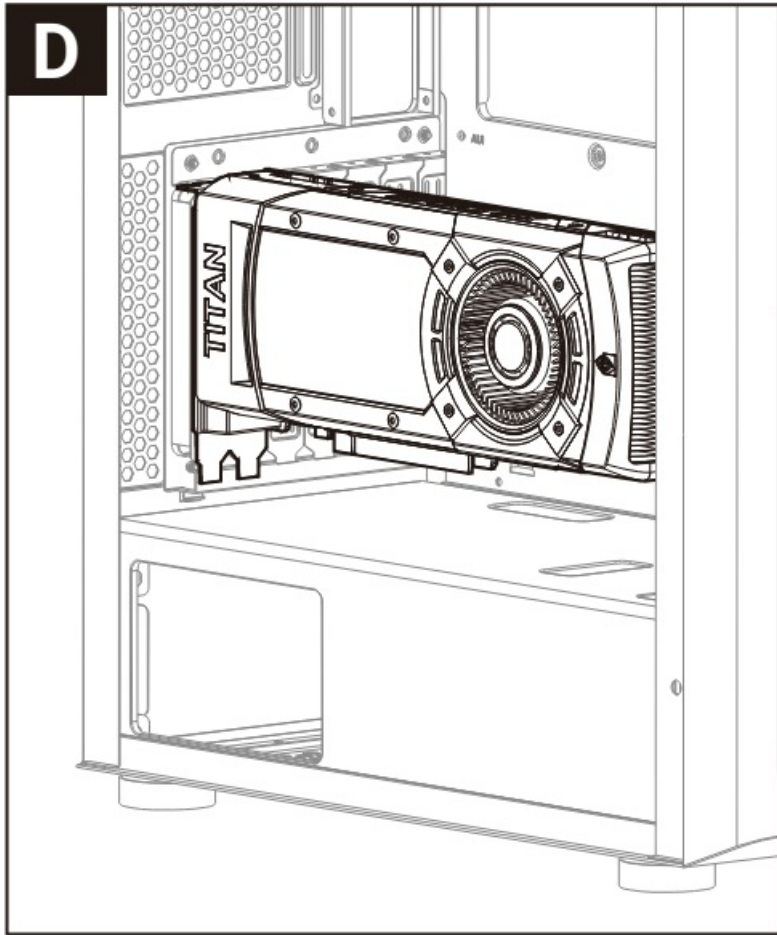


Install add-on Card

(4) Install 3.5" HDD x2

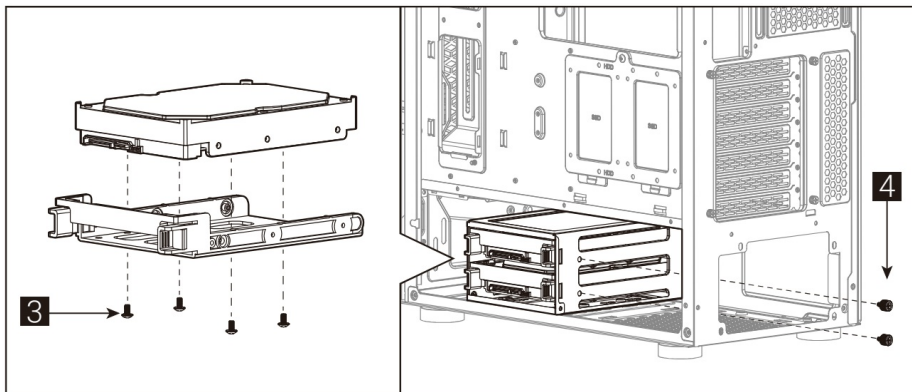


Install 3.5" HDD

(5a) Install 2.5" SSD x2


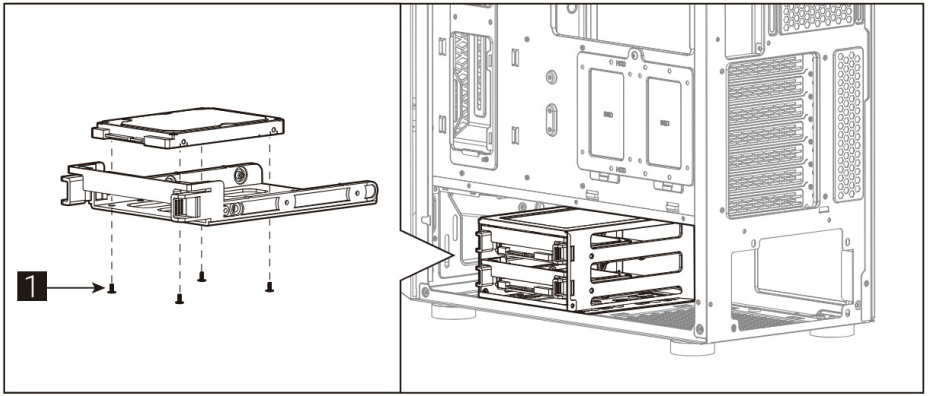



(5b) Install 2.5" SSD x2

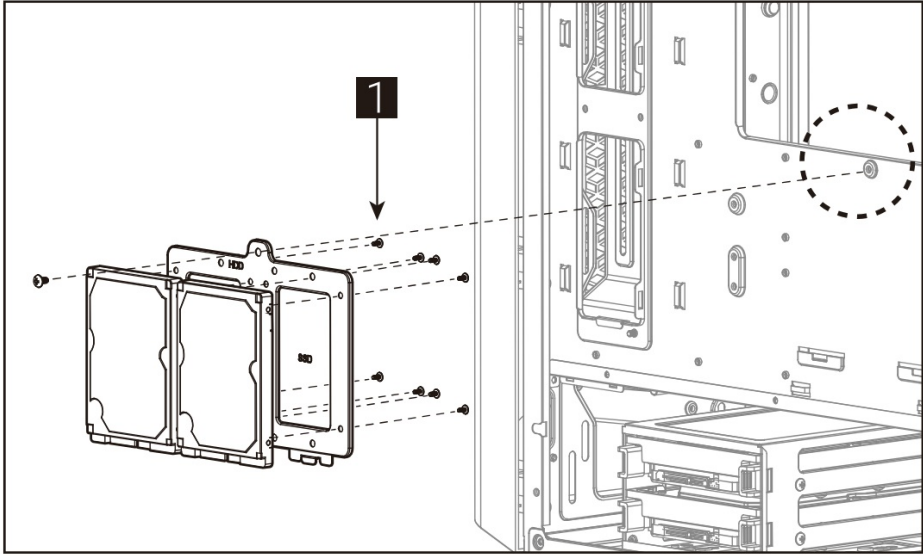


Install 2.5" SSD

(6a) Install Front Fans

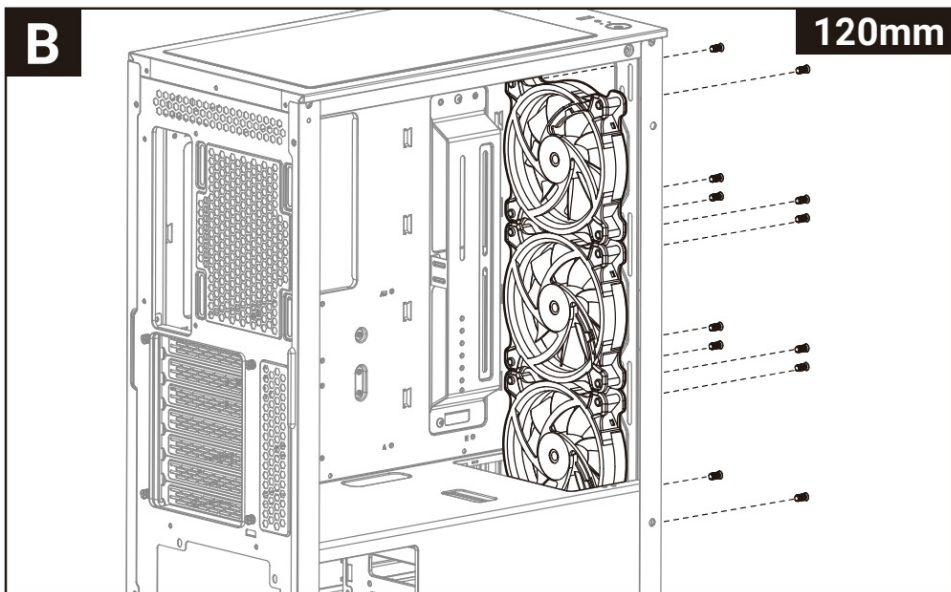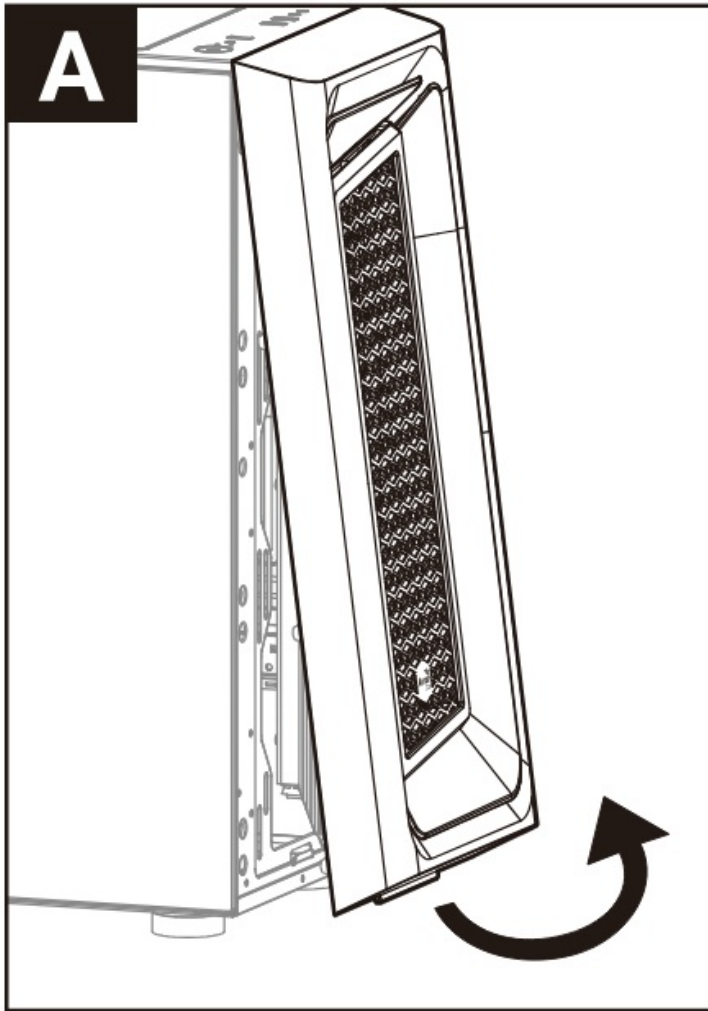


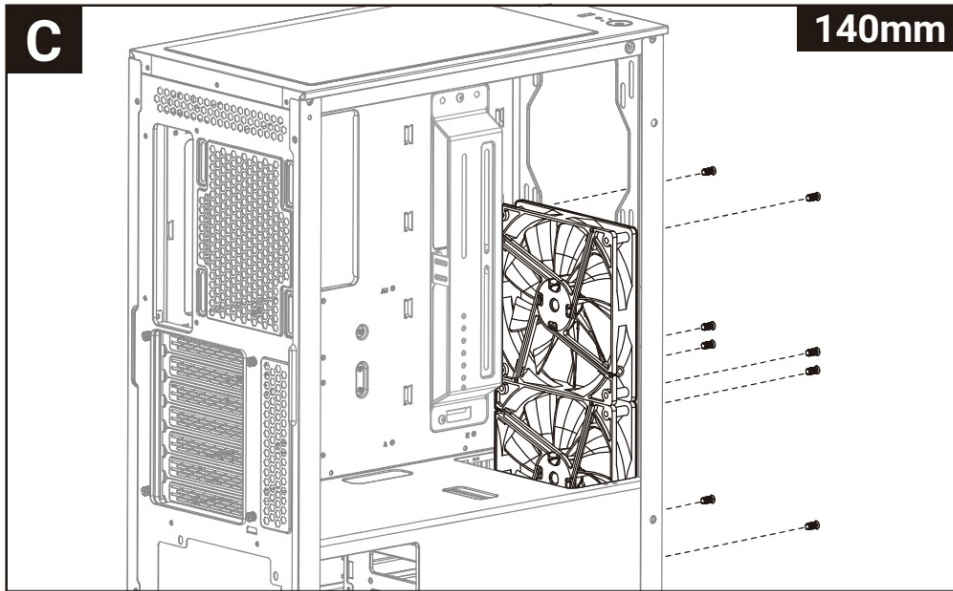

(6b) Install Top Fans


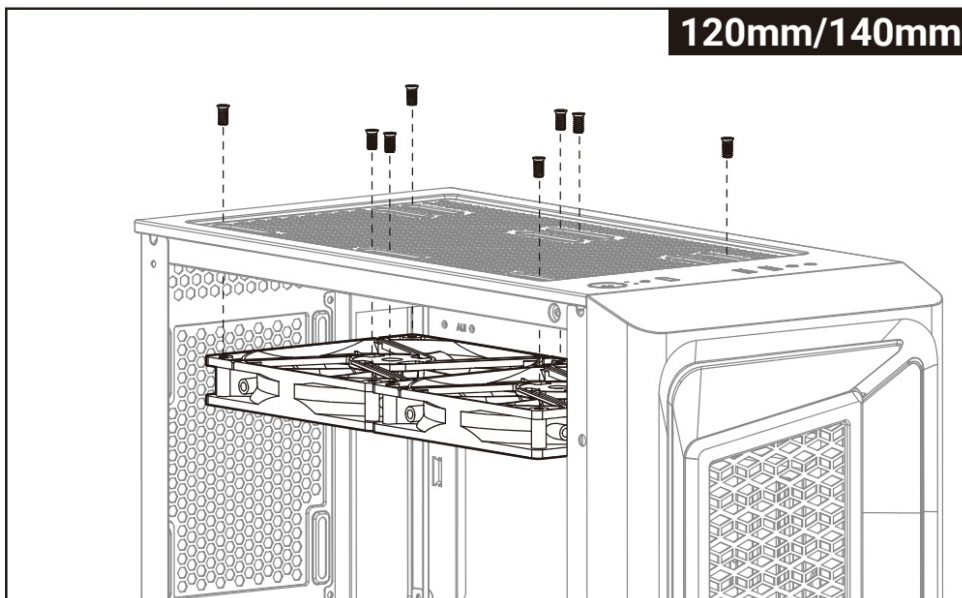




(6c) Install Rear Fan

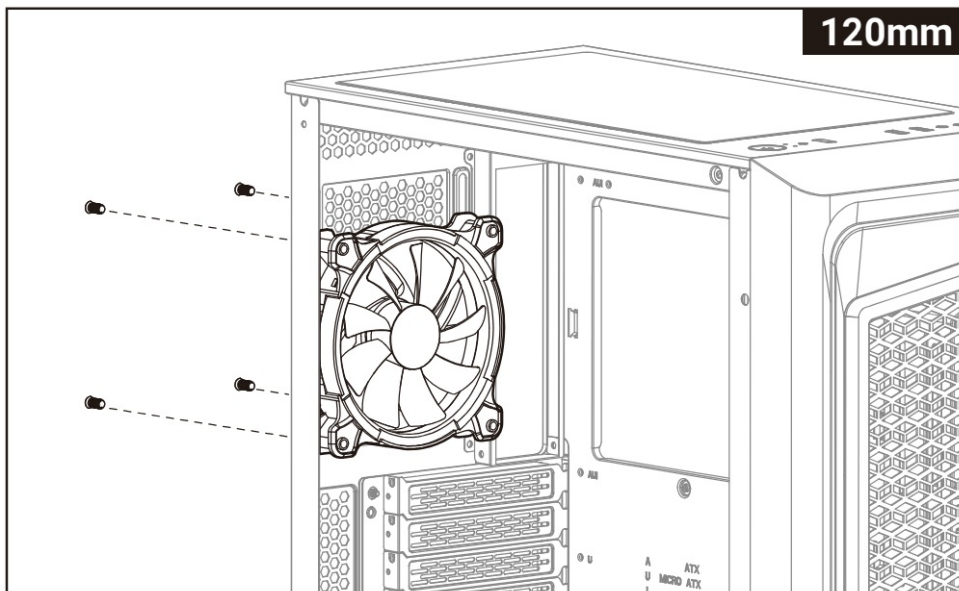


Install Fan


(7a) Install Front Radiator

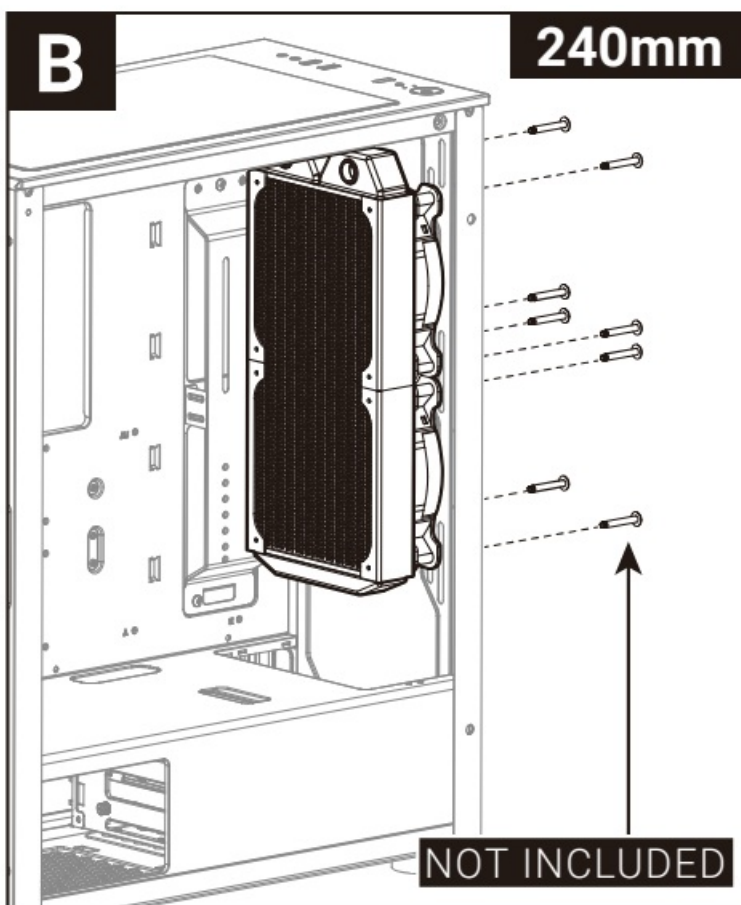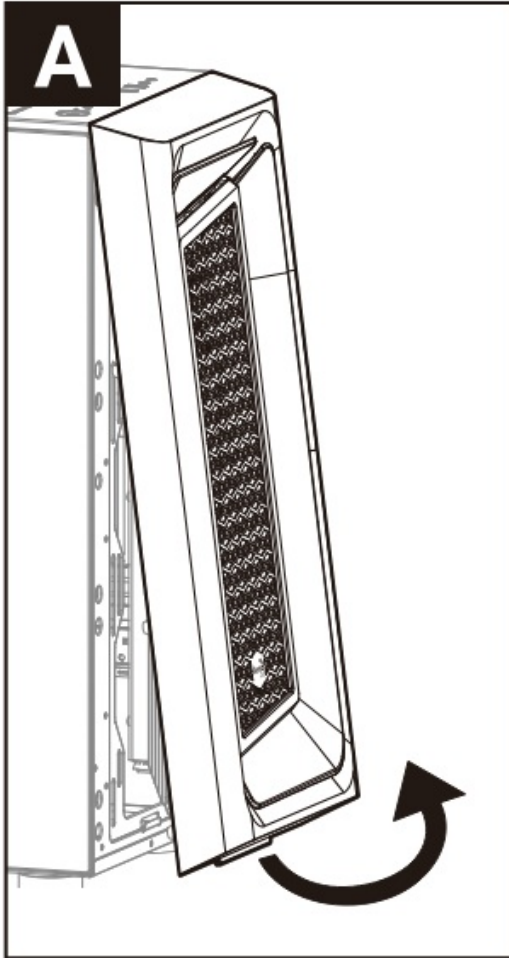

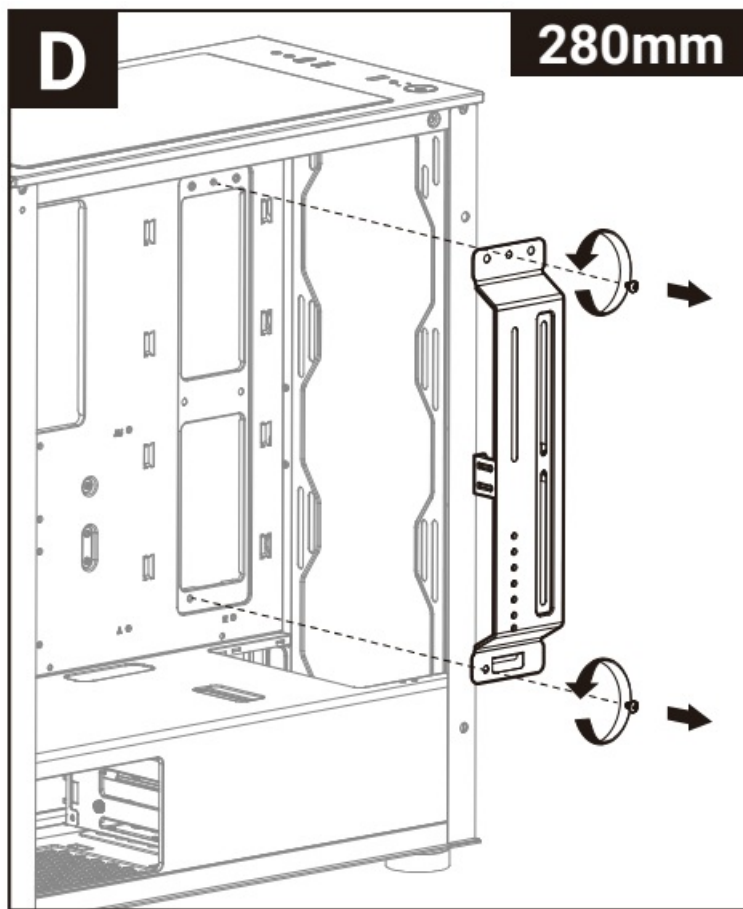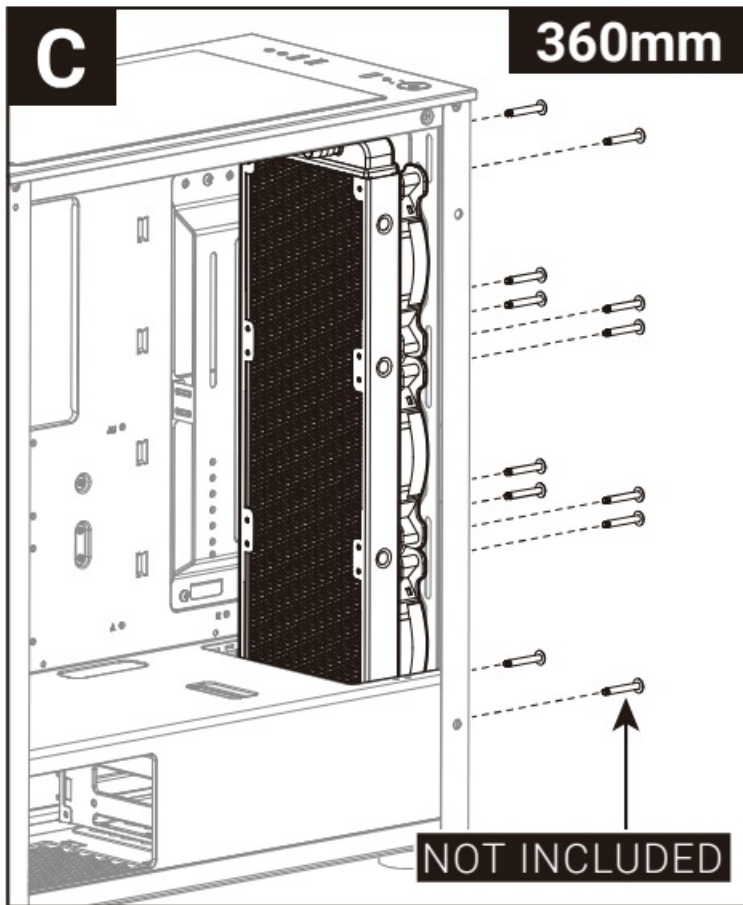


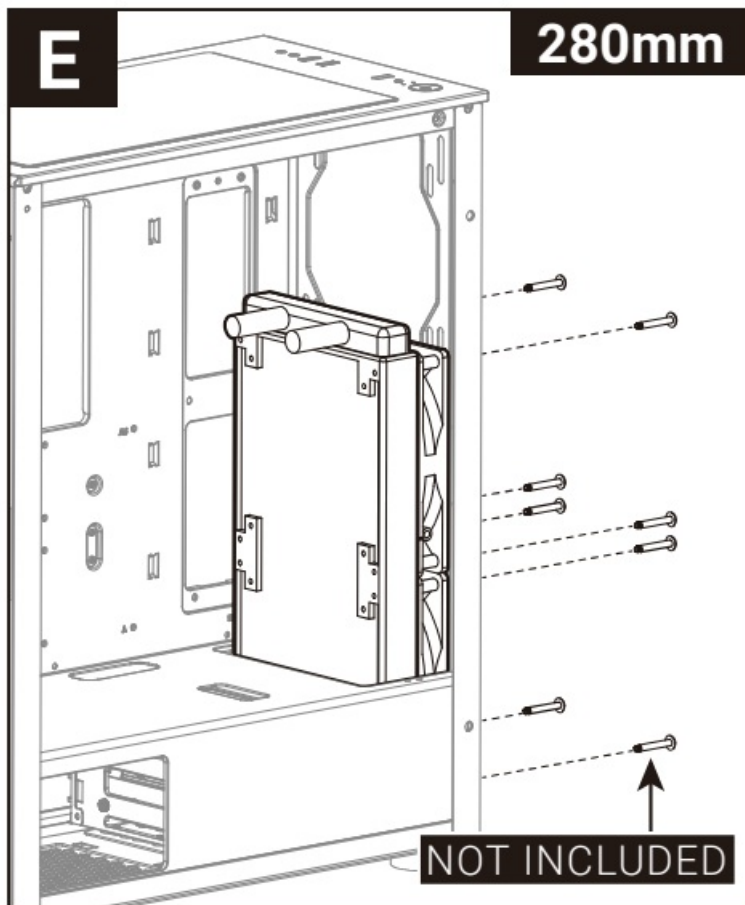

(7b) Install Top Radiator

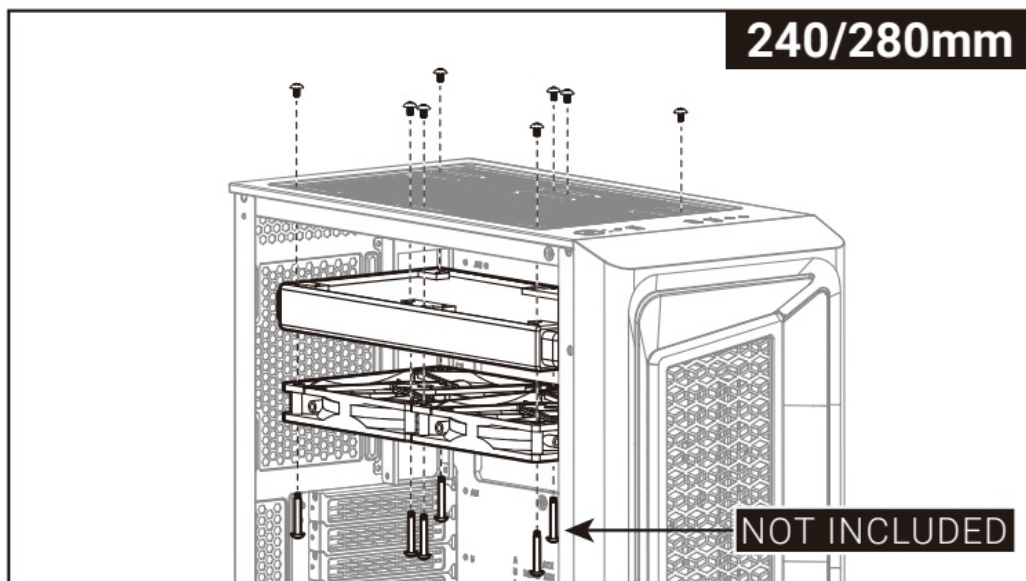

(7c) Install Rear Radiator

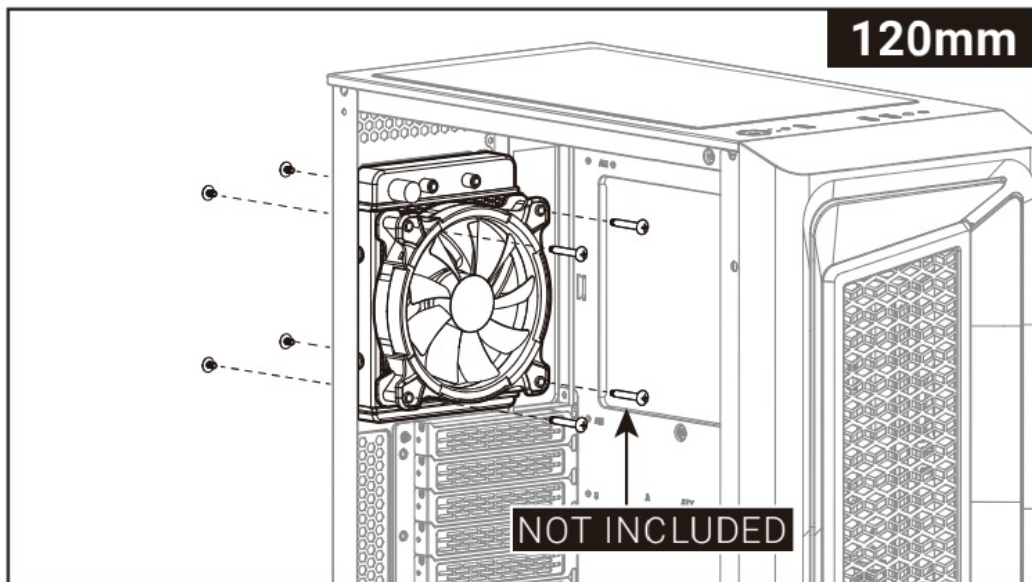

Install the radiator

Connection Set Up User Guide

For ASUS Aura Sync, MSI Mystic Light Sync, and GIGABYTE RGB

Fusion Motherboards

1. Connect (A) to motherboard's PWM socket
2. Connect (B) to motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector


For GIGABYTE RGB Fusion Motherboards

1. Connect (A) to motherboard's PWM socket
2. Connect (D) to motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

For Non-Addressable RGB Motherboards


1. Connect (A) to motherboard's PWM socket
2. Connect the 2-Pin LED button connector (E) with your hub.
3. Connect (C) to PSU's SATA connector
4. Use the RGB fan connectors (F) to connect the Addressable RGB fans with your hub.
5. Use the PWM fan connectors (G) to connect the PWM fans to your hub.

I/O Pane

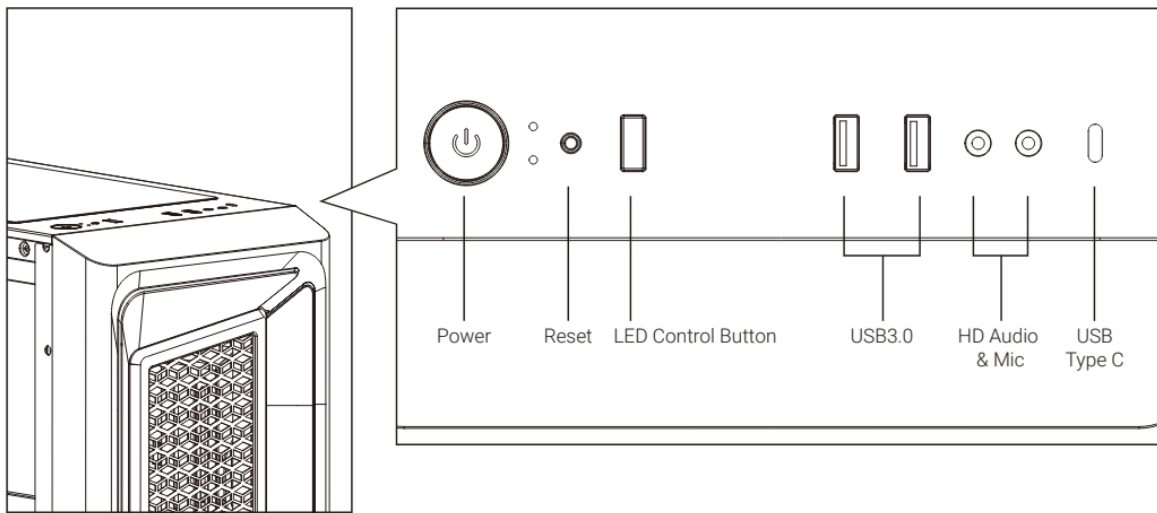

Hold LED control button for 3 sec to switch between motherboard and button control Hold LED control button for 6 secs to turn off LED and press once to turn it back on

RGB Fan Hub (H55C)

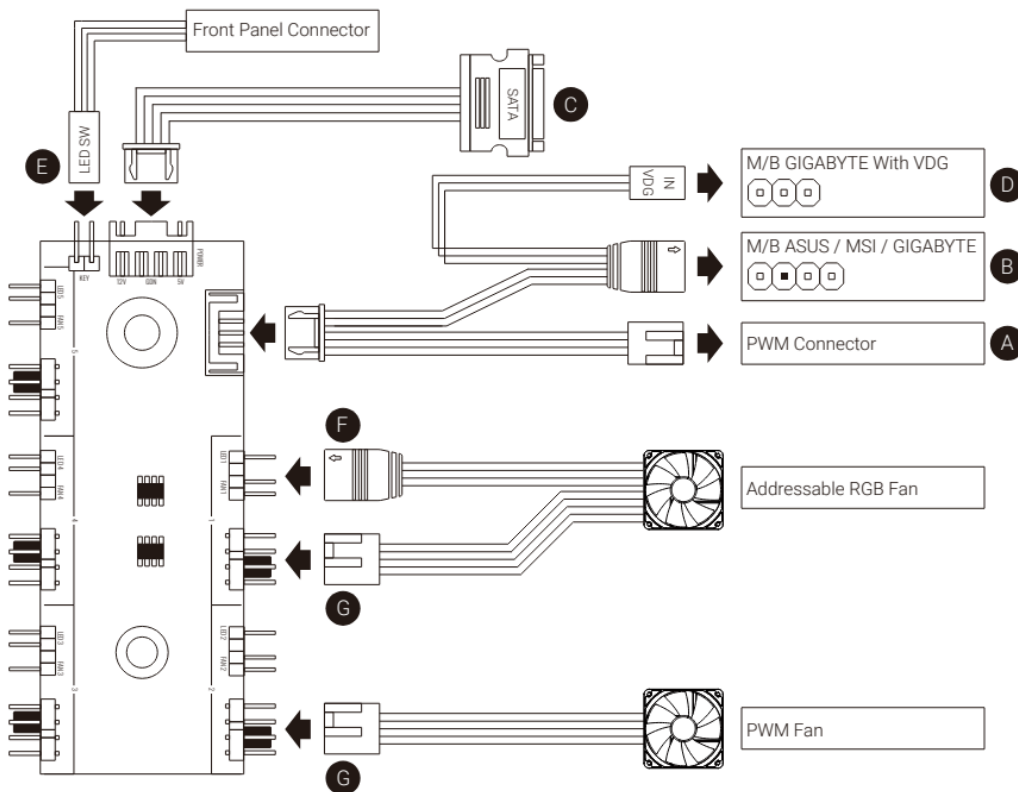

Note :

Specifications may vary depending on your region Contact your local retailer for more information.
To learn more about how to connect your ARGB, please visit the product page at aerocool.io





Points de collecte sur www.quefairedemesdechets.fr



Documents / Resources

	AeroCool Interstellar ARGB Mid Tower Case [pdf] User Manual Interstellar, Interstellar ARGB Mid Tower Case, ARGB Mid Tower Case, Mid Tower Case, Tower Case, Case
--	--

References

-  [AeroCool - AeroCool](#)
-  [Que Faire de mes Déchets ? Découvrez les solutions pour tous vos déchets et nos conseils pour en produire moins.](#)

[Manuals+](#)