



AeroCool Rave-3 CPU AIR COOLER PWM User Manual

[Home](#) » [AeroCool](#) » AeroCool Rave-3 CPU AIR COOLER PWM User Manual 

Contents



- [1 AeroCool Rave-3 CPU AIR COOLER PWM](#)
- [2 INSTALLATION](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



AeroCool Rave-3 CPU AIR COOLER PWM




INSTALLATION

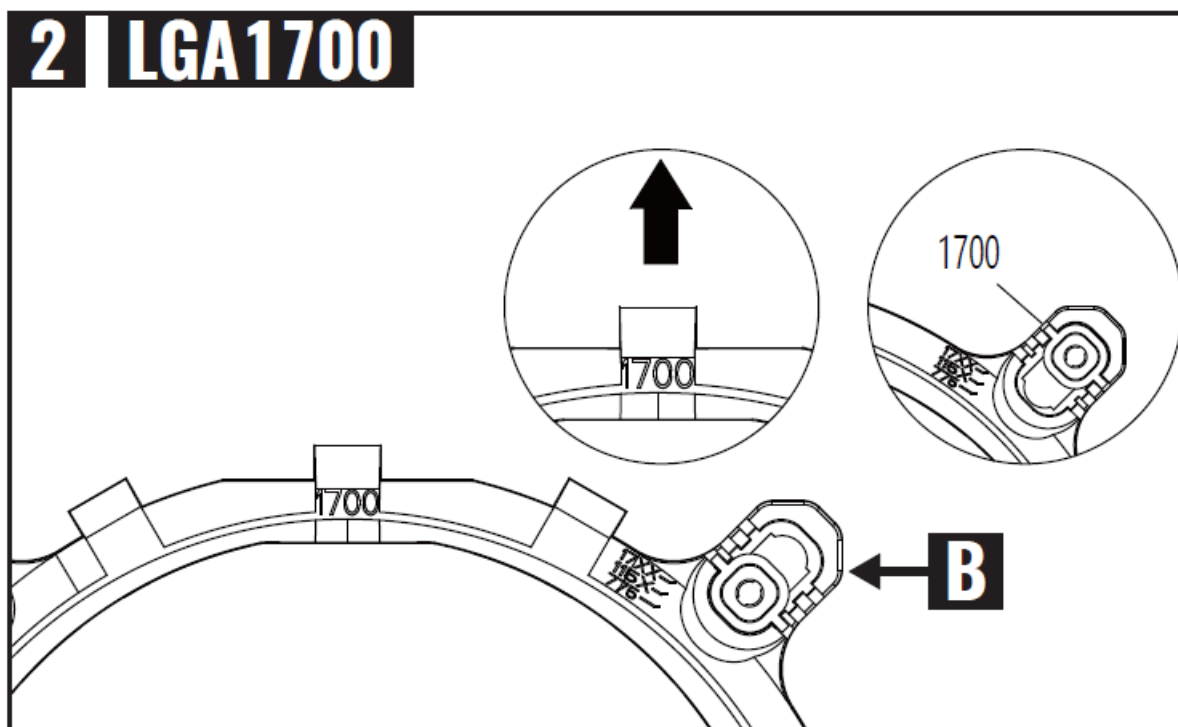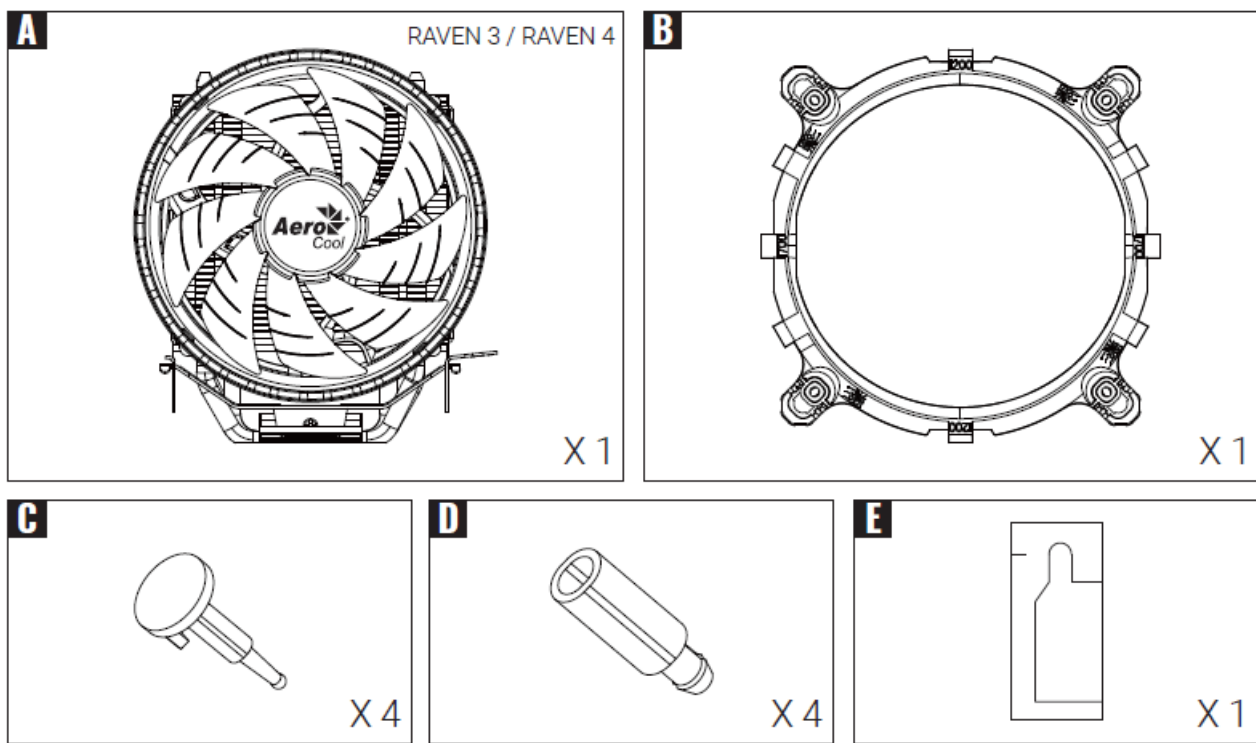


LGA115X/1200/775

LGA115X/1200/775

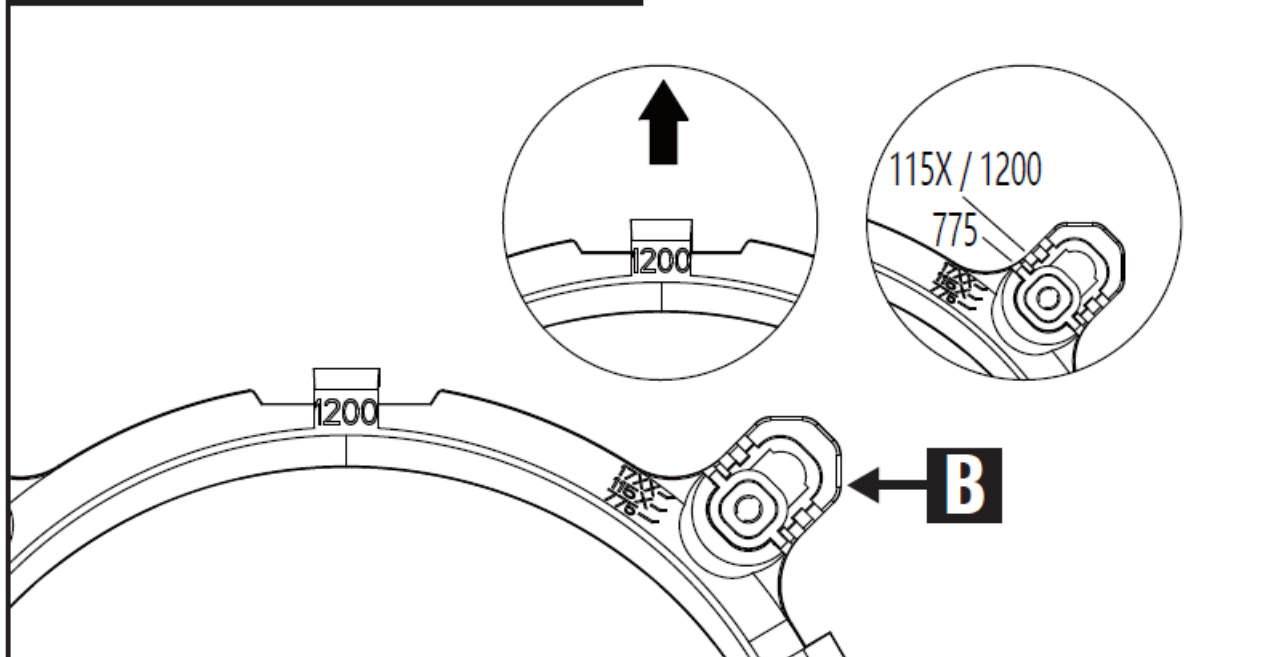



LGA1700 LGA115X/1200/775

3 | LGA1700/115X/1200/775

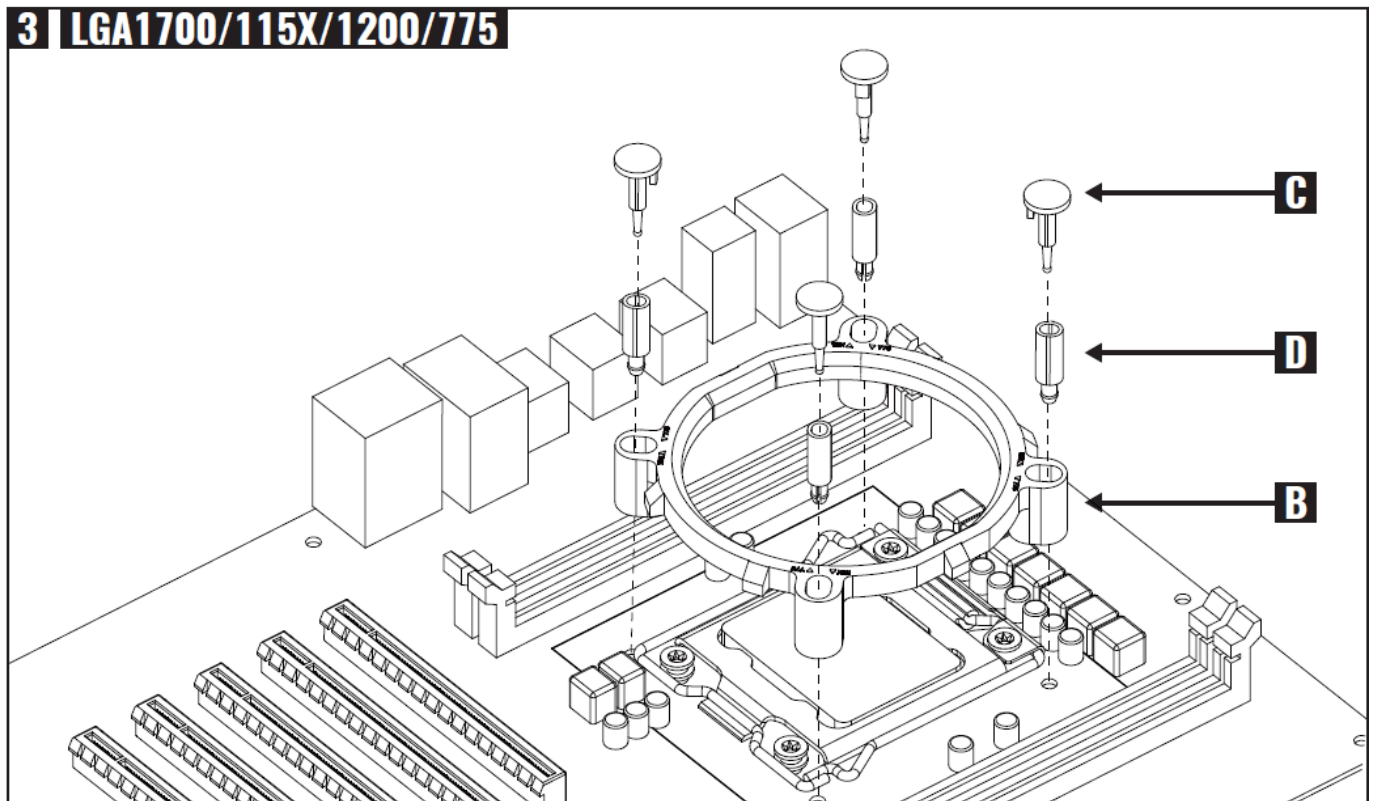

LGA1700/115X/1200/775

4 | LGA1700/115X/1200/775

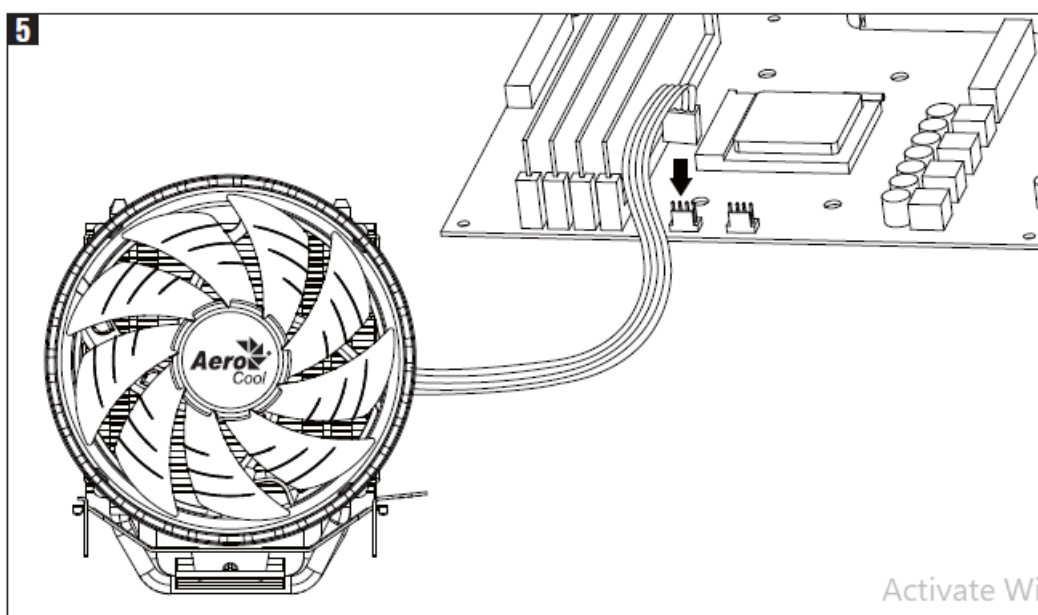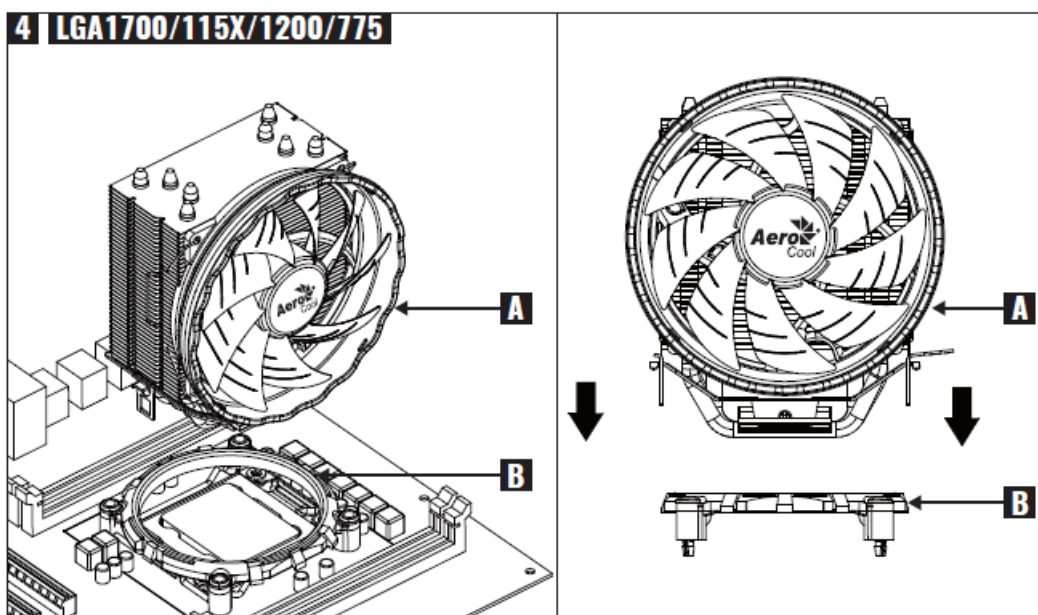


Not needed


Activate Win

A

RAVEN 3 / RAVEN 4

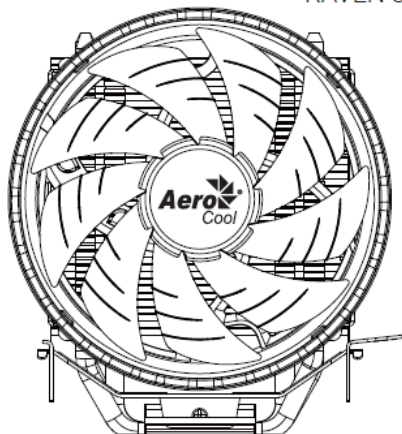


X 1

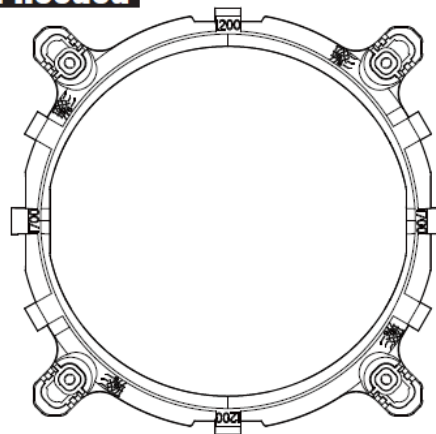B Not needed

X 1

C



X 4

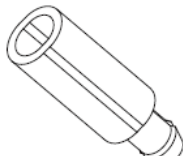
D

X 4


E

X 1

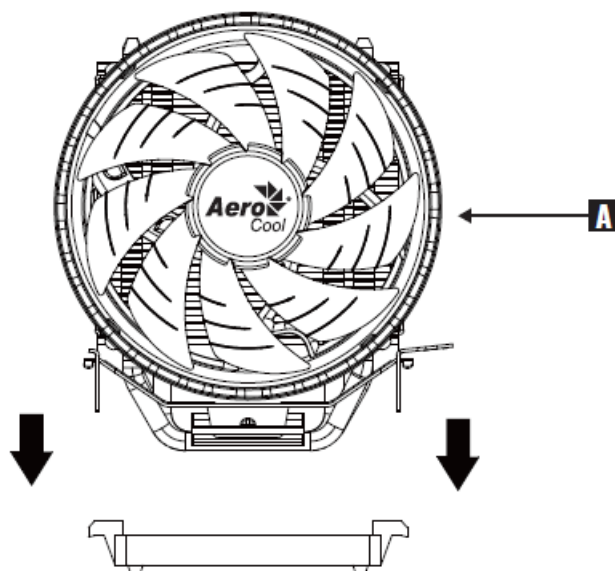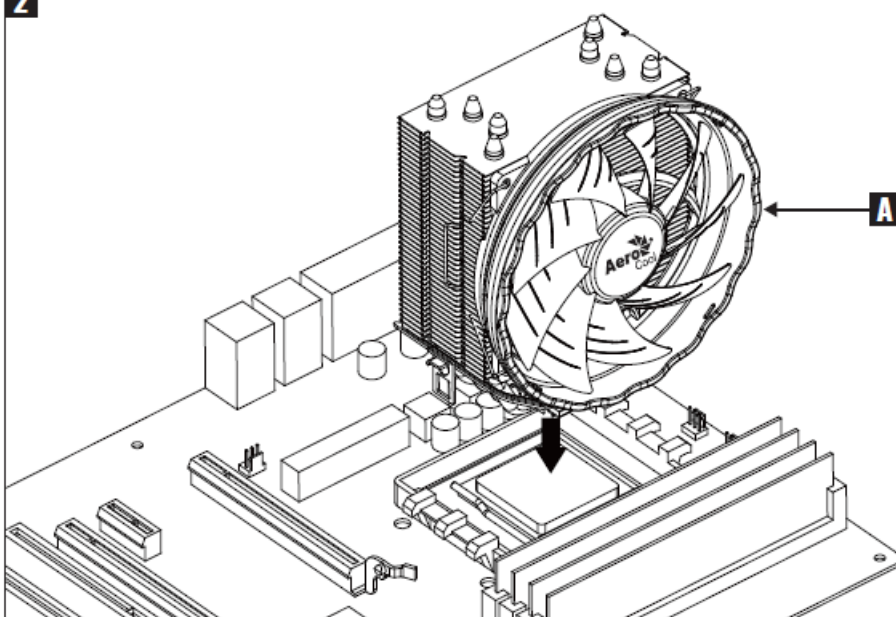2

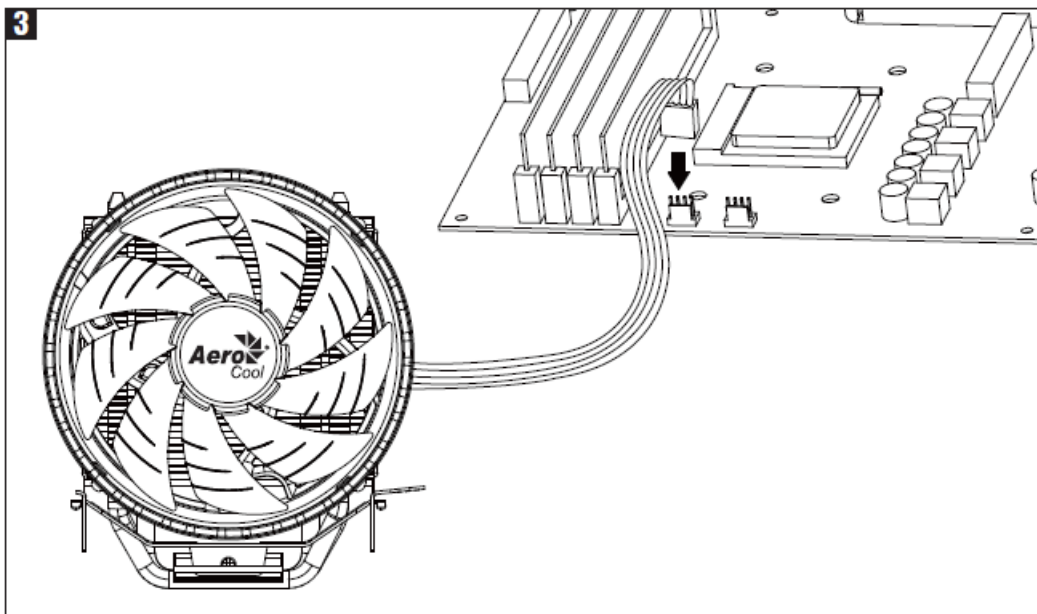

Dimensions

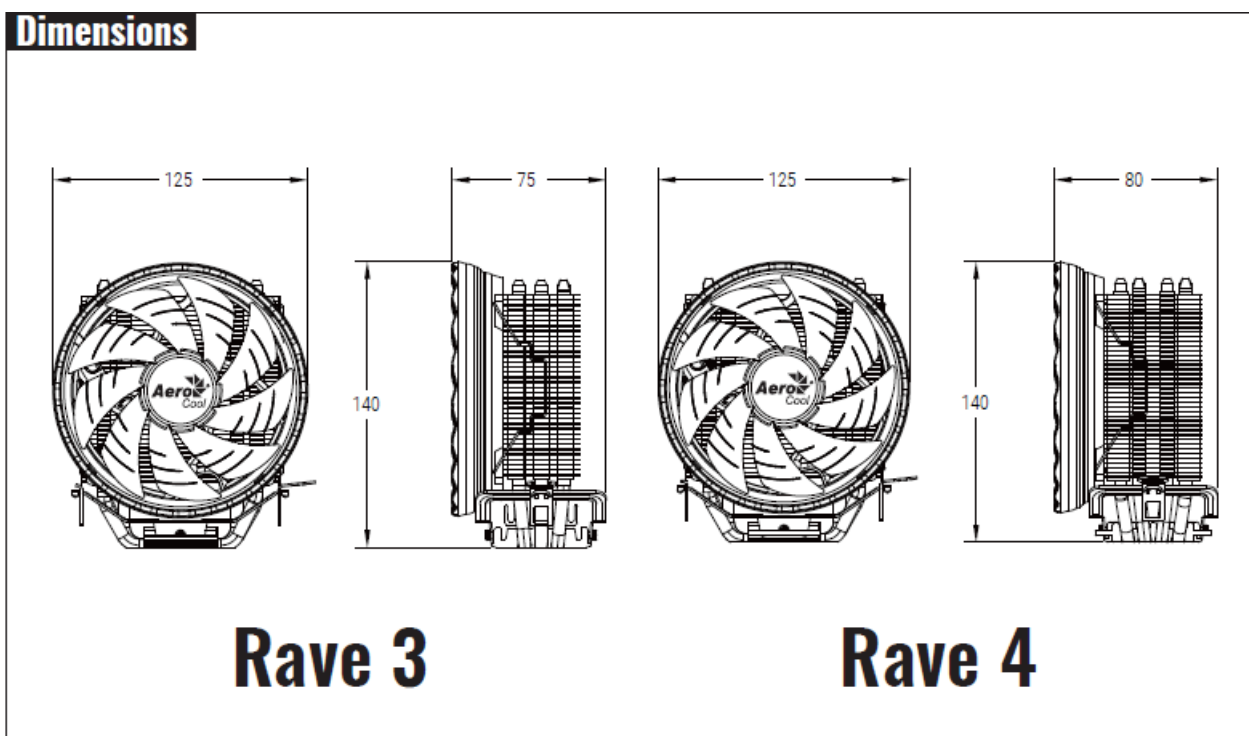

Documents / Resources

	AeroCool Rave-3 CPU AIR COOLER PWM [pdf] User Manual Rave-3 CPU AIR COOLER PWM, Rave-3, CPU AIR COOLER PWM, Rave-3 AIR COOLER P WM, Rave-4
	AeroCool Rave 3 CPU Air Cooler [pdf] User Manual Rave 3, Rave 4, Rave 3 CPU Air Cooler, Rave 3, CPU Air Cooler
	AeroCool Rave 3 CPU Air Cooler [pdf] User Manual Rave 3, Rave 4, Rave 3 CPU Air Cooler, Rave 3, CPU Air Cooler, Air Cooler, Cooler

References

-  [AeroCool - AeroCool](#)
-  [Info-tri | Ministères Écologie Énergie Territoires](#)