



AeroCool Rift High Performance RGB Mid Tower Case User Manual

[Home](#) » [AeroCool](#) » AeroCool Rift High Performance RGB Mid Tower Case User Manual 

AeroCool Rift High Performance RGB Mid Tower Case User Manual




Contents

- [1 Front I/O Panel Cable Connection](#)
- [2 Accessory Bag Contents](#)
- [3 How to install Guide](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

Front I/O Panel Cable Connection

Front Panel Connector

(Please refer to the motherboard's manual for further instruction).

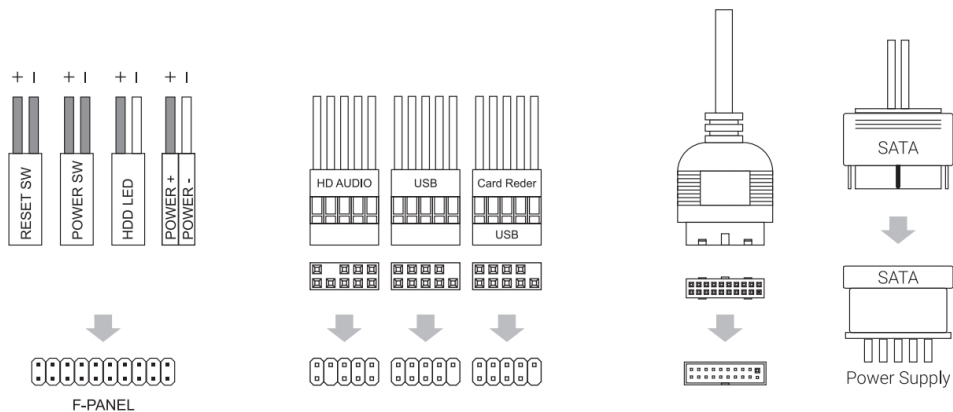

Accessory Bag Contents

- Fan Screw



- MB Standoff



- SSD Screw
- MB Screw



- PSU Screw


PCI Screw



How to install Guide


1. Motherboard

Install Motherboard

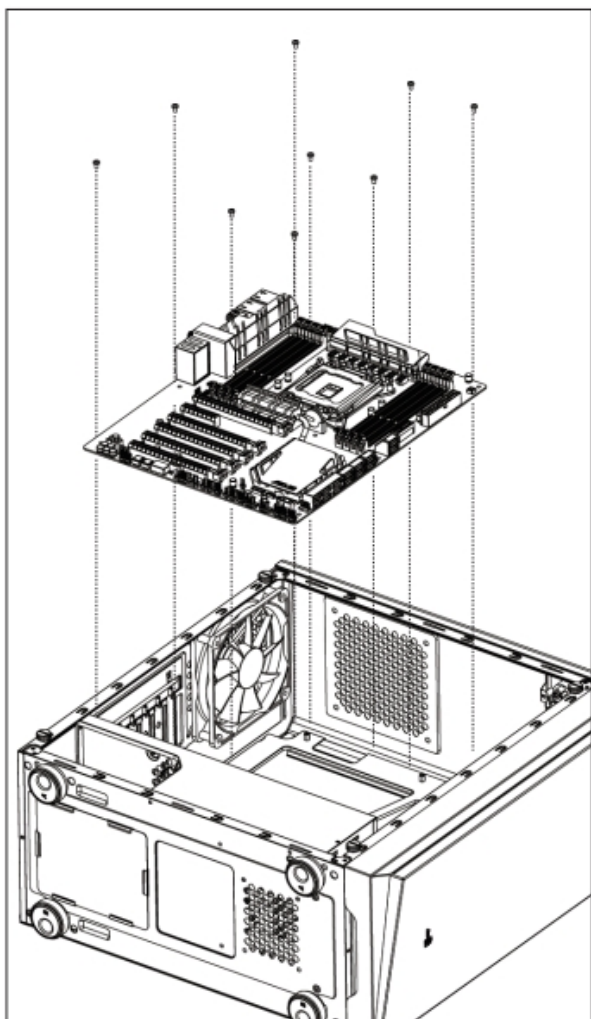


2. PSU

Install PSU

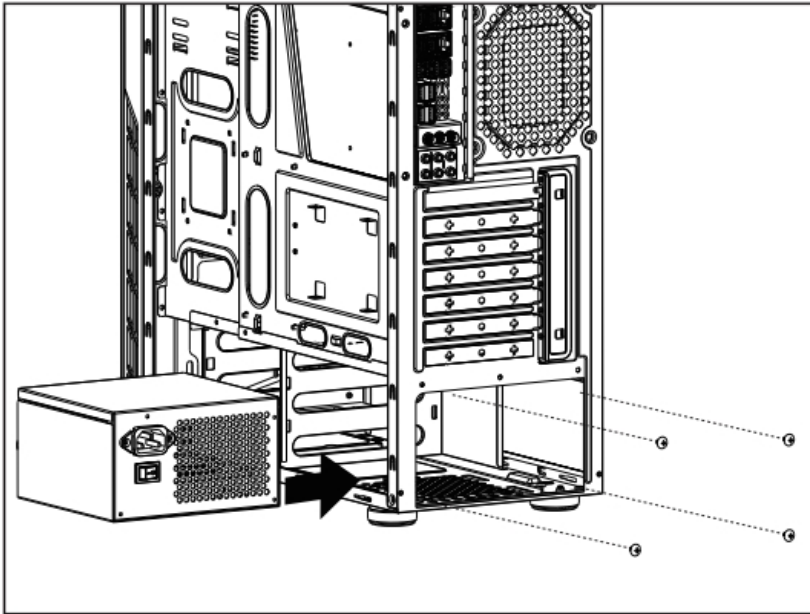


3. Add-on Card


Install Add-on Card

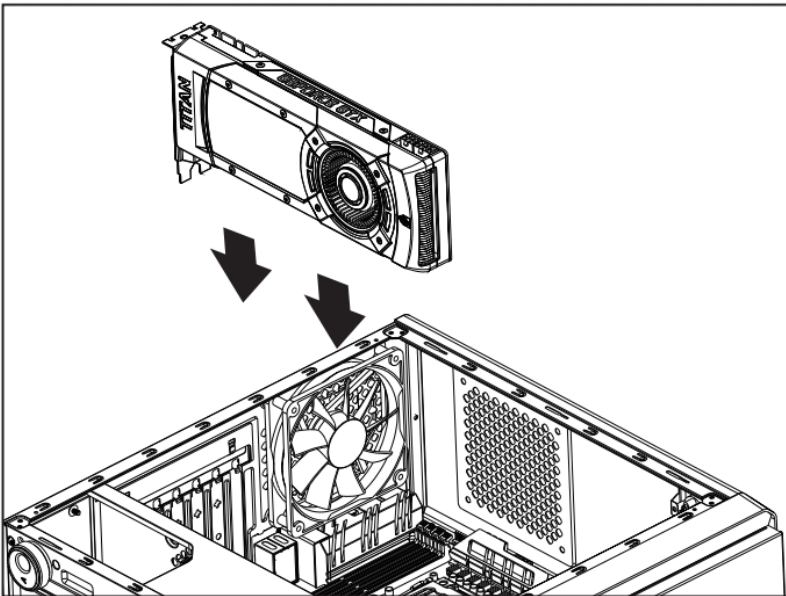

4. 3.5" HDD x2



Install 3.5" HDD x2

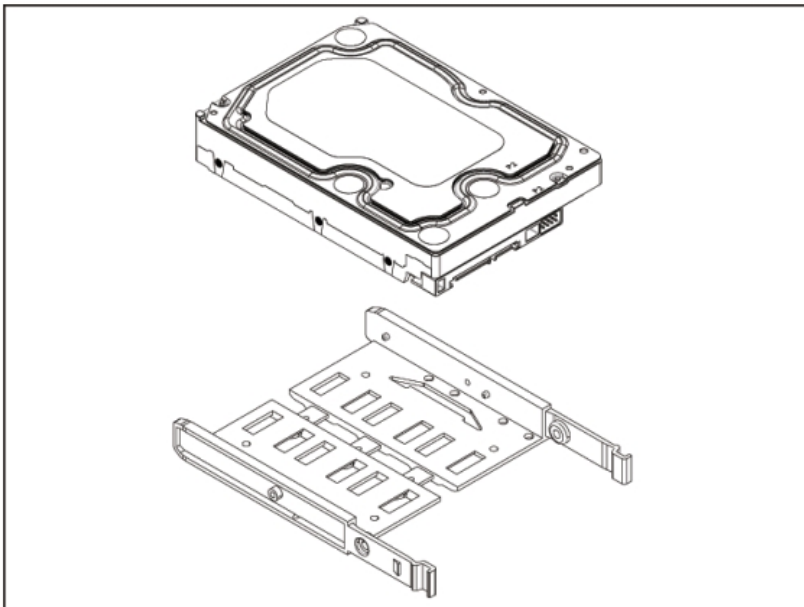


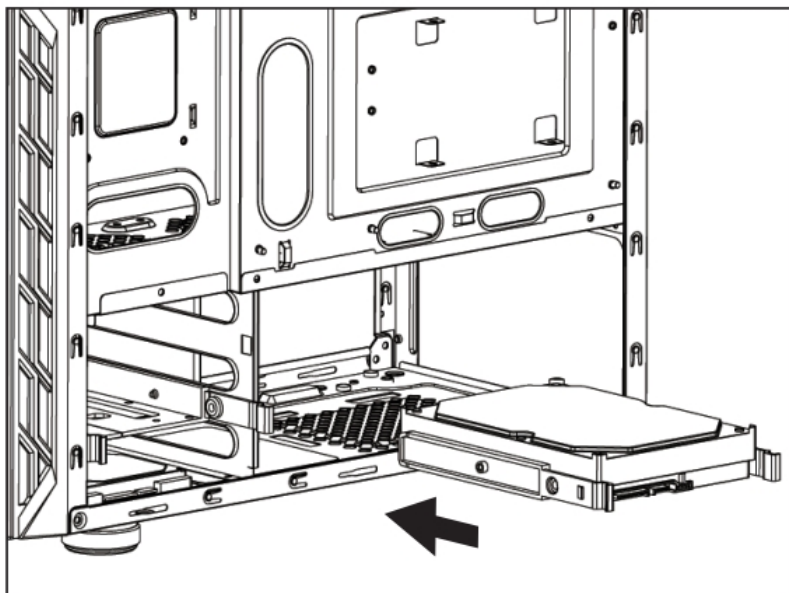

5. 2.5" SSD x3


Install 2.5" HDD

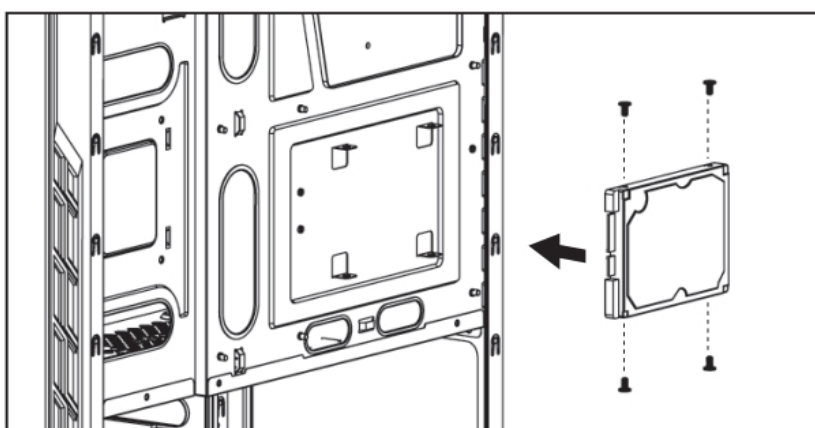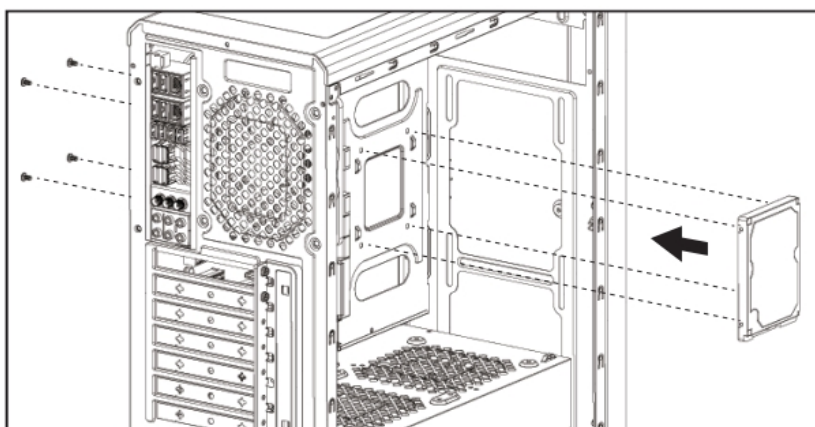

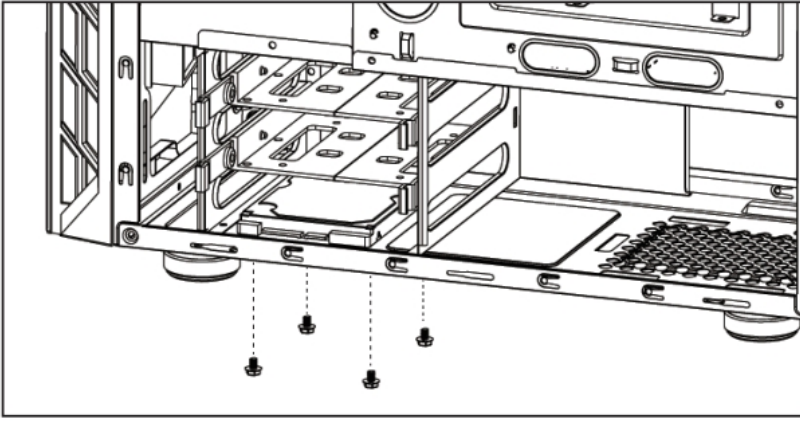


6. Fan

Install Fan

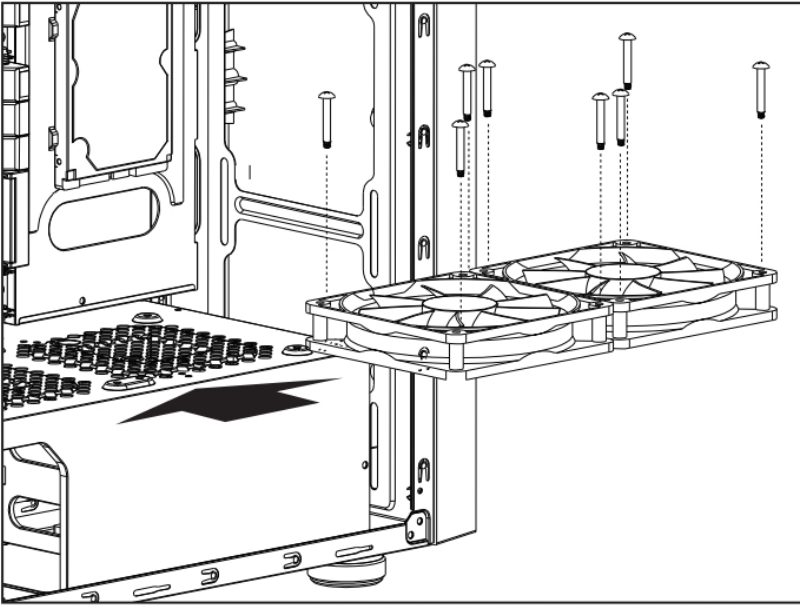


I/O Panel

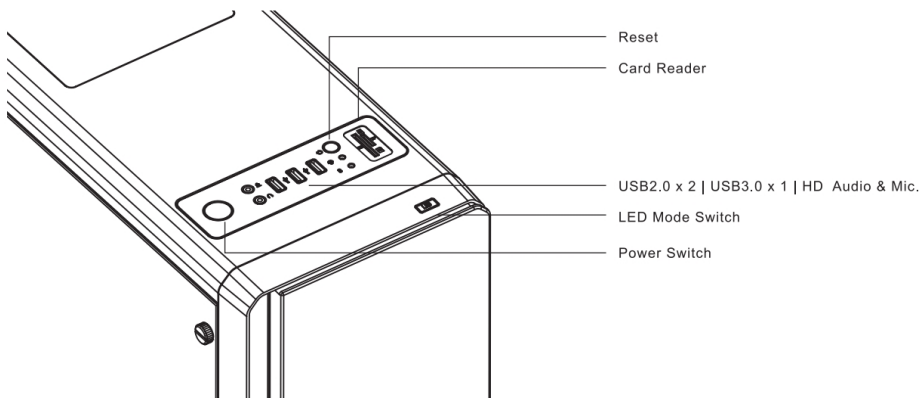


☀ LED Mode Switch

 (Hold switch for 2Secs to turn off LED)



Documents / Resources

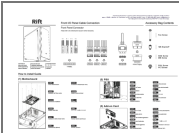

[AeroCool Rift High Performance RGB Mid Tower Case](#) [pdf] User Manual
Rift, High Performance RGB Mid Tower Case, RGB Mid Tower Case, Mid Tower Case, Rift, To
wer Case

Manuals+.