



AeroCool Skribble ARGB Mid Tower Case User Guide

[Home](#) » [AeroCool](#) » AeroCool Skribble ARGB Mid Tower Case User Guide 

Contents

- [1 AeroCool Skribble ARGB Mid Tower Case](#)
- [2 Front I/O Cable Connection](#)
- [3 Accessory Bag Contents](#)
- [4 How to Install](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)




AeroCool Skribble ARGB Mid Tower Case




Front I/O Cable Connection

Front I/O Connectors

(Please refer to the motherboard's manual for further instructions).

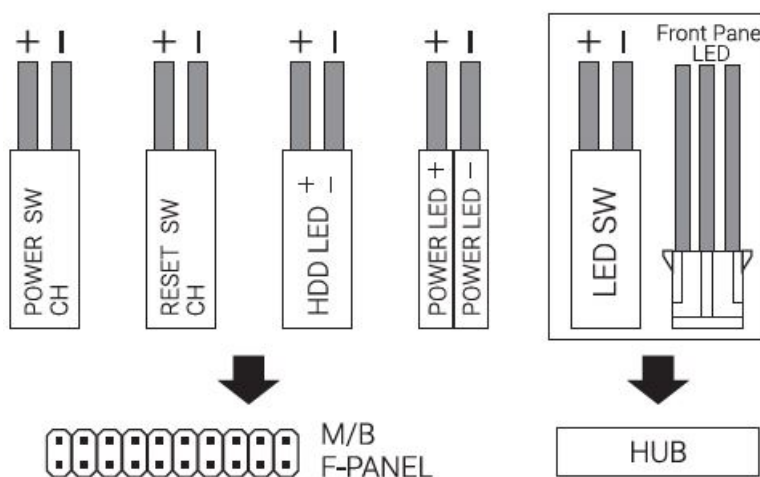

Note: Specifications may vary depending on your region.
Contact your local retailer for more information.

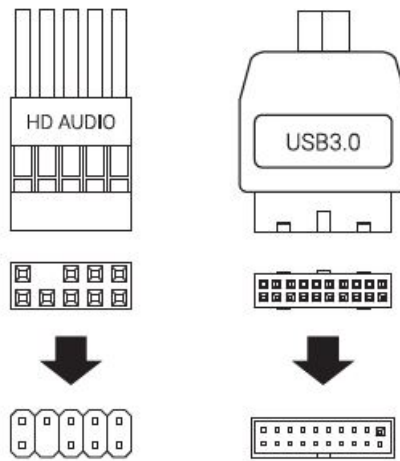


Accessory Bag Contents


- | | | | | | |
|----------|---|-----------------------|-------------|---|------------------------|
| 1 |  x 17 | SSD Screw
MB Screw | 2 |  x 8 | PSU Screw
PCI Screw |
| 3 |  x 8 | HDD Screw | 4 |  x 6 | MB Standoff |
| 5 |  | x 5 | Cable Tie | | |
| 6 |  | x 1 | Pen & Wiper | | |
| 7 |  x 1 | Standoff Socket | | | |

How to Install



Install Motherboard

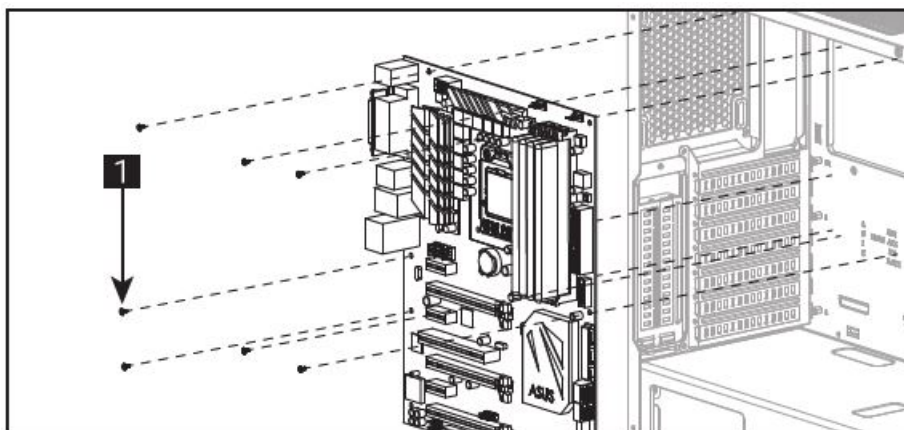



Install PSU

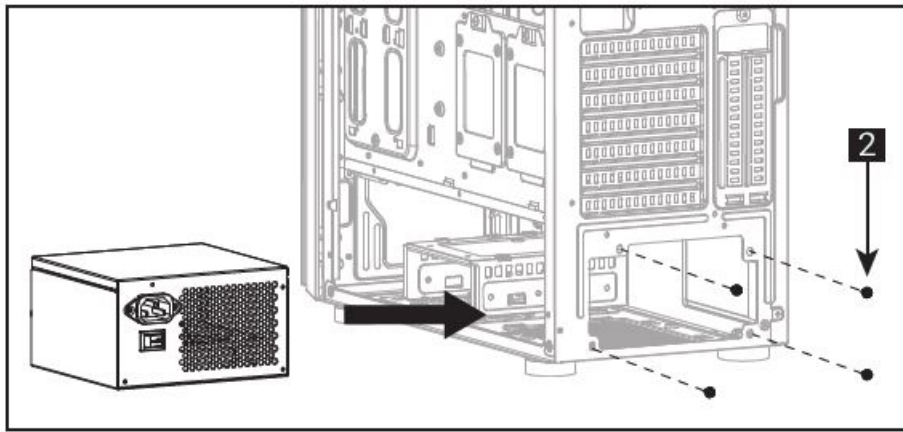



Install add-on Card

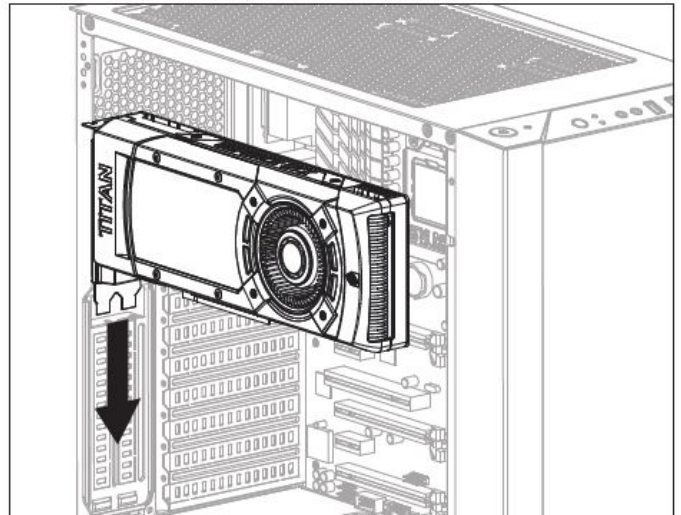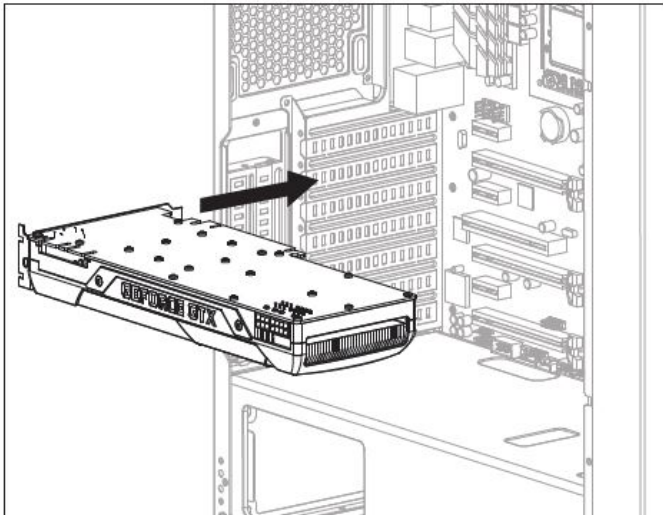



Install 2.5" SSD x1

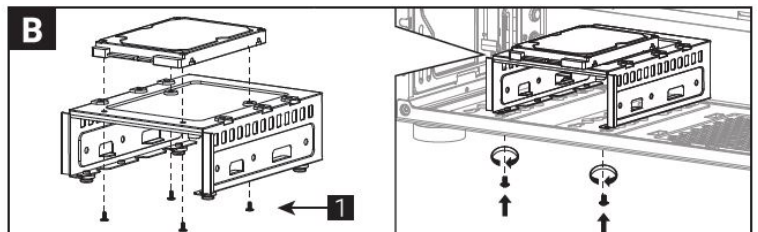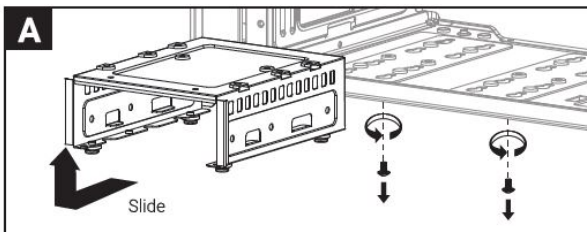


Install 2.5" SSD x2

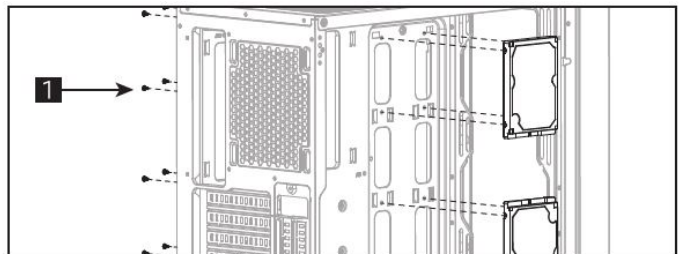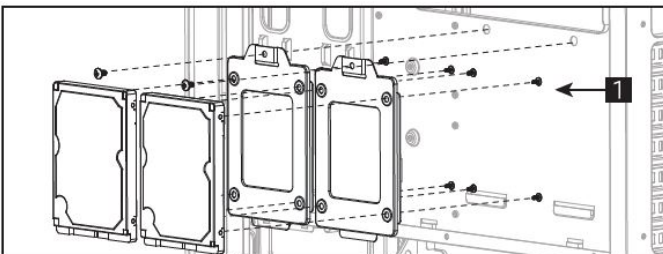


Install 3.5" HDD x1

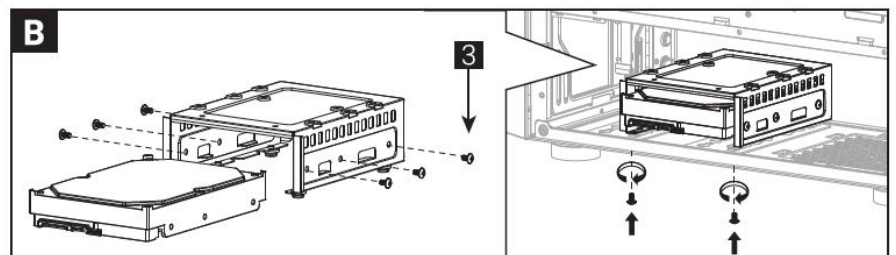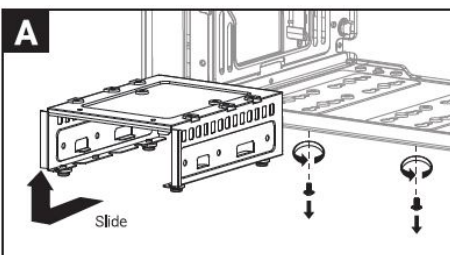


Install 3.5" HDD x1

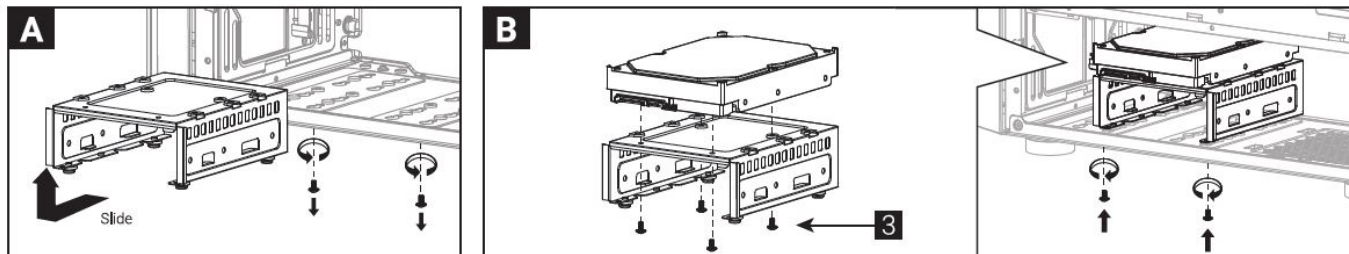


Install Front Fans

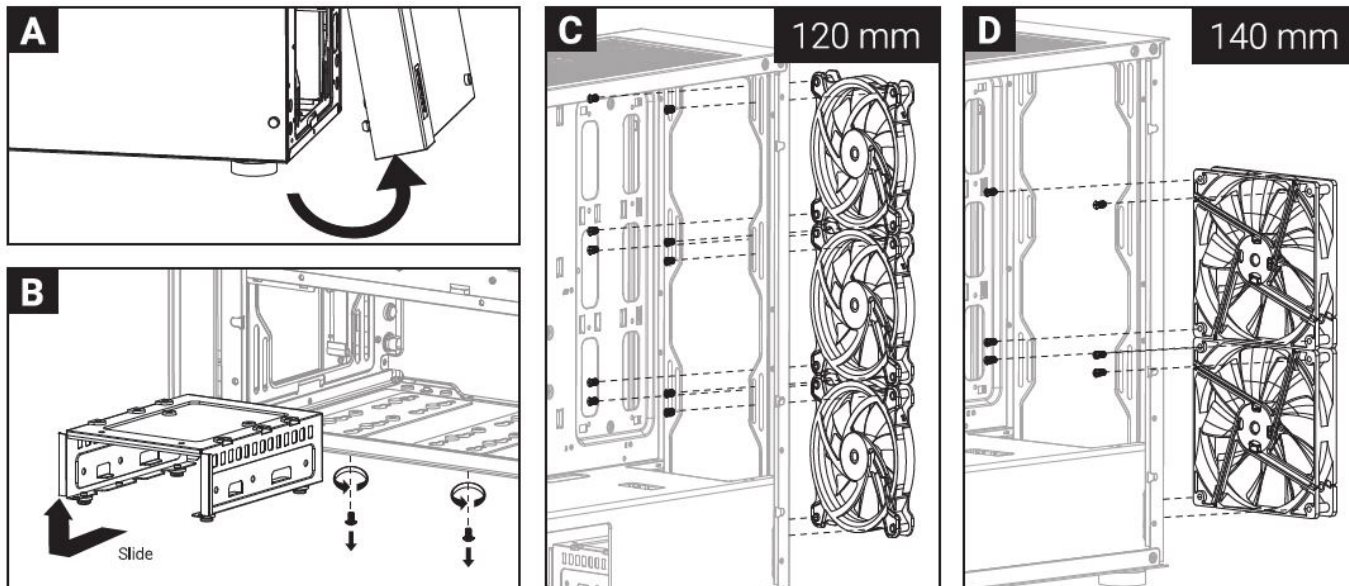




Install Rear Fan

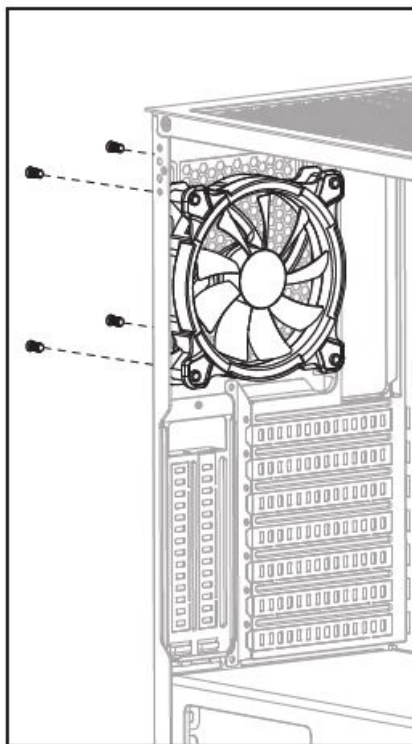


Install Top Fans

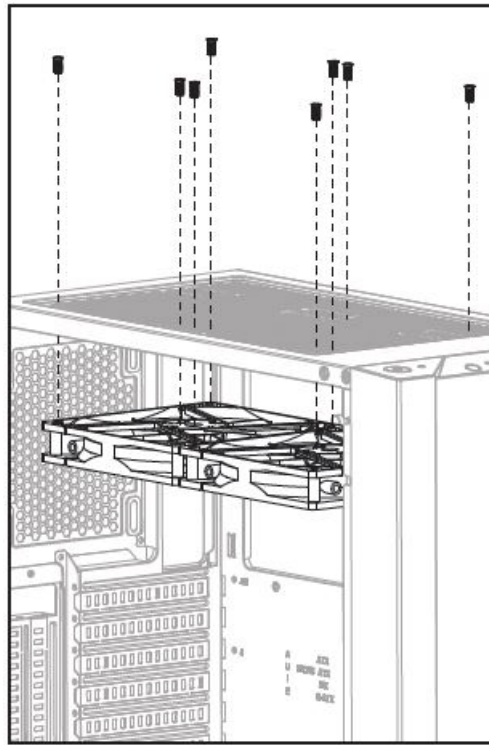


Install Front Radiator

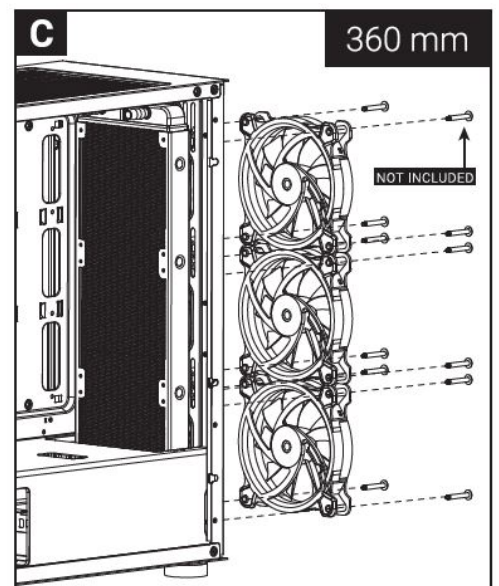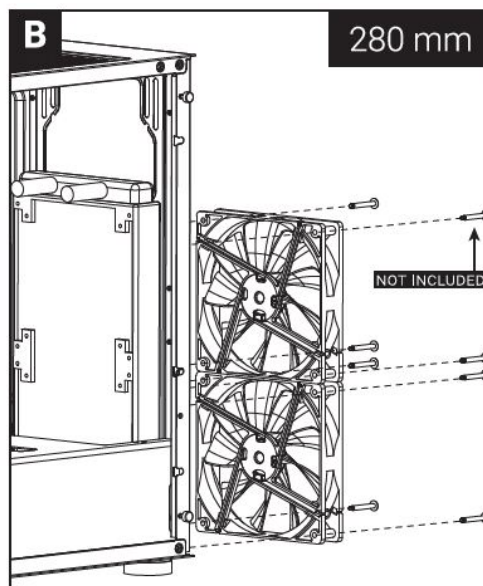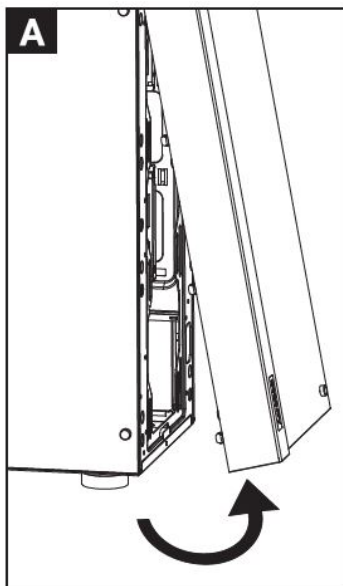



Install Rear Radiator

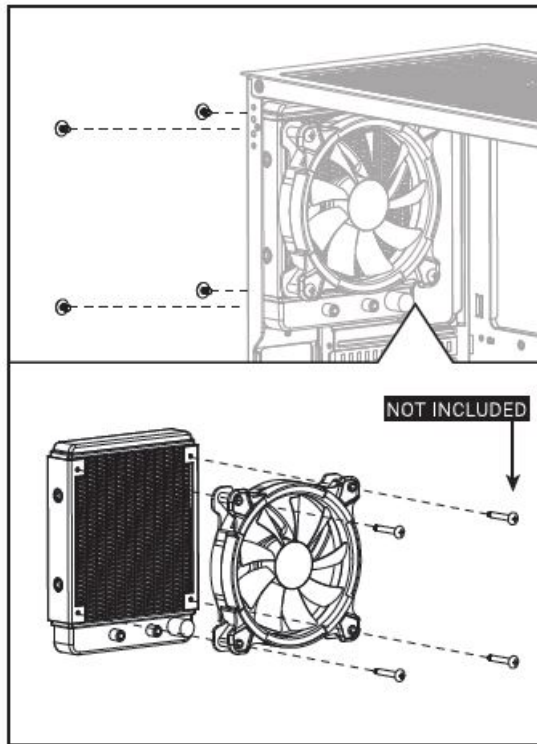

Install Top Radiator

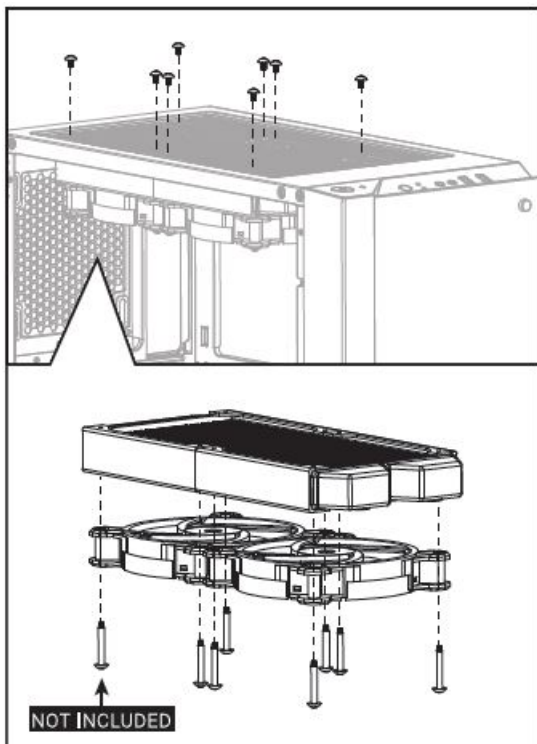


I/O Panel

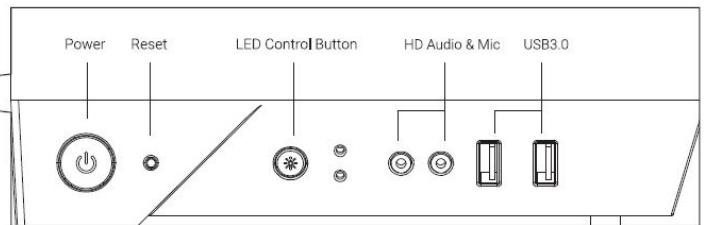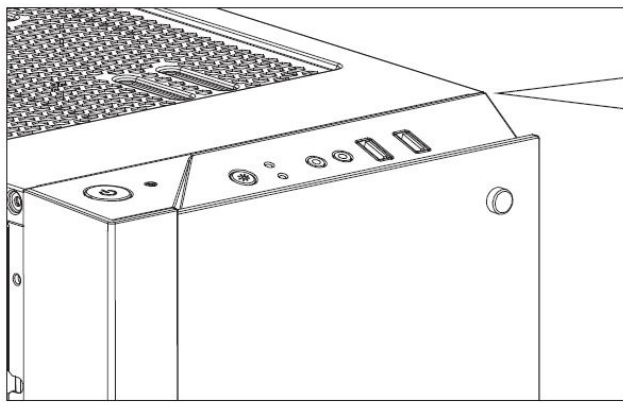

Hold LED control button for 3 secs to switch between motherboard and button control
Hold LED control button for 6 secs to turn off LED and press once to turn it back on

Note : Specifications may vary depending on your region.
Contact your local retailer for more information.

RGB Fan Hub (H66C)

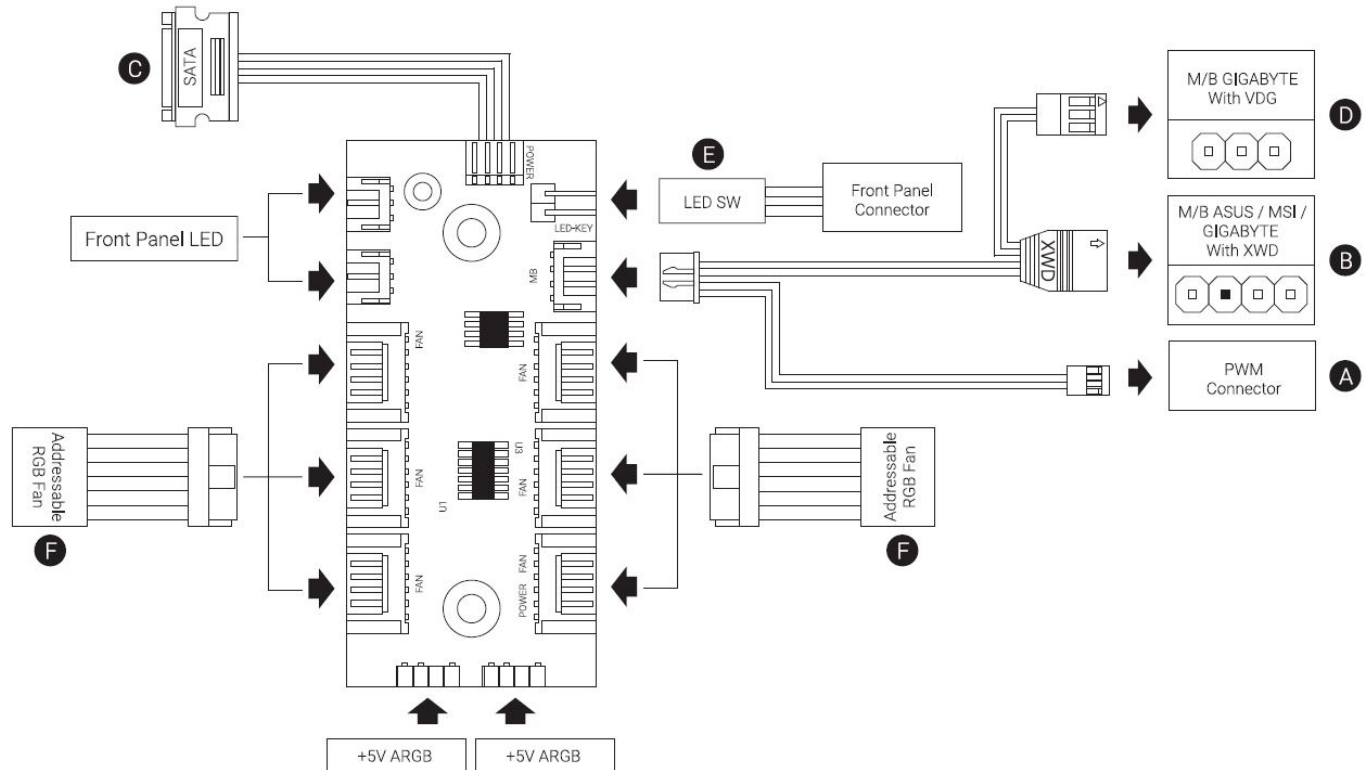

Connection Set Up User Guide

For ASUS Aura Sync, Msi Mystic Light Sync, and GIGABYTE RGB Fusion Motherboards

1. Connect (A) to motherboard's PWM socket
2. Connect (B) to motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

For GIGABYTE RGB Fusion Motherboards


1. Connect (A) to motherboard's PWM socket
2. Connect (D) to motherboard's Addressable RGB socket
3. Connect (C) to PSU's SATA connector

For Non-Addressable RGB Motherboards

1. Connect (A) to motherboard's PWM socket

2. Connect the 2-Pin LED button connector (E) with your hub.
3. Connect (C) to PSU's SATA connector
4. Use the RGB fan connectors (F) to connect the Addressable RGB fans with your hub.

Documents / Resources

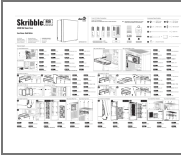

[AeroCool Skribble ARGB Mid Tower Case](#) [pdf] User Guide
Skribble ARGB Mid Tower Case, Skribble ARGB, Mid Tower Case, Tower Case