



AeroCool Split Front I/O Panel Cable Connection User Manual

[Home](#) » [AeroCool](#) » AeroCool Split Front I/O Panel Cable Connection User Manual 

AeroCool Split Front I/O Panel Cable Connection User Manual




Contents


- [1 Front Panel Connector](#)
- [2 Accessory Bag](#)
- [Contents](#)
- [3 How to install Guide](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Front Panel Connector

(Please refer to the motherboard's manual for further instructions).

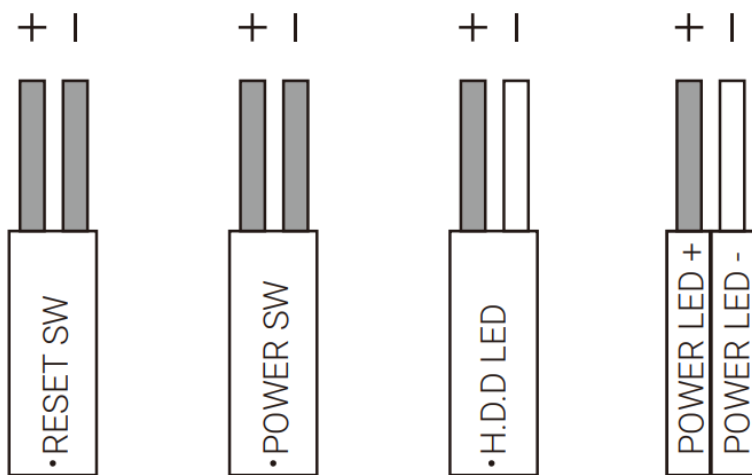

Note: Specifications may vary depending on your region. Contact your local retailer for more information.

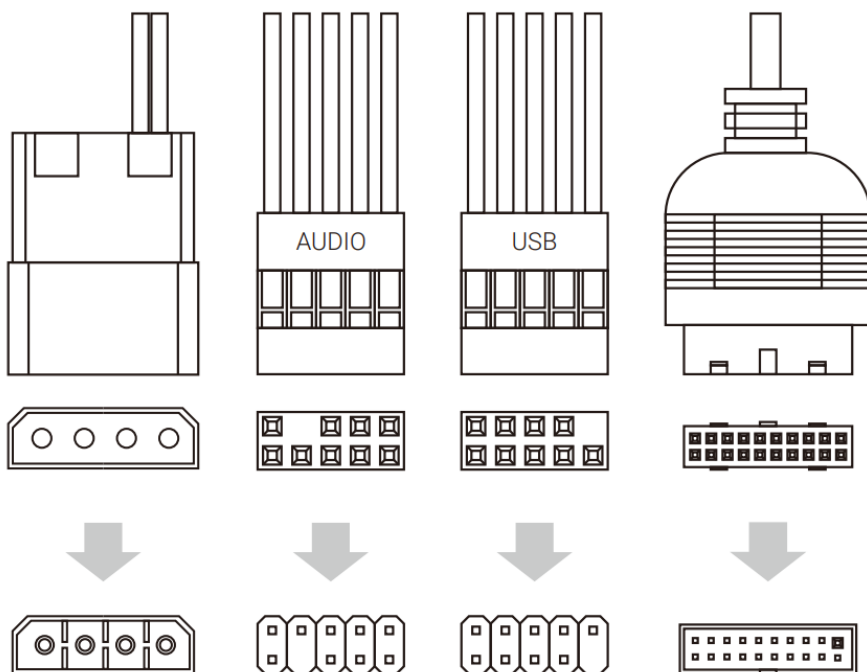

Power Supply

Accessory Bag Contents

1. SSD Screw MB Screw



2. PSU Screw PCI Screw



3. MB Standoff




4. 3.5" HDD Thumb Screw




How to install Guide


1. Install Motherboard

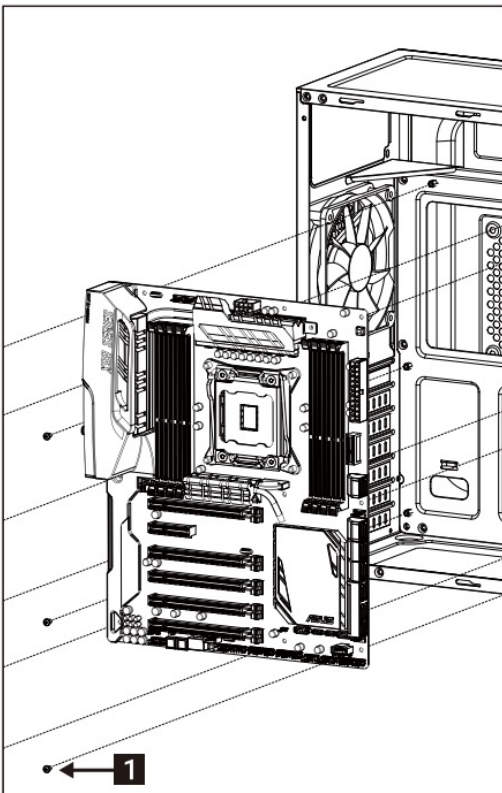




2. Install PSU

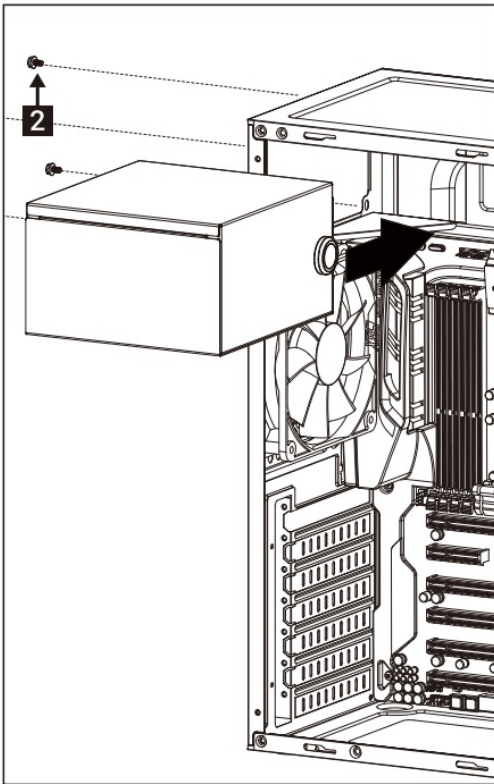


3. Install add-on Card



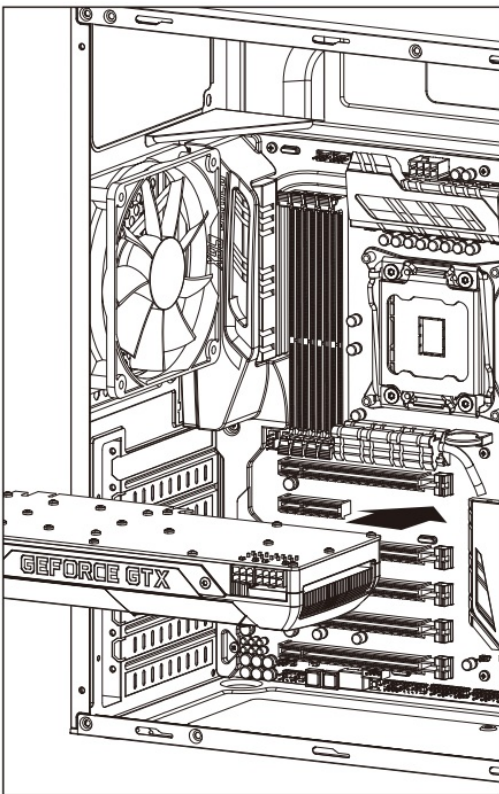


4. Install 3.5" HDD x 2

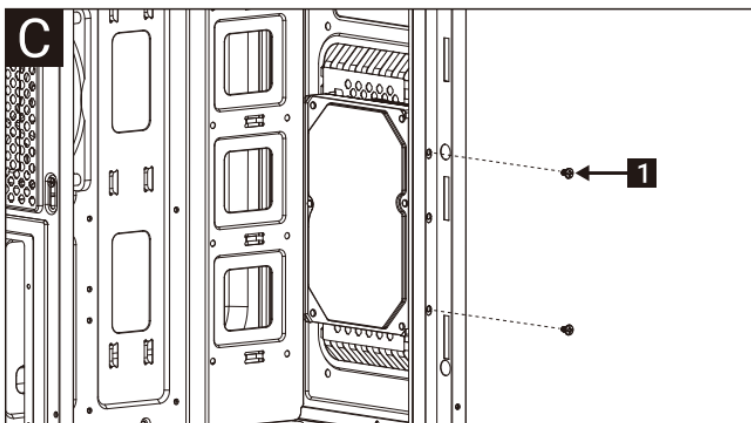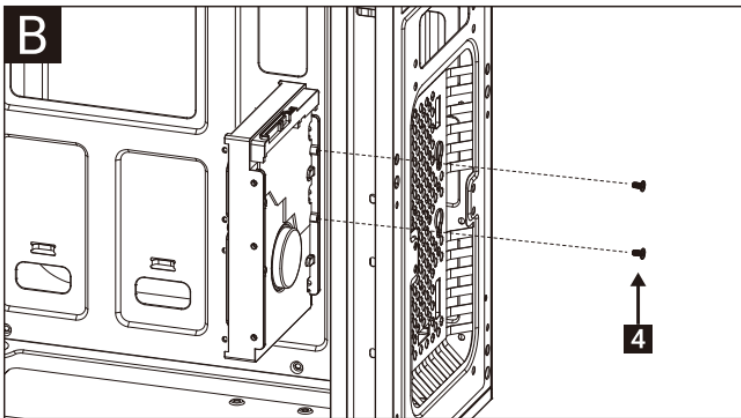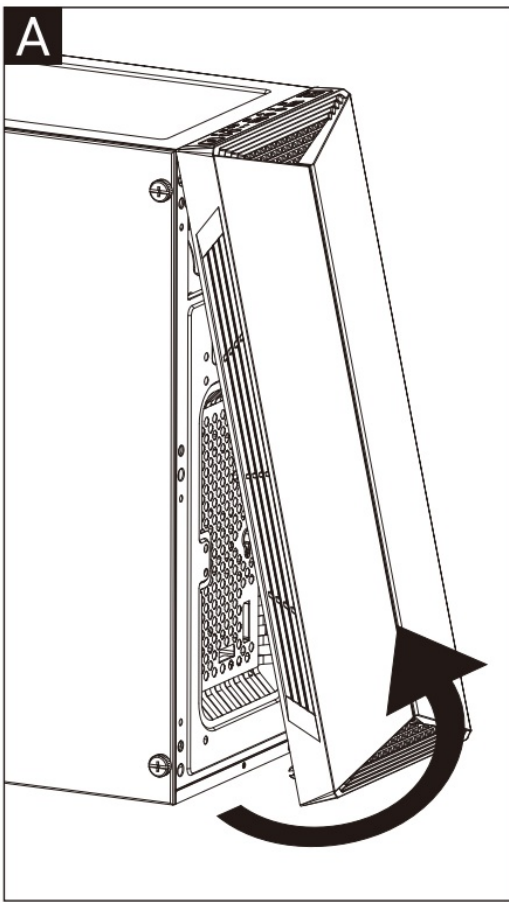

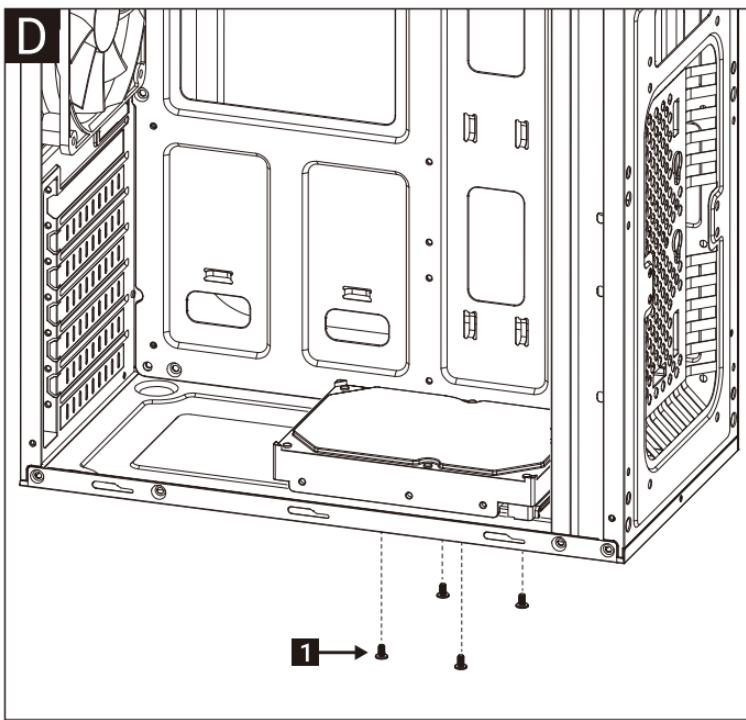


5. Install 2.5" SSD x 2

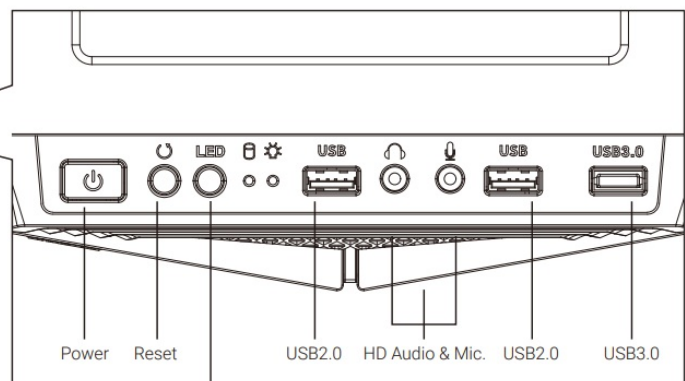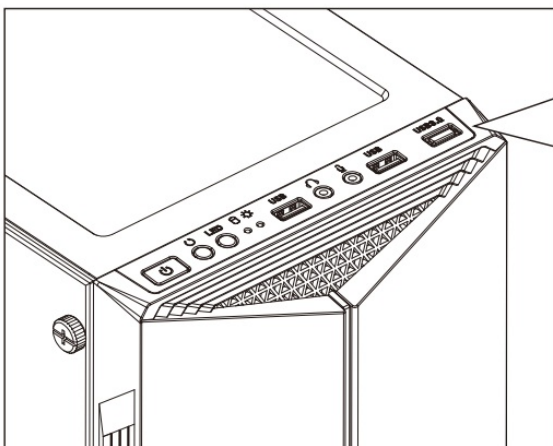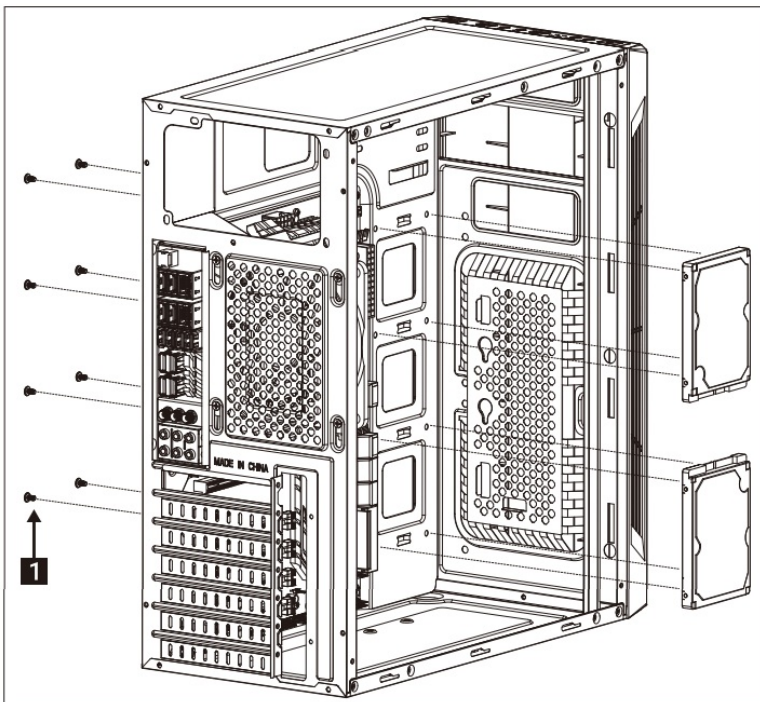

LED Mode Switch


(Hold switch for 2 secs to turn off LED)

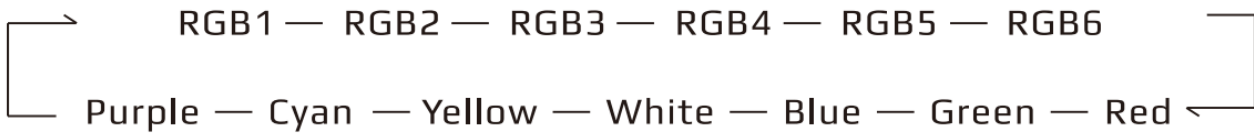

Note: Specifications may vary depending on your region. Contact your local retailer for more information.



Documents / Resources

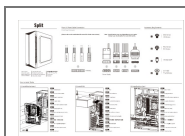

[AeroCool Split Front I/O Panel Cable Connection](#) [pdf] User Manual
Split Front I O Panel Cable Connection, Split, Front I O Panel Cable Connection, Panel Cable Connection, Cable Connection

References

- [Que Faire de mes Déchets ? Découvrez les solutions pour tous vos déchets et nos conseils pour en produire moins.](#)