

## Aerpro SWVW3C Steering Wheel Control Interface Installation Guide

[Home](#) » [Aerpro](#) » Aerpro SWVW3C Steering Wheel Control Interface Installation Guide 

  
First Choice  
**STEERING WHEEL CONTROL INTERFACE**  
**TO SUIT VOLKSWAGEN VEHICLES**  
**SWVW3C**



Installation Guide

## Contents

- 1 SWVW3C Steering Wheel Control Interface
- 2 VEHICLE APPLICATION
- 3 KEY FEATURES
- 4 PRIOR TO INSTALLATION
- 5 WIRING KEY
- 6 DIPSWITCH CONFIGURATION
- 7 SWC INTERFACE
- 8 CONNECTION GUIDE
- 9 STEERING WHEEL CONTROL CONFIGURATION
- 10 BUTTON REMAPPING
- 11 CONNECTION DIAGRAM
- 12 Documents / Resources
  - 12.1 References

## SWVW3C Steering Wheel Control Interface

The SWVW3C allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into the vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration.

## VEHICLE APPLICATION

### To Suit VOLKSWAGEN

Amarok (2H)	2007-2014
EOS (1F)	2011-2016
Golf (Mk5,Mk6)	2004-2013
Jetta	2006-2015
Passat (B6, 3C, B7, 3C36)	2006-2015
Polo (9N, 9N3, 6R)	2006-2014
Scirocco	2009-2014
Tiguan (5N)	2008-2014
Touareg	2004-2010
Transporter T5	2010-2015
UP!	2012-2015

Vehicles with the following audio systems:

RCD200/300/310/500/510 | Audio10 (Amarok) Gamma/Beta/MFD/MCD (Passat) Vehicles with Quadlock (Fakra) Connector

## KEY FEATURES

- RETAIN STEERING WHEEL CONTROL FUNCTIONALITY

- REPLACE FACTORY RADIO
- OUTPUTS FOR SPEED PULSE, PARK BRAKE & REVERSE
- SOFTWARE UPDATEABLE
- REMAPPABLE BUTTONS

## PRIOR TO INSTALLATION

Installation requires a certain level of technical knowledge. Prior to installation, it is important to read the manual. Select a location for installation that is dry and free from heat sources. It is essential to use the correct tools during installation to prevent any damage to the vehicle or the product itself.

Please note that we cannot be held liable for any issues arising from improper installation.

Before proceeding with installation, disconnect the negative battery terminal and ensure the key is removed from the ignition.

## WIRING KEY

ISO CONNECTOR WIRING KEY	Purple	Right Rear Speaker +
	Purple/Black	Right Rear Speaker –
	Green	Left Rear Speaker +
	Green/Black	Left Rear Speaker –
	Grey	Right Front Speaker +
	Grey/Black	Right Front Speaker –
	White	Front Speaker +
	White/Black	Left Front Speaker –
	Yellow	Permanent 12V
	Black	Ground
	Red	Ignition 12V
	Orange	Illumination

FLYING WIRE WIRING KEY OUTPUTS & RATINGS	Pink	Speed Pulse – 0 to 12V Square Wave @ 1Hz/Kph
	Green	Park Brake
	Standby Current	<3mA
	Purple/White	Reverse Gear – 250mA
	Orange	Illumination – 250mA
	Operating Voltage	6V to 16V
	Operating Temperature	20C to 85C *rated at 25 degrees Centigrade

## DIPSWITCH CONFIGURATION


MANUFACTURER	SYSTEM	DIPSWITCH CONFIGURATION				CONNECTION
		1	2	3	4	
RESERVED	NA	OFF	OFF	OFF	OFF	SOFTWARE UPDATE MODE
AERPRO	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
ALPINE	IR DATA	OFF	ON	OFF	OFF	MALE 3.5MM JACK
ANALOG SINGLE EXTEND	Analog	ON	ON	ON	ON	BROWN SWC IR
ANALOG SINGLE WIRE	Analog	ON	ON	ON	OFF	BROWN SWC IR
CLARION	IR DATA	ON	OFF	OFF	ON	MALE 3.5MM JACK
CUSTOM	IR DATA	ON	OFF	ON	OFF	HEAD UNIT DEPENDANT
GRUNDIG	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
JVC	IR DATA	OFF	OFF	ON	OFF	BROWN SWC IR
KENWOOD 1	IR DATA	ON	OFF	OFF	OFF	BROWN SWC IR
KENWOOD 2	IR DATA	ON	ON	OFF	OFF	BROWN SWC IR
KEY 1 / KEY 2	Analog	OFF	ON	ON	OFF	KEY1 / KEY 2 WIRES
KEY 1 / KEY 2 EXTEND	Analog	OFF	ON	ON	ON	KEY1 / KEY 2 WIRES
PHILIPS	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
PIONEER 1	Analog	OFF	OFF	OFF	ON	MALE 3.5MM JACK
PIONEER 2	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
SONY	Analog	ON	OFF	ON	ON	MALE 3.5MM JACK

#### DIPSWITCH 5 & 6

Dipswitch 5 & 6 are reserved for vehicle specific configuration

KEY1 and KEY2	KEY1 and KEY2 are specifically tailored for analog learning mode-style radios. Our SWC module is designed with a resistor chain that precisely matches the required resistance for seamless compatibility with this type of head unit.
KEY1 and KEY2 EXTEND	This mode extends every button press to 2 seconds during the learning process. However, with rotary wheel-designed steering wheel buttons, holding for 2 seconds isn't feasible. Our KEY1 and KEY2 extend feature addresses this by automatically prolonging each press, simplifying head unit programming even in such scenarios. Extend mode is not intended for normal use, it is only used in the teaching process.
ANALOG SINGLE WIRE and ANALOG SINGLE WIRE EXTEND	This function operates similarly to KEY1 and KEY2 but transmits all unique values through the IR SWC single wire. This is crucial for compatibility with learning-style head units featuring only one learning input wire. To ensure compatibility, we've incorporated this feature into our steering wheel control interface, ensuring seamless operation across various head unit setups. The Analog Extend mode functions identically to its counterpart within the KEY1 and KEY2 system but transmits through a single wire.

## SWC INTERFACE

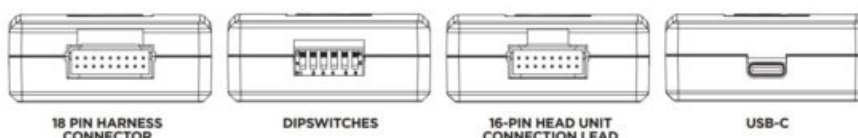


## CONNECTION GUIDE

### BEFORE INSTALLATION

Prior to installing the interface, it is essential to remove and disconnect the factory stereo. For guidance on this process, please refer to the vehicle owner's manual/handbook or seek assistance from a professional.

### SETTING THE DIPSWITCHES

This interface includes a set of dipswitches. Consult the dipswitch selection guide to select the appropriate configuration. To activate a dipswitch, press it downward into the 'ON' position. Refer to the diagram for an example of the 'KENWOOD1' dipswitch configuration.

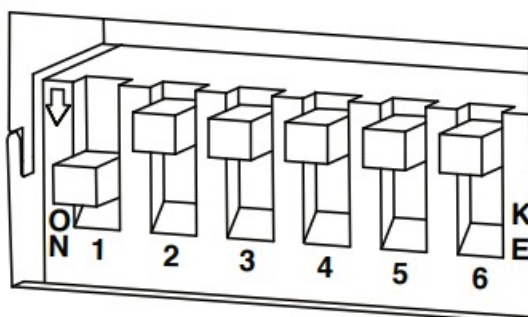

## INSTALLATION

1. Take the interface, then connect the 16-PIN head unit connection lead and the 18-PIN steering wheel harness connectors to their respective ports.
2. Connect the head unit connection lead to the steering wheel remote input on the rear side of the aftermarket stereo. Connection methods vary based on the stereo brand, utilising either a 3.5mm jack connector SWC IR wire or wired inputs KEY1 and KEY2.

For specific connection guidance, refer to your aftermarket stereo's installation manual if not clearly labelled on

the stereo harness.

3. Connect the power/speaker ISO connector from the interface to the corresponding power/speaker ISO connection on the aftermarket stereo.  
For aftermarket stereos lacking an ISO connector, refer to the “Wiring Key” on Page 2 for guidance on connecting wires. Certain interfaces may also include extra “flying” wires for additional functionalities such as parking brake trigger, reverse gear, and speed pulse. Further information on these wires is available in the “Flying Wire Wiring Key” section.
4. Connect the vehicle-specific connectors from the interface harness to the corresponding connectors on the vehicle harness.
5. Connect the flying wires on the harness to the rear of the stereo (iff applicable).
6. Connect the antenna adapter to the vehicle’s existing connection at the rear of the aftermarket stereo.
7. When installing an aftermarket reverse camera, connect the yellow RCA from the harness to the yellow RCA of the aftermarket camera. (If supported by the interface and vehicle)
8. When installing a DAB antenna, ensure to connect the DAB aerial connector to the rear of the new stereo.
9. After connecting all wires (along with any additional accessories), it’s crucial to thoroughly test the stereo and steering wheel controls before reassembling the dashboard. If steering wheel controls are unresponsive, inspect connections and check dipswitch settings. Repeat the connection process if necessary, following the outlined steps.

## STEERING WHEEL CONTROL CONFIGURATION



A Volume Up B Volume Down C Track Up	D Track Down E Source F Mute / Voice	G Pick Up H Hang Up I Vehicle Menu
--	--	--

The provided diagram, while meticulously researched, serves as an example only. Actual steering wheel control configurations may vary dependant on each vehicle.

## BUTTON REMAPPING

The steering wheel buttons listed offer the flexibility of being re-configured or assigned dual functions. The availability of these buttons depends on the specific vehicle to which the interface is being installed and if the aftermarket radio supports them.


In addition to button remapping, we offer the option to assign dual functions to each button on the steering wheel. This means that every button can be programmed to execute both a short press command and a long press command.

You can also add your own bespoke configuration. Button configuration can be done by PC, MAC and smart phone via the USB port.

Button Remapping instructions can be found in a separate guide on our website

## CONNECTION DIAGRAM


### SWC VEHICLE HARNESS

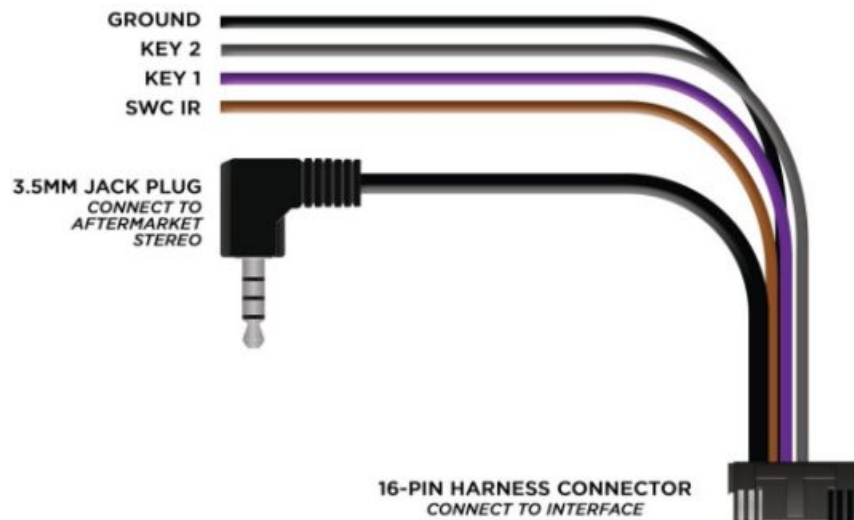

### SWC INTERFACE



### HEAD UNIT CONNECTION LEAD

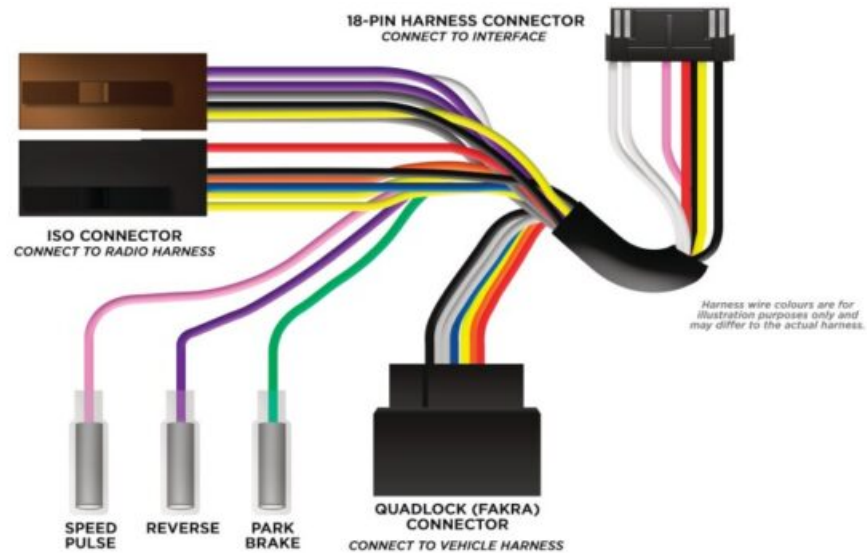

## Documents / Resources



[Aerpro SWVW3C Steering Wheel Control Interface](#) [pdf] Installation Guide  
SWVW3C Steering Wheel Control Interface, SWVW3C, Steering Wheel Control Interface, Wheel Control Interface, Control Interface, Interface

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.