



AFX LIGHT 10-6008 DJ LED Panel With Remote Control User Manual

[Home](#) » [AFX LIGHT](#) » AFX LIGHT 10-6008 DJ LED Panel With Remote Control User Manual 

AFX LIGHT 10-6008 DJ LED Panel With Remote Control User Manual

 


Contents


- [1 PRODUCT OVERVIEW](#)
- [2 WIRELESS REMOTE CONTROLLER](#)
- [3 DMX CHANNELS](#)
- [4 CONTROL PANEL FUNCTIONS IN “ACT” MODE](#)
- [5 VIDEO LIST](#)
- [6 UNPACKING INSTRUCTIONS](#)
- [7 CONTENTS OF THE CARTON](#)
- [8 EXPLANATION OF SYMBOLS ON THE SILKSCREEN](#)
- [9 SAFETY RECOMMENDATIONS](#)
- [10 DISCONNECT DEVICE](#)
- [11 OPERATING INSTRUCTIONS](#)
- [12 MENU STRUCTURE](#)
- [13 SPECIFICATIONS OF THE WIRELESS BT CONTROLLER](#)
- [14 SPECIFICATIONS](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)

PRODUCT OVERVIEW

CONTROLLER FRONT PANEL

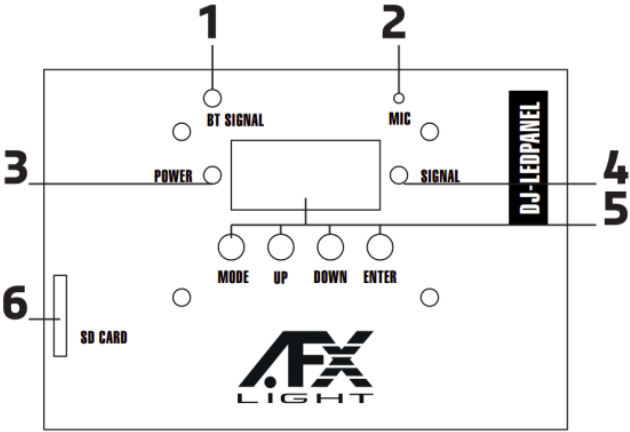


CONTROLLER REAR PANEL

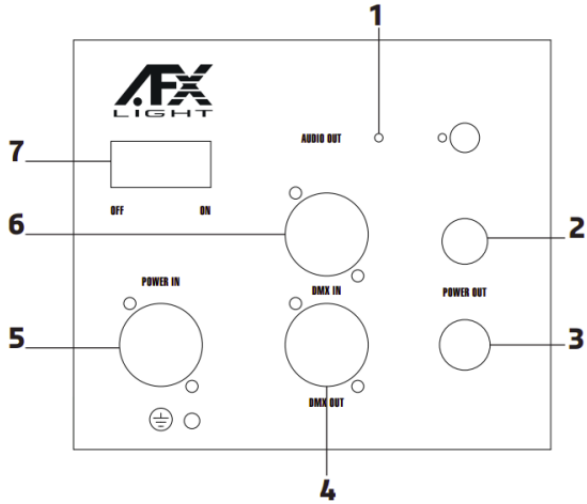 

WIRELESS REMOTE CONTROLLER

 PANEL

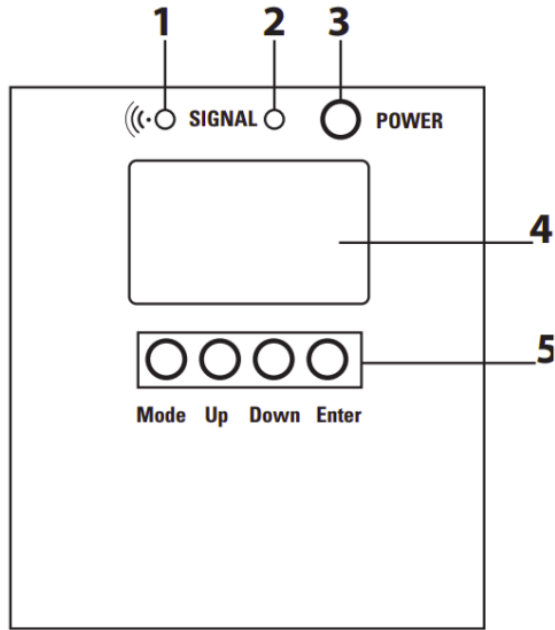

CONNECTORS



POWER INPUT

DMX CHANNELS

Value	CH1	CH2	CH3	CH4	CH5	CH6
000-009		JOYEUX ANNIVERSAIRE				Baby blue
010-015		C'EST UN GARCON				baby pink
016-020		C'EST UNE FILLE				blue
021-025		BONNE FETE				lit
026-030		BONNE ANNEE				orange
031-035		JOYEUX NOEL				purple
036-040		FELIZ NAVIDAD				turquoise
041-045		CHEERS				white
046-050		DANCE NOW				yellow
051-055		VIVE LES MARIES				
056-060		HAPPY NEW YEAR				
061-065		HAPPY BIRTHDAY				
066-070		FELIZ CUMPLEAÑOS				
071-075		FELIZ ANO NUEVO				
076-080		SANTE				
081-085		A LA VOTRE				
086-090		KARAOKE				
091-095		SLOW TIME				

096-100	000-255	CRUSH	000255Scrolling from slow to fast		000-249Flash from slow to fast250-255Sound active	000-219color change 220-255Fade from slow to fast	
101-105		LETS BOOGIE					
106-110		LE GATEAU					
111-115		LES TEMOINS					
116-120		MAZEL TOV					
121-125		ENTREE DES MARIES					
126-130		OUVERTURE DU BAL					
131-135		FELICITATIONS					
136-140		ROCK N ROLL					
141-145		SALSA					
146-150		LA PREMIERE DANSE					
151-155		SALUD					
156-160		DISCO					
161-165		MUSIC					
166-170		REGGAE					
171-175		SEXY LADY					
176-180		SEXY GUY					
181-185		BEAT IT					
186-190		ROCK IT					
191-195		BONHEUR					
196-200		I LOVE YOU					

201-205		HAPPINESS				
206-210		DANCE BATTLE				
211-215		BRAVO				
216-220		CLAP YOUR HANDS				

VALUE	CH7	CH8
	Video	Video
000-009	no function	no function
010-020	10	1
021-030	20	2
031-040	30	3
041-050	40	4
051-060	50	5
061-070	60	6
071-080	70	7
081-090	80	8
091-100	90	9
101-110	100	
111-120	110	
121-130	120	
131-140	130	
141-150	140	
151-160	150	
161-170	160	
171-180	170	
181-190	180	
191-200	190	
201-210	200	
211-220	210	
221-230	220	
231-240	230	
241-255	240	

CONTROL PANEL FUNCTIONS IN “ACT” MODE

SP0-SP9 ST-1- ST-08Strobe from slow to fastST-9:Sound
colour FR-0- FR-99FG-0- FG-99FB-0- FB-99Any co- lour
to fastSANTEWhite

FC-0 – FC-8Basic
CC-0 – CC-9Colour change from slow to fast

Function	Text	Font colour	Speed	Strobe Sound	Font Colour	Font Color	Colour change
A001	JOYEUX ANNIVERSAIRE	Orange	SP0 -SP9	ST-1- ST-08Strobe from slow to fastST-9:Sound	FC-0 – FC-8Basic colour	FR-0- FR-99FG-0- FG-99FB-0- FB-99Any colour	CC-0 – CC-9Colour change from slow to fast
A002	C'EST UN GARCON	Baby blue					
A003	C'EST UNE FILLE	Baby pink					
A004	BONNE FETE	Baby blue					
A005	BONNE ANNEE	Baby pink					
A006	JOYEUX NOEL	Baby blue					
A007	FELIZ NAVIDAD	Baby pink					
A008	CHEERS	Baby pink					
A009	DANCE NOW	Turquoise					
A010	VIVE LES MARIES	Purple					
A011	HAPPY NEW YEAR	Baby pink					
A012	HAPPY BIRTHDAY	Baby blue					
A013	FELIZ CUMPLEAÑOS	Baby pink					
A014	FELIZ ANO NUEVO	Blue					
A015 : SANTE White							
A016	A LA VOTRE	Blue					
A017	KARAOKE	White					
A018	SLOW TIME	Purple					
A019	CRUSH	Turquoise					
A020	LETS BOOGIE	Purple					
A021	LE GATEAU	Yellow					
A022	LES TEMOINS	Baby pink					
A023	MAZEL TOV	Turquoise					
A024	ENTREE DES MARIES	Baby pink					
A025	OUVERTURE DU BAL	Baby pink					
A026	FELICITATIONS	Baby blue					

A027	ROCK N ROLL	Baby pink				
A028	SALSA	Turquoise				
A029	LA PREMIERE DANSE	Yellow				
A030	SALUD	White				
A031	DISCO	White				
A032	MUSIC	Turquoise				
A033	REGGAE	Baby pink				
A034	SEXY LADY	Yellow				
A035	SEXY GUY	Turquoise				
A036	BEAT IT	Lit				
A037	ROCK IT	Lit				
A038	BONHEUR	Lit				
A039	I LOVE YOU	Lit				
A040	HAPPINESS	Lit				
A041	DANCE BATTLE	Lit				
A042-047	Effect	None				
A048	Video(SD card)	None				

VIDEO LIST

LV001 Car 1	LV051 DJ 2	LV101 Halloween 4	LV151 Sexy Dance 1
LV002 Casino 1-6	LV052 DJ 3	LV102 Halloween 5	LV152 Sexy Dance 2
LV003 Casino 7-12	LV053 DJ 4	LV103 Halloween Party 1	LV153 Sexy Dance 3
LV004 Christmas EN Version	LV054 DJ 5	LV104 Halloween Party 2	LV154 Sexy Dance 4
LV005 Christmas FR Version	LV055 DJ 6	LV105 Happy birthday 1.	LV155 Sexy Dance 5
LV006 Christmas SP Version	LV056 ELECTRO 1	LV106 Happy Birthday EN Version 2 Loop	LV156 Sexy Dance 6
LV007 Christmas Tree	LV057 ELECTRO 2	LV107 Happy Birthday EN Version 3 Loop	LV157 Sexy Dance 7
LV008 Countdown 1	LV058 ELECTRO 3	LV108 Happy Birthday FR Version 2 Loop	LV158 Sexy Dance 9
LV009 Countdown 2	LV059 ELECTRO 4	LV109 Happy Birthday FR Version 3 Loop	LV159 Sexy Dance 10
LV010 Countdown 3	LV060 ELECTRO 5	LV110 Happy Birthday SP Version 2 Loop	LV160 Sexy Dance 11

LV011 Countdown 4	LV061 ELECTRO 6	LV111 Happy Birthday SP Version 3 Loop	LV161 Sexy Dance 12
LV012 Countdown 5	LV062 ELECTRO 7	LV112 Happy Halloween 1	LV162 Sexy Dance 13
LV013 Countdown 6	LV063 ELECTRO 8	LV113 Happy Halloween 2	LV163 Sexy Dance 14
LV014 Countdown 7	LV064 ELECTRO 9	LV114 Happy Halloween 3	LV164 Sexy Dance 15
LV015 Countdown 13	LV065 ELECTRO 10	LV115 Happy New Year EN Version 1	LV165 Sexy Dance 16
LV016 Countdown 12	LV066 ELECTRO 11	LV116 Happy New Year EN Version 2	LV166 Sexy Dance 17
LV017 Countdown 8-11	LV067 ELECTRO 12	LV117 Happy New Year EN Version 3	LV167 Sexy Dance 18
LV018 Dance mix 1	LV068 Face 1	LV118 Happy New Year EN Version 4	LV168 Sexy Dance 19
LV019 Dance mix 2	LV069 Face 2	LV119 Happy New Year FR Version 1	LV169 Sexy Dance 20
LV020 Dance mix 3	LV070 Face 3	LV120 Happy New Year FR Version 2	LV170 Sexy Dance 21
LV021 Dance mix 4	LV071 Face 4	LV121 Happy New Year FR Version 3	LV171 Santa Claus 1
LV022 Dance mix 5	LV072 Face 5	LV122 Happy New Year FR Version 4	LV172 Santa Claus 2
LV023 Dancer mix 1	LV073 Face 6	LV123 Happy New Year SP Version 1	LV173 skull
LV024 Dancer mix 2	LV074 Fireworks 1	LV124 Happy New Year SP Version 2	LV174 skull 1
LV025 Dancer mix 3	LV075 Fireworks 2	LV125 Happy New Year SP Version 3	LV175 skull 2
LV026 Dancer mix 4	LV076 Fireworks 3	LV126 Happy New Year SP Version 4	LV176 skull 3
LV027 Dancer mix 5	LV077 Fireworks 4	LV127 Illusion 1	LV177 skull 4
LV028 Dancer mix 6	LV078 Fireworks 5	LV128 Illusion 2	LV178 skull 5
LV029 Dancing Pumpkin 1	LV079 Fireworks 6	LV129 Illusion 3	LV179 skull 6
LV030 Disco Loop 1	LV080 Fireworks 7	LV130 Music 5	LV180 skull 7
LV031 Disco Loop 2	LV081 Fireworks 8	LV131 Music 6	LV181 skull 8
LV032 Disco Loop 3	LV082 Fireworks 9	LV132 Music 7	LV182 skull 9
LV033 Disco Loop 4	LV083 Fireworks 10	LV133 Music 8	LV183 skull 10
LV034 Disco Loop 5	LV084 Fireworks 11	LV134 Music 9	LV184 skull 11
LV035 Disco Loop 6	LV085 Fireworks 12	LV135 Music 10	LV185 skull 12
LV036 Disco Loop 7	LV086 Ghost 1	LV136 Music 11	LV186 skull 13

LV037 Disco Loop 8	LV087 Ghost 2	LV137 Music 12	LV187 skull 14
LV038 Disco Loop 9	LV088 Grave 1	LV138 Music 13	LV188 Spot 1
LV039 Disco Loop 10	LV089 Grave 2	LV139 Music 14	LV189 Spot 2
LV040 Disco Loop 11	LV090 Grave 3	LV140 Marry 1	LV190 Spot 3
LV041 Disco Loop 12	LV091 Grave 4	LV141 Marry 2	LV191 Spot 4
LV042 Disco Loop 13	LV092 Grave 5	LV142 Pacman 1	LV192 Trick or Treat 1
LV043 Disco Loop 14	LV093 Grave 6	LV143 Piano	LV193 Trick or Treat 2
LV044 Disco Loop 15	LV094 Grave 7	LV144 Pumpkin	LV194 Tunel
LV045 Disco Loop 16_0	LV095 Grave 8	LV145 Rock 1	LV195 Video 80s – 1
LV046 Disco Loop 17	LV096 Grave 9	LV146 Rock 2	LV196 Video 80s – 2
LV047 Disco Loop 18	LV097 Grave 11	LV147 Rock 3	LV197 Video 80s – 3
LV048 Disco Loop 19	LV098 Halloween 1	LV148 Rock 4	LV198 Zombie 1
LV049 Disco Loop 20	LV099 Halloween 2	LV149 Rock loop 1	LV199 Zombie 2
LV050 DJ 1	LV100 Halloween 3	LV150 Rubiks cube 1	LV200 Laser 01
			LV201 Laser 02

UNPACKING INSTRUCTIONS

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the freight company immediately and retain packing material for inspection if any parts appear to be damaged from shipping or the carton itself shows signs of mishandling. Keep the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

CONTENTS OF THE CARTON

- 4 pcs LED panels
- 1 pc control unit
- 1 pc. user manual
- 1 pc. wireless BT controller

EXPLANATION OF SYMBOLS ON THE SILKSCREEN



The triangle containing a lightning symbol is used to indicate whenever your health is at risk (due to electrocution, for example).



An exclamation mark in a triangle indicates particular risks in handling or operating the appliance.



Class I protection: Connect only to an earthed mains outlet



The unit complies with UK standards



For indoor use only



Minimum distance between the appliance and other objects



Do not stare into the light beam



CAUTION



DO NOT OPEN THE HOUSING SHOCK HAZARD

Please read this manual carefully before operating this product.

SAFETY RECOMMENDATIONS

- Please read these instructions carefully, they include important information about the installation, usage and maintenance of this product.
- The appliance is part of class I and must exclusively connected to an earthed mains outlet.
- This product is intended for indoor use only!
- To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are nonflammable materials close to the unit while operating.
- The max. ambient temperature (Ta) is 40°C. Don't operate the fixture at higher temperatures.
- In the event of a serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction.
Please contact the nearest authorized technical assistance center. Always use the same type of spare parts.
- Make sure the power cord is never crimped or damaged.
- Avoid direct eye exposure to the light source while it is on as sensitive persons may suffer an epileptic shock (especially meant for epileptics)!.
- The light source of this fixture is not replaceable. When the light source reaches its end of life, the whole fixture needs to be replaced. The product is not intended for household and domestic use.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- The lenses, housing or ultraviolet filter must be replaced if they are visibly damaged.

DISCONNECT DEVICE

The power outlet must be installed near the equipment and be easily accessible.

FRONT PANEL DESCRIPTION OF THE CONTROL UNIT

1. Bluetooth signal sensor
2. MIC for sound-controlled operation
3. POWER led: lights up when the unit is on
4. SIGNAL led: lights up when the unit receives a signal
5. Control panel with LCD display and control buttons
6. SD card input: plug the supplied SD card that contains all pictures and videos

REAR PANEL DESCRIPTION OF THE CONTROL UNIT

1. Audio output via 3.5mm Jack: connect the output to an active box, etc. to listen to the sound of the videos on the SD card
2. POWER OUT: DC and signal output. Link this cable to the first LED panel
3. DC output only
4. DMX OUT: 3-pin XLR connector that sends the DMX signal to another unit in master-slave mode
5. POWER IN: Connect the supplied mains adaptor to this input and the other end into an appropriate mains outlet with earth connection
6. DMX IN: 3-pin XLR connector for connection to a DMX controller
7. ON/OFF switch

OPERATING INSTRUCTIONS

CONTROL PANEL (5)

The control panel allows to make the settings. It has a small LCD screen and four buttons, which are described hereafter.

Button Function

<MENU>: Scrolls through the first level of options, or exits from the current menu or function

<UP>: Navigates upward through the menu list or increases the numeric value when in a function

<DOWN>: Navigates downward through the menu list or decreases the numeric value when in a function

<ENTER>: Enables the currently displayed menu or sets the currently selected value in to the current function

MENU STRUCTURE

Mode	Function	Value	Description
SYS	Sd Ad	001-512	DMX address setup
	d-CH	8 CH	8 channel DMX mode
	Page	P1L/P1R/P2/P4	Single panel (left)/Single panel (right)/2 panels/4 panels
ACT	A001-A035	SP/ST/FC/FR/FG/FB/CC	Please refer to chapter "Control panel functions in "ACT" mode"
	A036-A041	SP	
	A042-A047	SP	
	A048	1-201	Video files (SD card)

SOUND ACTIVATED/AUTOMATIC MODE

Set the control panel to Text scrolling, strobe, color change, fade speed or sound active and you can adjust the font colour in the digital menu.

MASTER/SLAVE MODE

Connect the control units via the DMX IN and OUT connectors. All units will follow the master unit.

DMX CONTROL

Connect the control unit to a DMX console and set up the DMX address.

OPERATION OF WIRELESS BT CONTROLLER

TOP PANEL DESCRIPTION

1. Bluetooth signal indicator
2. Power signal indicator
3. ON/OFF button
4. LCD display
5. Control panel

CONNECTORS

1. DMX input
2. DMX output
3. Charger input

OPERATION

Use the 4 buttons to operate the wireless remote controller.

MENU MAP

MODE	FUNCTION	VALUE	DESCRIPTION
Action	Text	A001-A041	See “Control Channel Functions in ACT mode”
	Effect	A042-A047	
	SD card (video)	A48	
DMX	DMX	Wired DMX controller plugged in	

DMX WIRELESS CONTROL

The Controller can be connected to a DMX controller to send wireless signals to an unlimited number of DJ-LEDPANELS.

Select the desired function on the DMX controller and the wireless BT controller will send the signal to the units.

SPECIFICATIONS OF THE WIRELESS BT CONTROLLER

USB charge voltage : 5V? 1000mA

Built-in Lithium battery : 3.7V? 1000mA

Working current : 5V? 100mA

Weight : 0.2kg

Dimensions: 110 x 88 x 30mm

SPECIFICATIONS

Input voltage : 100-240V~ 50/60Hz mains adaptor

Output voltage : 2 x 5V 40A

Consumption : 400W

Total dimensions : 2320 x 40 x 1140mm

Total net weight : 32kg

Dimensions of a panel : 580 x 40 x 1140mm

Dimensions of the flight case : 1363 x 371 x 786 mm

Weight of empty flight case : 40kg

Dimensions controller : 315 x 142 x 163mm

Weight of the controller : 2.9kg

Total weight : 75kg



IMPORTANT NOTE: Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed.



 
AFXLIGHTPRO



Download the manual in other languages



Assembled in PRC
Designed by LOTRONIC S.A.
Rue F. Englert 17
Bt 2 · 1480 Tubize
Belgium · info@lotronic.net

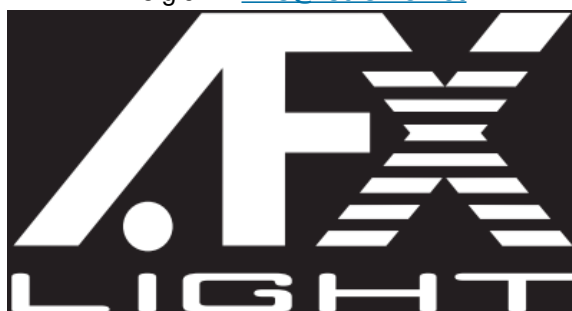

Documents / Resources

	AFX LIGHT 10-6008 DJ LED Panel With Remote Control [pdf] User Manual 10-6008 DJ LED Panel With Remote Control, 10-6008, DJ LED Panel With Remote Control, Panel With Remote Control, Remote Control
--	---

References

- [AFX LIGHT](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.