

AFX DD2 15-1839 2-Way DMX Distributor User Manual

Home » AFX » AFX DD2 15-1839 2-Way DMX Distributor User Manual





15-1839 2-Way DMX Distributor **User Manual** Ref.: DD2 (15-1839) **USER MANUAL**




Imported from China by

LOTRONIC SA – Avenue Zenobia Gramm 9 – 1480 Saintes – Belgium





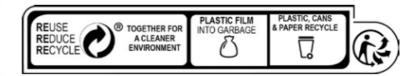

Contents

- 1 Safety Instructions
- 2 Fixture Linking
- **3 CABLE CONNECTORS**
- **4 INSTRUCTIONS**
- **5 Specifications**
- 6 Documents /

Resources

Safety Instructions

Please read these instructions carefully, they include important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future reference. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage, and that the line voltage you are connecting
 to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only!
- To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- · Always disconnect from power source before servicing.
- Maximum ambient temperature (Ta) is 104° F (40°C). Do not operate the fixture at temperatures higher than this.
- In the event of a serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type of spare parts.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.

DISCONNECT DEVICE: Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Fixture Linking


You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The combined number of channels required by all fixtures on a serial data link determines the number of fixtures that the data link can support.

Important: Fixtures on a serial/data link must be daisy chained in one single line. Maximum recommended serial data link distance: 100 meters (1640 ft.) Maximum recommended number of fixtures on a serial data link: 32 fixtures

CABLE CONNECTORS

Cabling must have a male XLR connector on one end and a female XLR connector on the other end.

DMX connector configuration

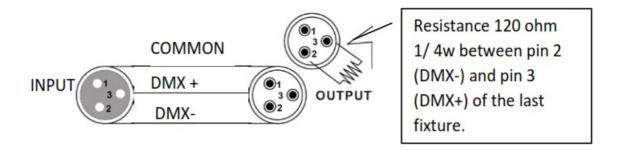


Termination reduces signal errors. To avoid signal transmission problems and interference, it is always advisable to connect a DMX signal terminator.

CAUTION

Do not allow contact between the common and the fixture's chassis ground. Grounding the common can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to check correct polarity and to make sure the pins are not grounded or shorted to the shield or each other.

INSTRUCTIONS

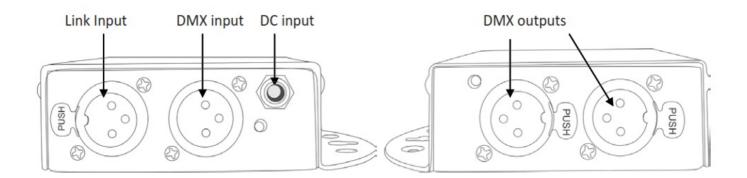

The unit has one input and 2 outputs.

The in- and outputs are electrically isolated.

One DMX connector (3pin) accepts 4 individual channels

Each DMX output features an independent driver and DATA+ & DATA- LED indicator.

DMX input: Connect the signal coming from the DMX controller

DMX output: connect to the DMX receiving device

Don't connect more than 31 units between the DMX output of the controller and the DMX distributor.

Don't connect more than 32 units on one output of the DMX distributor.

Specifications

IMPORTANT NOTE: Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed.



Documents / Resources



AFX DD2 15-1839 2-Way DMX Distributor [pdf] User Manual DD2 15-1839, 2-Way DMX Distributor

Manuals+,