



AGPTEK A09X MP3 Player with Bluetooth User Manual

[Home](#) » [AGPTEK](#) » AGPTEK A09X MP3 Player with Bluetooth User Manual 

AGPTEK A09X MP3 Player with Bluetooth User Manual



Thank you for purchasing AGPTEK Music Player.
For the best using experience, please read this user manual carefully before use and keep it for further reference.

Contents

1 Product Overview

2 Basic Operation

3 Main Functions

4 Music

5 Bluetooth

6 Troubleshooting

7 Q: How to reset the language?

8 Q: Can't turn on the player; the screen of player goes blank/black; the player is crashed or has a firmware bug.

9 Q: Can't download files from computer.

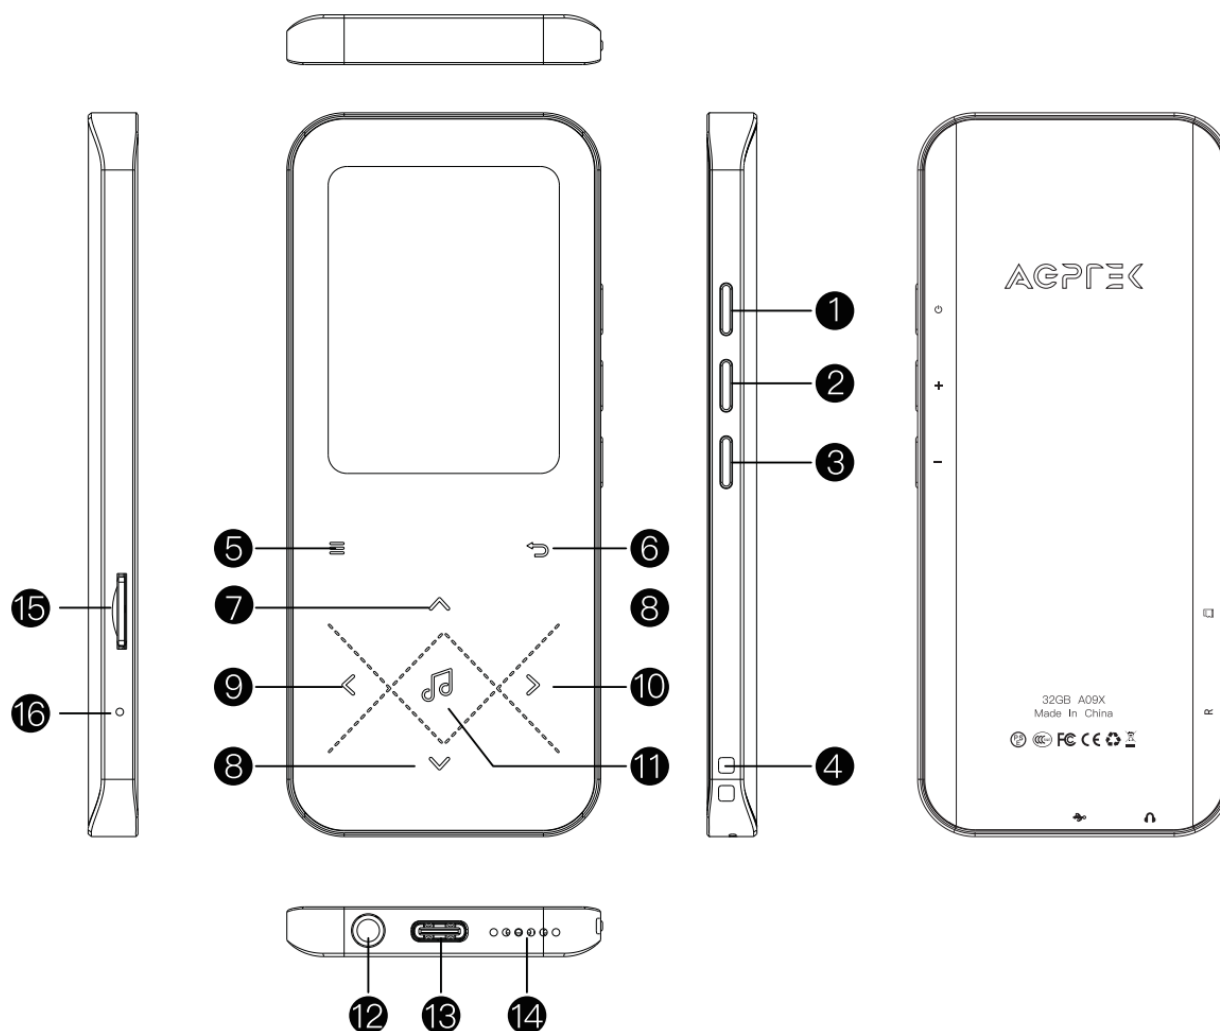 
10 Q: Can't recognize the player when it's connected to the computer.

10.1 Specifications

10.2 Documents / Resources

10.3 Related Posts




Product Overview



1. Volume +
2. Volume -
3. Power On/Off
4. Lanyard Hole
5. Submenu
6. Return

7. Scroll Up
8. Scroll Down
9. Scroll Left/Previous Track/Fast Rewind
10. Scroll Right/Next Track/Fast Forward
11. Play/Pause/Enter/Long Press to Music Playback
12. 3.5mm Audio Jack
13. Type-C Charging Port & Data Transmission
14. Speaker
15. TF Card Slot
16. Reset Hole

Basic Operation

Power On/Off	Press the Power On/Off button to turn on/off the player.
Screen Lock	Hold down the Submenu button to lock the screen and all buttons will be unavailable; hold down the button again to unlock.
Screen Display	Press Power On/Off button to activate screen.
Browse Item	button to browse items, press button to enter.
Return	On any interface, press  the button  to go back; hold down the * button to go back to home menu directly.
Charge the Player	Connect the player to a 5V/500mA charger Charge the or computer USB port with a Type-C cable .
One-key Music Playback	On any interface, hold down the a button  and it will go to the Music Playback interface directly.
Connect to the PC & Transfer Audio Files	Connect the player to your PC with a Type-C cable, then copy audio files to the player "AGP-AD9X" folder.
	When you finish copy, please select "Eject" and wait until the computer confirms a safe ejection before you unplug the Type~C cable.
	Note: Please do not disconnect during file transferring, or it may cause malfunction of the player and the files

Main Functions

❖ Home Menu

The home menu is the starting point of each application. There are 9 functions on the home menu: Music/ FM Radio/ Folder/ Bluetooth/ Recorder/Video/ E-book/ Tools/ Settings.


Music

 
Find "Music" on home menu and press  button to access. A related list will show:

- All songs.
- Resume/Now Playing.
- Artists/Albums/Genres.
- Playlists. There are 3 default playlists on the player: Playlist [1]/[2]/[3].
- Update Playlist. Update music files.
- Local Folder/Card Folder. View music file in the local folder or card folder. Note: These functions are only available when TF card is inserted.

> Play Music

Under music playing interface, hold down the > button to fast forward, and press it to skip to the next track. Hold down the <

button to fast rewind, and press it to play the previous track. Press the button to  play/pause. Back to Home/Play Mode/Sound Settings/Bookmarks/Add to Playlist/Remove from Playlist/ Delete. Under music playing interface, press the Submenu button to access to the submenu.


1. **Back to Home:** Choose to go to home menu.
2. Play Mode
 - A. Play Music From.** Choose to play from All Songs/This Artist/Album/Genre.
 - B. Shuffle Play:** Enable shuffle play mode. C. Repeat All: Repeat to play all songs.
 - D. Single Cycle:** Repeat to play one song..
 - E. Repeat All Off:** Turn on Sequential Play mode.
 - F. Repeat Settings:**
 - a. Repeat Mode.**
 - Enter. Press the  button to enter.
 - Set up. Press the >> button to confirm the starting time A when A is flashing. Then press > the button to set the ending time B when B is flashing. The passage from time A to B will repeat automatically. The icon for A-B indication will appear on the screen. Press the > button again to go back to normal playback.
 - b. Replay Times.** Set the replay times from 1 to 10. c. Replay Interval. Set the replay gap from 1 to 10 (seconds).
3. **Sound Settings**
 - A. Variable Speed Playback:** -8Rate to +8Rate
 - B. Volume Limit:** After setting up the maximum volume, you can use the Volume +/- button to adjust volume when the screen is off.
 - C. Equalizer:** Off, Rock, Funk, Hiphop, Jazz, Classical, Electronic Music, customize your favorite equalizer.
4. **Bookmarks.** Choose to add bookmark for the song that is playing, or go to/delete the bookmark you added.
5. **Add to Playlist/Remove from Playlist.** Choose to add to or remove from the 3 existing playlist.
6. **Delete.** Choose to delete the song that is playing.


FM Radio

Find "FM Radio" on home menu and press  button to access. A related list will show:

- **Presets.** All the saved stations will be listed here.
- **Manual tune/Auto tune.** When choose "Auto tune", the searched stations will be saved in "Presets" automatically.

- **FM Recordings.** View the radio recording files. You will need to choose from local folder or card folder if the TF card is inserted. The radio recordings will also be saved in Recordings and Recordings library.
 - **Start FM Recording/Save/Clear Station/Auto Tune/Tuner Region/FM Recordings.**

Under radio playing interface, press the  button to switch among preset stations, press the < / > button to find tune stations. Press the Submenu button to access to its submenu which includes:


1. Start FM Recording. Press the  button to pause/continue, press the button and select “Yes” to save the recording file.
2. Save/Clear station/Auto tune.
3. Tuner Region. Choose from Common/European/Japan Band as needed.
4. FM Recordings

Folder

Find “Folder” on home menu and press button to access. All of the files in the player will be listed. If the TF card is inserted, you can choose to go to Local folder or Card folder.



- **Multiple Folders Loop Playback:** Play music in the folder, and it can loop from A folder to B folder.


Bluetooth

Find “Bluetooth” on home menu and press  related list will show, including **Bluetooth On/Off, Search for Devices, Devices List, BT Upgrade.** Select the device you want to connect/disconnect, and then press to connect/disconnect. After successfully connected, this player is ready to play music or FM radio via Bluetooth headphones, Bluetooth speaker, etc.

Note:

- When listen to radio by Bluetooth, wired headphones are needed as a radio antenna.
- BT Upgrade function is only available for manufacturer, not for user.
- Recorder

Find “Recorder” on home menu and press button to access the recording interface. Press the button to start voice recording, press again to pause. Press the  button and choose “Yes” to save the recording file. Press the  Submenu button to access to its submenu which includes:

- **Recordings Library.** Find the saved recordings in Recordings and Recordings library. You will need to choose from local folder or card folder if the memory card is inserted. While it’s on recording playing interface, press the  Submenu button and choose “Delete” to delete.
- **Storage.** Choose to store your recordings in internal or external memory. Confirm your selection with a button. (Only available when TF card is inserted)
- **Record Format.** Choose the record format between MP3/WAV.

• Record Settings:

1. Set rec bitrate. Set the recording bitrate as you need.
2. Record from. Choose the recording source from the microphone or line in.


Note: There are 2 functions after choosing to record from Line in.


Play. Play music after connecting the player and speaker via line-in cable.

Record. Through the line-in cable, connect 2 players or connect the player and other devices with an output function to record the audio.

3. Track AVR mode. Choose normal or track on.

Videos

Press the  button to access. You will need to choose from local folder or card folder if the memory card is inserted.



Press the  button to watch videos, press the < / > button to go to previous/next video or hold down to fast backward/forward.

When it's on video playing interface, press the Submenu button to access to its submenu, including: Brightness, Repeat, Delete Video, Update Playlist. Set according to your preference.

Tools



Find "Tools" on home menu and press button to access. A related list will show:

• Photos


Press the  button to access. If the TF card is inserted, you need to choose from a local folder or a card folder. Press  button to view pictures, press the < / > button to go to previous NeXT picture. Under picture viewing interface, press the Submenu button to access to its submenu, including: Brightness, Backlight Timer, Slideshow Settings, Delete Photos, Update Playlist. Set according to your preference.

• Calendar



Press the button to switch among year/month/day, and press the < / > // button to choose specific year/month/day.


- Stopwatch Press  the button to enter, press again to start the timer, and then press again to pause; press the Submenu button to resume. Press  the button to start a new one. The maximum Stopwatch list is 4.


• Clock

Press the  button to enter, a related list will show: Alarm On/off, Alarm Time, Alarm Cycle (Once/Daily/Work Day), Alarm Music, Alarm Volume. Set according to your preference.


Start




A. Press the  button to start counting your daily steps. Press it again to stop counting steps and then press the  button to exit it.

B. Press the  button and choose “Yes” to save the record in “History”. If the history record is full, it will automatically cover the previous one. 07

1. Personal Info. Set your height, weight, and step length, and press the  button to confirm.
2. History. All your saved step records will be listed here, and you can save up to 7 records.
3. Clear History. You can choose to clear the history record you want or clear all the history records.

 
E-book

Press the  button to access. If the TF card is inserted, you need to choose from a local folder or a card folder.

Under text playing interface, press  /  the button to turn the pages. Press  the d button to play automatically, and press it again to stop. Submenu. Under text playing interface, press the Submenu button to enter its submenu and set your preference, including Autoplay Settings (2s-30s), Font Size, Page Color, Delete E-book, Select Bookmark, Delete Bookmark, Add Bookmark, Select Page, Local Folder and Card Folder (Only available when TF card is inserted).

Settings

Find “Settings” on home menu and press  related list will show, including: button to access. A

- **Language/Language.** Choose display language.
 - **Display Settings.** Set Brightness, Backlight Timer and Screensaver.
 - **Button Light.** Set the button light to be always on, on and off.
 - **Speaker.** Turn On/Off the Speaker.
 - Shutdown Settings.
1. **Power Off.** The music player will power off automatically when it reaches the set time (1-99 minutes).
 2. **Sleep Timer.** If there is no operation the device, it will power off automatically after the set time (1min, 2mins, 3mins, 5mins, 10mins).
- Date and Time. Choose “Time” to set time format and date. To set time, press  button to switch among hour and minute; Press A/ button to adjust the value of hour and minute. Set date under “Date Settings–Set Date” and adjust the date like “Time Settings”.
 - Information. Check the information and disk space about your player.
 - Format Device/Factory Settings. Format the device or restore to factory default settings.

Note: Before formatting the device, please backup the file so as not to lose any file.

Troubleshooting

Q: How to reset the language?

Q: Can't turn on the player; the screen of player goes blank/black; the player is crashed or has a firmware bug.

1. Restart the player and try again. 2. Or try poking the reset hole to reset and try again. 3. Update the firmware. Please contact our customer service or check our website at <https://www.agptek.com/blog> to download the firmware.

Q: Can't download files from computer.

1. Please check if it's connected properly; 2. Please check if the storage space of the internal memory is full;

Q: Can't recognize the player when it's connected to the computer.

1. Reconnect it. 2. Restart the computer and reconnect it. 3. Connect your player to another USB port to check. 4. Charge the player for about 10 minutes first.

Specifications

Screen		2,4" TFT	
Housing		Zinc Alloy Middle Frame + Aluminum Alloy Shell	
Unit Size		116 x 50 x 8mm/4.57 x 1.97 x 0.31 in	
Net Weight		80g/2.82oz	
Interface Type		Type-C 2.0	
Internal Memory		32GB	
TF Card Expansion		Up to 128GB (Not included)	
Format	Music	MP3/WMA/APE/FLAC/WAV/DRM/ACELP	
	Bluetooth	MP3/WMA/WAVE/FLAC/APE/M4A/AAC	
	Lyric	LRC	
	Video	AMV/AVI	
	Recording	MP3/WAV	
	E-book	TXT	
Playtime	Music	Wired	48 hours
		Bluetooth	6.5 hours
	Video	Wired	10 hours
	Radio	14 hours	
	Recording	50 hours	
Battery		500mAh Lithium Polymer Battery	
Charging Time		about 2.5 hours (5V/500mA)	

Note: The specifications are subject to change without prior notice.



Manufacturer:

Shenzhen RuiZu Digital Technology Co., Ltd.

Address:

6/F, Building D, KeShangMei Park, Chongqing Road, Fuyong, Bao'an District, shenzhen, China.



Documents / Resources



[AGPTEK A09X MP3 Player with Bluetooth](#) [pdf] User Manual

A09X MP3 Player with Bluetooth, A09X, MP3 Player with Bluetooth, Player with Bluetooth, Bluetooth

Manuals+.