



AGPTEK U3 Digital Music Player User Manual

[Home](#) » [AGPTEK](#) » AGPTEK U3 Digital Music Player User Manual 

AGPTEK U3 Digital Music Player User Manual




Thank you for purchasing AGPTEK Music Player. For the best using experience, please read this user manual carefully before use and keep it for further reference.

Contents

- 1 Buttons and Controls
- 2 Turn ON/OFF
- 3 Music Mode
- 4 Recording Mode
- 5 Voice Mode
- 6 FM Radio
- 7 Settings
- 8 Help and Troubleshooting
- 9 Specifications
- 10 Documents / Resources
- 11 Related Posts

Buttons and Controls

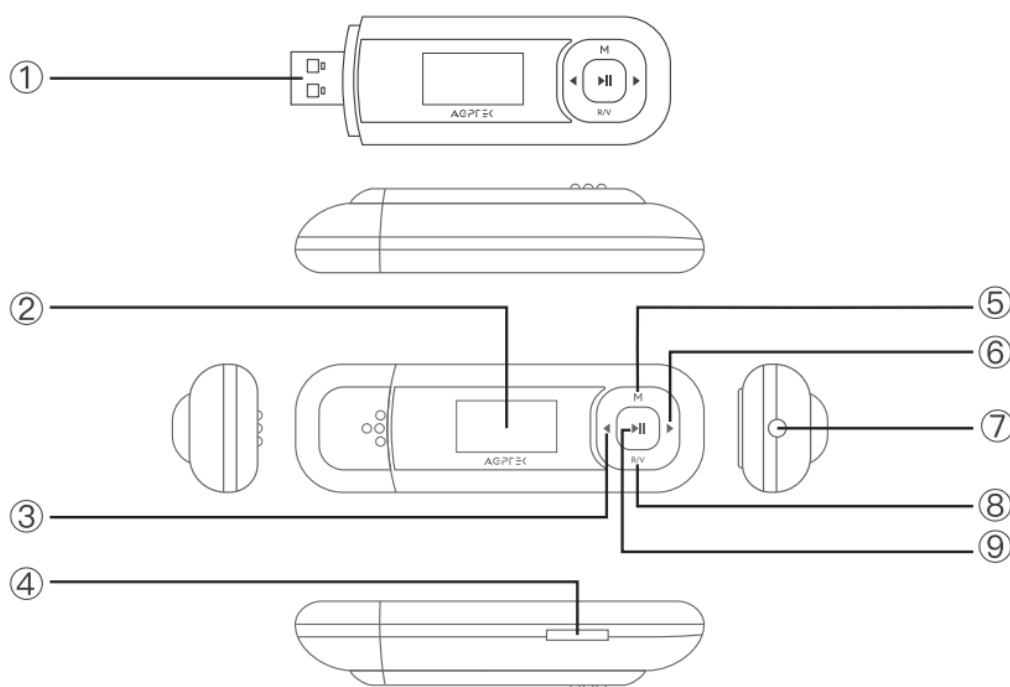

1. USB Port
2. LCD Screen
3. Previous Track/ Rewind/ Volume Up Navigation
4. Micro SD Card Slot
5. Menu (Hold to Main Menu)
6. Next Track/ Fast Forward/ Volume +/-/Down Navigation
7. Headphone Jack
8. R/V (Volume Control/ Return/ Backend Playback)
9. Play/Pause; On/Off Button/ Confirm Selection

Turn ON/OFF

Insert one AAA battery (not included) before you turn on the player. Press and hold the II button for about 2 seconds to turn it on/off

Music Mode

While there is a Music icon on the main menu, click the ► button to access. Click the button to play/pause.

1. Short press the M button to enter submenu.

2. Fast Forward/Rewind

Under music playback interface, press and hold the button to fast forward, and short press to the next track; press and hold the button to rewind, and short press to the previous track.

3. Volume Control

Under music playback interface, long press the R/V button to enter the volume control function, and press the or button to decrease or increase volume.

4. Music Backend Playback

Under music playback interface, short press the R/V button to select whether to enter music backend playback.

5. Submenu

Under music playback interface, press the M button to enter its submenu. Choose Exit or click R/V button to return.

Enter Submenu: Home, Storage Directory, Repeat Mode, Playback Setting, Sound Effect Mode, Reread Setting, Exit.

Under music playback interface, press the M button to access its function.

1. **Home:** Click to return to the main interface.

2. **Storage Directory:** Select the local folder or the TF card folder (only display after inserting the TF card); select or delete music from the storage directory.

3. **Repeat Mode:** Click the M button → → Repeat Mode to access its Submenu.

A. Single Once/Single Repeat: Play the song once/play the song repeatedly.

B. Folder Once/Folder Repeat: Play the directory file songs once/Play the directory file songs repeatedly.

C. All Once/All Repeat: Play all songs once/Play all songs repeatedly.

D. Browse Play: Play music in sequence for only 10s.

4. **Playback Settings:** Click the M button → Playback Settings, you can choose to play sequentially or randomly according to your needs.

Note: The player could only shuffle the songs in the folder which your music is included instead of all the music in the player.

5. **Sound Effect Mode:** Click the M button → Sound Effect Mode, you can freely choose from the 6 kinds of sound effects: Normal, Rock, Pop, Classic, Bass, Jazz.

6. **Reread Settings:** Click the M button → Reread Settings. Set “A-B Repeat”, “Number of Repeats” and “Repetition Interval” as you need.

A. Starting time A for replay is confirmed while choosing the Replay mode (The music playback interface displays “A-”).

B. Click the button to set the ending time B, the “A-B” indicator icon will show on the playback interface. Audio from A to B will repeat automatically.

Note: Please put the lyric file (format: LRC) and the music file in the same folder.

7. **Exit:** Click to return to the music playback interface.

Recording Mode

While there is a recording icon on the main menu, click the button to access its function.

Enter Submenu: Home, Start Recording, Recording File, Recording Quality, Recording Volume, Exit.

1. **Home:** Click to return to the main interface.
2. **Start Recording:** Press the button to enter the recording interface and automatically start recording. Press the ► button to pause/continue recording, and press the R/V button to return and choose whether to save the recording.
Note: If there is not enough space, it will automatically stop recording.
3. **Recording File:** All the recordings will be saved in Recording File in WAV format and named as REC001.WAV, REC002.WAV...etc.
4. **Recording Quality:** 64KBPS, 32KBPS.
5. **Recording Volume:** Low, Normal, High.
6. **Exit:** Click to return to the main interface

Voice Mode

While there is a voice mode icon on the main menu, click the ► button to access its function. Click the M button to access its submenu and select by

Submenu: Home, Play Mode, Sound Effect Mode, AB Repeat, Repeat Times, Repeat Interval, Exit.

1. **Home:** Click to return to the main interface.
2. **Play Mode:** You can choose to play sequentially or randomly according to your needs.
3. **Sound Effect Mode:** You can freely choose from the 6 kinds of sound effects:
Normal, Rock, Pop, Classic, Bass, Jazz.
4. **AB Repeat:** Enter repeat mode.
5. **Repeat Times:** 0-1-2-3-4-5-6-7-8-9-10 times.
6. **Repeat Interval:** 1-2-3-4-5-6-7 seconds.
7. **Exit:** Return to the voice mode interface.

FM Radio

While there is a FM Radio icon on the main menu, click the button to access its function.

Press the button to select a radio station, and long press the button to automatically search for a radio station.

Press the M button to enter its Submenu: Home, Radio Recording, Manual Search, Preset Radio Station, Save Station, Delete Radio Station, Auto Search, FM Region, Exit.

1. **Home:** Click to return to the main interface.
2. **Radio Recording:** Press the || button to enter the FM radio recording interface and automatically start voice recording. Press the button to pause/continue recording, and press the R/V button to return and choose whether to save the recording.

3. **Manual Search:** Press the button to enter the FM radio interface, and press the button to select channels to search for radio stations.
 4. **Preset Radio Station:** Press the II button to enter the FM radio interface, and press the button to select the saved radio channel.
 5. **Save Radio Station:** Up to 30 radio stations can be saved.
 6. Delete Radio Station.
 7. **Auto Search:** Press the button to enter the automatic search.
 8. **FM Region:** Normal Band, Japan, Europe and America.
 9. **Exit:** Click to return to the FM Radio interface.
- Note:** The earphone should be plugged in before start.

Settings

While there is a Setting icon on the main menu, click the II to access the following functions and select by 4/ button.

1. **Home:** Click to return to the main interface.
2. **Backlight Time:** 5s, 10s, 15s, 20s, 30s, always on.
3. **Brightness:** 0-1-2-3-4-5.
4. **Timed Shutdown:** Off, 10 mins, 15 mins, 30 mins, 60 mins, 120 mins.
5. **Power-saving Shutdown:** Off, 3 mins, 5 mins, 10 mins, 15 mins..
6. **Language:** Select the desired language.
7. **About Product Information:** Player Information, Disk Space.
8. Factory Default.
9. **Format:** Format the device.
10. **Ear Protection:** On/Off.
11. **Exit:** Click to return to the main interface,

Help and Troubleshooting

Can't turn on the player.

1. Check if the battery is put in (Battery Not Included).
2. Check if the battery is dead.
3. Connect to the computer and try to flash the device.

Can't download the file from the computer.

1. Please confirm if it's connected properly.
2. Please check if the storage space of the internal memory is full. 3. Please check if the USB cable is damaged.

The memory card is not recognized by the music player; can't insert the memory card into the music player.

1. The music player only supports memory cards in "FAT 32" format. You can check whether the memory card is

in “FAT 32” format on the computer.

2. You can buy genuine Kingston or SanDisk TF cards
3. Some music players have deep card slots, and you may use a fingernail or a hard gadget to assist in inserting the memory card.

How to play the music of the music player on car audio?

1. It's recommended to use a 3.5mm audio cable (not included) to transmit audio.
2. The USB port that comes with the music player only has the function of charging and transmission, without audio function.

Song files and audiobook files messed up.

1. When naming, it's recommended to rename songs in numerical or alphabetical order, for example, for 1000 songs, name them “0001+Song Name to 0999+Song Name”

Specifications

| | | |
|-------------------------|---|-----------|
| Screen | 1", 128*64 LCD display | |
| Battery | 1 AAA battery (not included) | |
| Size | about 81(W)*26(H)*13(L)mm | |
| Weight | about 22g | |
| Flash Memory | 8GB | |
| Memory Expansion | Support up to 128GB TF card | |
| Music Formats | MP1, MP2, MP3, WMA, WAV, APE, FLA, AAC, M4A | |
| Recording Formats | WAV | |
| Working Temperature | —40°C to 60°C | |
| The Screen is Off | Music | about 38H |
| | FM Radio | about 10H |
| The Screen is Always On | Music | about 20H |
| | FM Radio | about 7H |

Manufacturer:

ORIVER (SHENZHEN) LIMITED


Address:

RM510, BLK A, Qi Xing Chuang Yi Gong Chang, District 28, BaoAn, ShenZhen, China.

Made In China



Documents / Resources
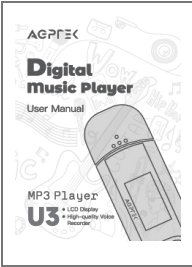
| | |
|---|--|
|  | <p>AGPTEK U3 Digital Music Player [pdf] User Manual</p> <p>U3 Digital Music Player, U3, Digital Music Player, Music Player, Player</p> |
|---|--|