



AGPTEK WC2 Wireless Controller User Manual

[Home](#) » [AGPTEK](#) » AGPTEK WC2 Wireless Controller User Manual 

AGPTEK

AGPTEK Wireless Controller User Manual

Thank you for purchasing the AGPTEK product. Please read this [User Manual] carefully before using the product, and retain it in for future use. If you have any questions or suggestions about our products, please contact: support@agptek.com.


Contents

- [1 Package Contents](#)
- [2 Detatils Description](#)
- [3 Fast STARTUP:](#)
- [4 Controller Working States:](#)
- [5 LED Description:](#)
- [6 Specifications](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Package Contents

1. Wireless Controller*2
2. NES Wireless Receiver*2
3. USB Wireless Receiver*2
4. USB Cable*2
5. User Manual*1

Detatils Description

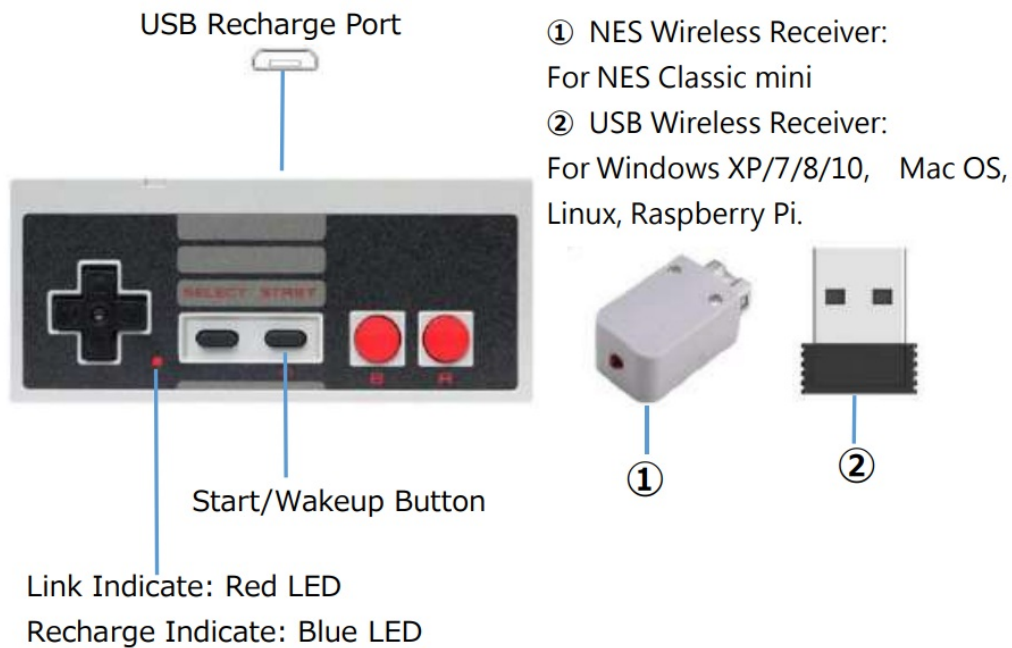

Fast STARTUP:

Plug the adapter to Console/PC, then press the START button of Controller.

1. Insert the receiver into the NES game console or PC.
2. Press and hold the START+SELECT+UP for 1s until Red LED flashes quickly. At this point Controller is in pairing mode. After Red LED does not flash quickly, but stays on, which means the pairing between the receiver and controller is successful.
3. If without any operations after 5s, Controller will enter into the standby mode. Red LED will turn off, and only the LED of NES Wireless Receiver will flash (USB Wireless Receive will not). You can activate the Controller via pressing any button.
4. Controller will enter into sleep mode if there is no operations after 10 mins. You can press the Start button to wake up the controller.
5. RESET Key = Press the START+SELECT at the same time.

Controller Working States:

1. Pairing Mode: Press and hold START+SELECT+UP for 1s until Red LED flashes quickly, which means Controller will enter into pairing mode.
2. Link Mode: If Controller and Receiver connect successfully, Red LED will light up. At this moment, you can play games.
3. Standby Mode: If without any operations after 5s, Controller will enter into standby mode, and LED will turn off. Press any one of buttons can wake it up.
4. Sleep Mode: If without any operations after 10 mins, Controller will enter into sleep mode. Only START button can wake it up.
5. Power off: When the batteries in your controller are dead, the controller will power off automatically.


LED Description:

Controller		NES Wireless Receiver	
State	LED	State	LED
Controller and Receiver connect successfully	Red LED lights up	Controller and Receiver connect successfully	Red LED lights up
In standby or sleep mode	LED turns off	Standby or Sleep mode	Red LED flashes
In pairing mode	Red LED flashes quickly		
In charging	Blue LED lights up		
Fully charged	Blue LED turns off		

Specifications

Model	WC2
Compatibility	NES Classic mini, Windows XP/7/8/10, Mac OS, Linux, Raspberry Pi
Charge method	Charge by 5V 500mA Charger, Charge by computer USB 2.0 port .
Charge time	About 2H
Battery	250mAH
Working time	100H
Wireless transmission	2.4GHz wireless connection
Bluetooth effective distance	-10m
Net weight	62g

Documents / Resources

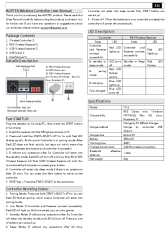	AGPTEK WC2 Wireless Controller [pdf] User Manual WC2 Wireless Controller, WC2, Wireless Controller, Controller
---	---

References

-  [Betriebszeit - Englisch-Übersetzung – Linguee Wörterbuch](#)
-  [drahtlose Übertragung - Englisch-Übersetzung – Linguee Wörterbuch](#)
-  [drahtlose Verbindung - Englisch-Übersetzung – Linguee Wörterbuch](#)
-  [Ladezeit - Englisch-Übersetzung – Linguee Wörterbuch](#)
-  [Nettogewicht - Englisch-Übersetzung – Linguee Wörterbuch](#)

Manuals+.