



AI-SONIC S2-C6.2 ACT 2 Way Active Speaker System Owner's Manual

[Home](#) » [AI-SONIC](#) » AI-SONIC S2-C6.2 ACT 2 Way Active Speaker System Owner's Manual 

AI-SONIC S2-C6.2 ACT 2 Way Active Speaker System Owner's Manual



Contents

- [1 Technical features](#)
- [2 Technical specification](#)
- [3 Wiring your system](#)
- [4 Dimensions](#)
- [5 Tweeter setup](#)
- [6 Important Safety instructions](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Technical features



S2-C6.2

 
 
- 6.5" 2-Way Component Speaker System
- Black sandblasted Stainless Steel Basket
- Black Aluminium Cone Rubber edge
- 1.0 inch ASV Voice Coil
- 12.6 Oz Magnet Structure
- 25mm Silk Dome Neodymium tweeter
- 2-way passive crossover

Technical specification

MODEL	S2-W6	S2-T25
FS	64 Hz	1500 Hz
Efficiency (SPL)	88 dB	93 dB
Qts	0,85	n/a
Vas	9,75 L	n/a
Impedance	4 Ohm	4 Ohm
Frequency response	40 Hz – 4,5 kHz	3,8 – 25 kHz
Power recommendation	40-150W	20-100W


Wiring your system

Tweeter level diagram

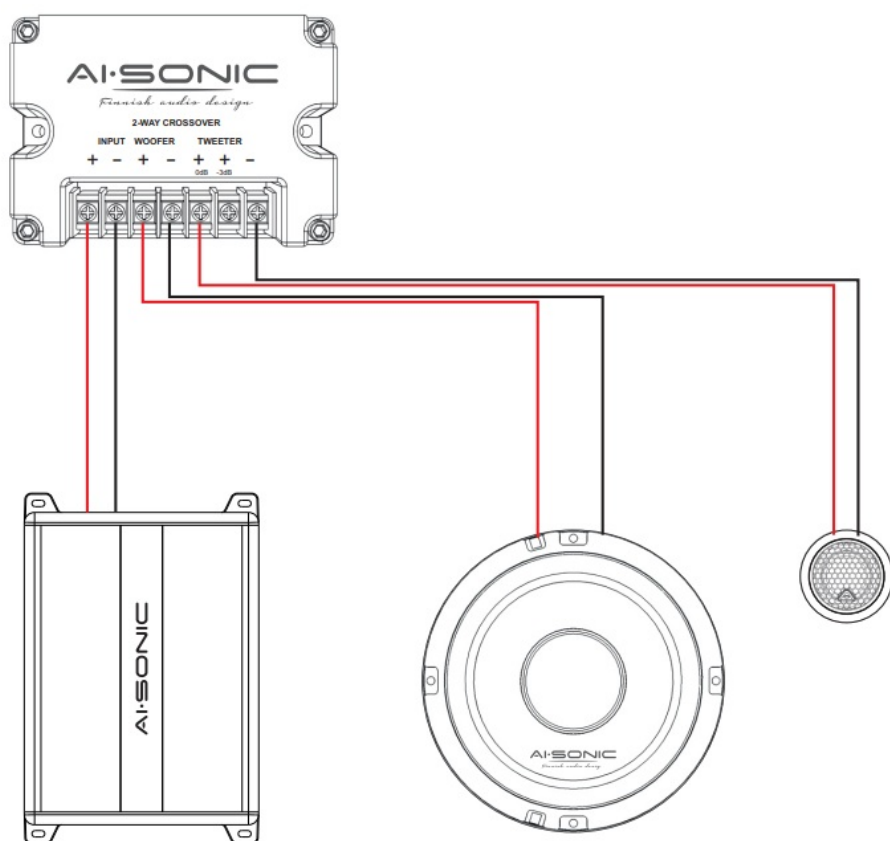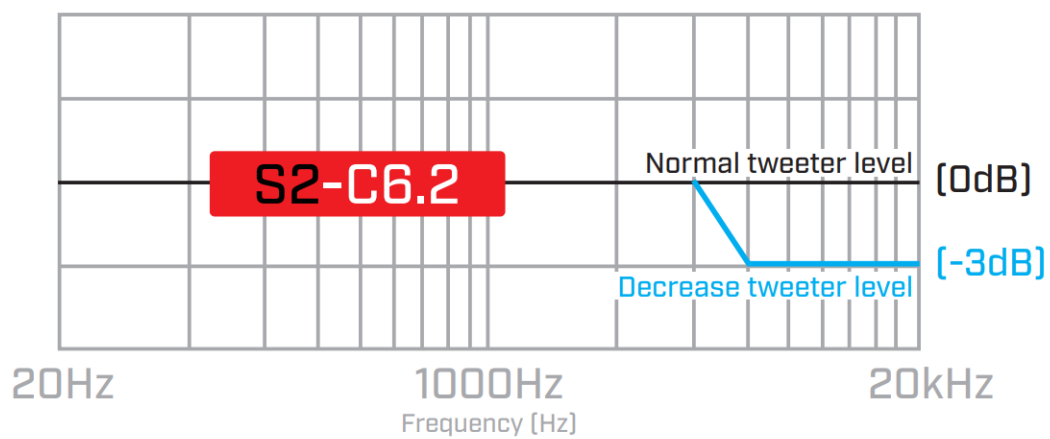

Dimensions

 S2-C6.2

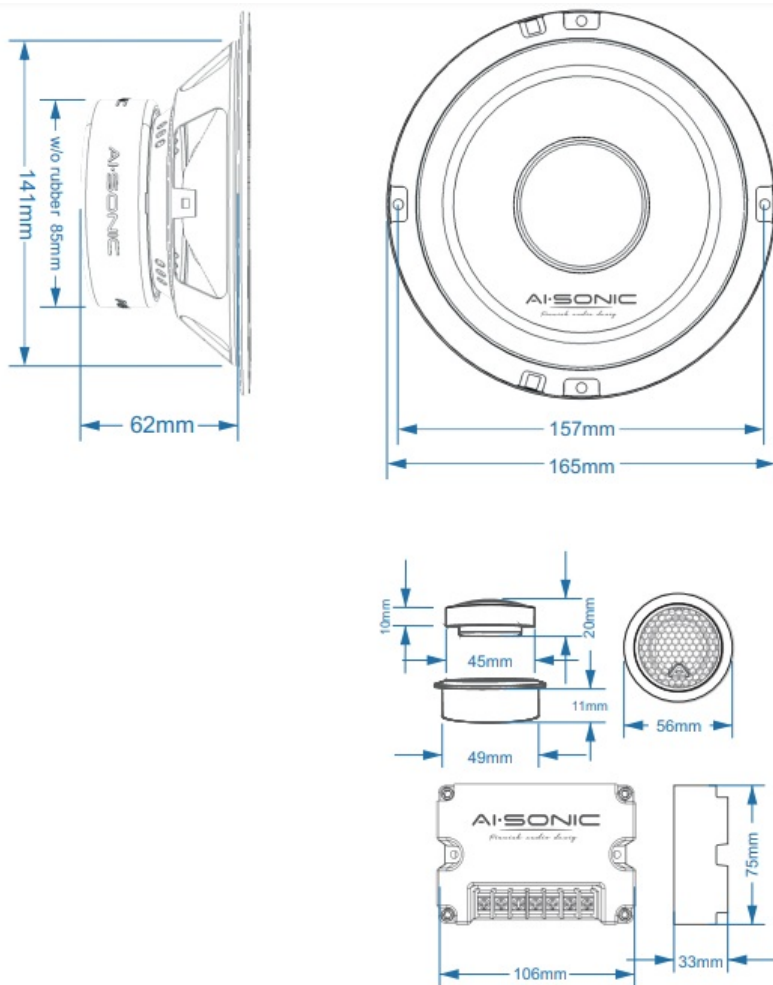


Tweeter setup

 
These values are recommendations by our own experience.

When tweeter is mounted towards listener  (**on axis**), tweeter level adjustment should be -3dB.

When mounted towards center of vehicle  (**off axis**), tweeter level adjustment should be 0dB.

On dashmount  (**off axis**) installation, tweeter will get window reflection, and on many cases needs to be connected with **inverted polarity***.

These setups are just recommendations. Try both ways and choose best for you.

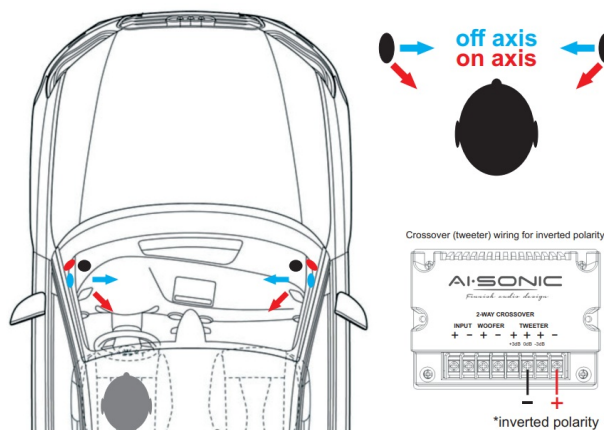

Important Safety instructions

Please read all warnings found in this manual. They inform you of the potential danger of personal injury or damage to property.

Our products are intended for use only by those possessing the necessary specialized knowledge.

The relevant safety regulations regarding related auto parts, the regulations on internal vehicle safety, as well as the regulations of the authorized vehicle manufacturers should be followed diligently.

Hearing damage

Continuous, excessive exposure to sound pressure levels in excess of 85dB can cause a loss of hearing. AI-SONIC components are capable of producing sound pressure levels greater than 85dB.

Volume and Driver Awareness

Use of sound components can impair your ability to hear necessary traffic sounds and may constitute a hazard while driving your automobile.

AI-SONIC accepts no liability for hearing loss, bodily injury or property damage as a result of use or misuse this product.

Working on Automobile

Do not use your automobile until all components of the loudspeaker system have been secured to the interior framework. Failure to do so may turn a component into a dangerous, flying projectile during a sudden stop or accident

Do not drill or drive screws through any vehicle interior or carpeted floor before inspecting the underside for potential punctures to control lines or cables. Be sure to avoid all fuel lines, brake lines, electrical cable or oil lines when planning the installation.

Before beginning installation of the loudspeaker system remove the minus connector (-) from the automobile battery in order to avoid possible short circuits.

Use care when removing interior trim panels. Car manufacturers use a variety of fastening devices that can be damaged in the disassembly process.

If sheet metal must be cut or removed contact your authorized car dealer for professional advice. By damage to supporting body structures the safety certificate may be withdrawn.

! Shock Hazard !

Do not touch the connectors when the system is running!

Customer Support

AI-SONIC is a trademark of

Oy Ai-Group Ab

info@audioimport.fi

www.ai-sonic.com

AI·SONIC

Finnish audio design

Documents / Resources



[AI-SONIC S2-C6.2 ACT 2 Way Active Speaker System](#) [pdf] Owner's Manual
S2-C6.2 ACT 2 Way Active Speaker System, S2-C6.2, ACT 2 Way Active Speaker System, Active Speaker System, Speaker System