Manuals+ — User Manuals Simplified.



Aidesichuang UCARD01 Smart Card Item Locator User Guide

Home » Aidesichuang » Aidesichuang UCARD01 Smart Card Item Locator User Guide 🖔

Aidesichuang UCARD01 Smart Card Item Locator User Guide

U card



Quick Start Guide



Open "Find My"





02.3

02.2 APP "Add Item"

02.3

Tap "Other Supported Item"

02.4

This Item Is Linked To Your Apple ID





02.5 Finish

Contents

- 1 Getting Started
- 2 Add Your U Card
- 3 Locate Your Item
- 4 Find Item When Out of

Range

- 5 When Your Item is Lost
- **6 Resetting Your U Card**
- 7 But Wait.. There's More
- 8 The Fine Print
- 9 About Apple Find My
- 10 Documents / Resources
 - 10.1 References

Getting Started

1. Power On/off:

Press your Ucard function button once to turn on-it should beep once indicating it is powered on. To power off, hold the same button for at least 3 seconds. You will hear 2 beeps indicating your Ucard is powered off.

2. Check For Updates:

To use the Apple Find My app to locate your Ucard, the latest version of iOS, iPados or Macos is recommended.

Add Your U Card

1. Start the App

Open Find My app on your supported iPhone or iPad. Allow notifications from the app.

2. Connect your Ucard

Power on your Ucard In Find My app, select the "Items" tab. Tap "Add Item" then tap Other Supported Items". Once your Ucard is located, tap "Connect" Choose are cognizable name and emoji for your U card and tap "Continue". Find My will ask for confirmation to add your Ucard to your Apple ID, tap"Continue".

Tap "Finish" and your Ucard will be setup and ready to be connected to whatever item you wish to locate e.g. your keys.

Locate Your Item

1. Find Ucard when it is Nearby

Open Find My app and select the "Items" tab Tap on your Ucard from the list. Tap "Play Sound" to make your Ucard beep. Tap "Stop Sound" to stop the beeps once you find your item.

2. Find Ucard Last Known Location

Open Find My app and select the "tems" tab, Tap on your Ucard from the list. Your Ucard last known location will appear on the map as the emoji you chose during setup.

To navigate to that last known location, tap "Directions" to open the Maps app.

Find Item When Out of Range

1. Enabling "Notify when Left Behind"

Open Find My app and select the "Items" tab. Tap on your Ucard from the list.

Under "Notifications", enable "Notify when Left Behind" toggle. You will receive a notification when you leave your Ucard behind and it's no longer in range of your device.

2. Enabling "Nofify when Found"

Under "Notifications", enable the "Notify When Found" toggle.

When your Ucard is seen by another Find My enabled device, you will receive a notification of its updated location. Note: "Notify when Found" can only be activated when your Ucard out of range.

When Your Item is Lost

1. Enabling "Lost Mode"

Open Find My app and select the "Items" tab.

Tap on your Ucard from the list. Under "Lost Mode", tap Enable A screen detailing Lost Mode will pop up, tap Continue. Enter your phone number or email address and tap "Next". You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable "Lost Mode" Note: 'When "Lost Mode" is enabled, "Notify When Found" is automatically enabled, and your Ucard is locked and cannot be paired to a new device.

Resetting Your U Card

1. Remove the Ucard from Find My app

Open Find My app and select the "Items" tab. Tap on your Ucard from the list. Please ensure "Lost Mode" is disabled.

Scroll to the bottom of the screen and tap "Remove item". A summary will open, tap "Remove" to confirm.

2. Factory Reset Your U Card:

After successfully removing the Ucard from Find My app, press the Ucard function button four times rapidly, you will hear a beep each time you press it and then hold it a fifth time until you hear a ringing chime.

The Ucard is now reset and ready to be paired to a new device

But Wait.. There's More

1. Charge

Use regular wireless charging equipment to charge the product wirelessly, the red light is always on when charging, and the light is off when fully charged.

2. Unwanted Tracking Detection

If your iPhone detects that an unknown item locator is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it.

The Fine Print

This device complies with part 15 of the FCC Rules:

Operation is subject to the following two conditions: (1) This device may not cause harmful interference.

The Fine Print

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation, NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure conditions 'without restriction. Federal Communication Commission [FCC] Radiation Exposure Statement Power s so low that no RF exposure calculation is needed.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between equipment and receiver. Connect the equipment info an outlet on a circuit different from that o which the receiveris connected.

About Apple Find My

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My appon your iPhone, iPad, or Mac. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple or the maker of your personal item, can view its location.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Watch, iPad, iPadOS, Mac, and macOS are trademarks of Apple Inc, registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Documents / Resources



Aidesichuang UCARD01 Smart Card Item Locator [pdf] User Guide UCARD01, UCARD01 Smart Card Item Locator, Smart Card Item Locator, Card Item Locator, Locator

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.