



AiKUN GX610L RGB Gaming Keyboard User Guide

[Home](#) » [AiKUN](#) » AiKUN GX610L RGB Gaming Keyboard User Guide 

Contents

- [1 AiKUN GX610L RGB Gaming Keyboard](#)
- [2 Multimedia Functions](#)
- [3 Specifications:](#)
- [4 Led Control keys](#)
- [5 Gaming function keys](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



AiKUN GX610L RGB Gaming Keyboard



Multimedia Functions

For multimedia functions press FN & relevant key(as listed below)

- F1 Open default media player program
- F2 Decrease system volume
- F3 Increase system volume
- F4 Mute system volume
- F5 Play previous media track
- F6 Play next media track
- F7 Play or pause current media track
- F8 Stop current media track
- F9 Open home page
- F10 Open default e-mail program (Not web-mail)
- F11 Open My Computer
- F12 Open My favorite

Specifications:

- **Connectivity:** USB
- **Dimensions:** (L) 470 x (W) 190 x (H) 35mm
- **Net Weight:** 700 ± 50g
- **Key Quantity:** 104
- **Multimedia Keys:** 12 (F1-F12 with FN Key)
- **OS Support:** Windows 2000 / XP / ME / Vista / 7 / 8 / 10 / Android / Linux / Mac OSX
- **Key Travel:** 5.5mm
- **Key Force:** 55g±7g
- **Power:** +5V DC ~ 300mA
- **T.B.F:** 10 Million Keystrokes
- **Cable Length:** 1.75m

- **Colour:** Black

Led Control keys

- **2** Turn on / Turn off the LED backlight
- **3** FN+(1~9) Switch in 9 LED mode, FN+1 defaulted one. FN+7, can customize 6 district backlight color: Press FN + 7 twice, white color flashes
Press FN+Up/Down to choose current district color; FN+ Left/Right to change the district; customized color can be saved when power off. FN+9, sounds control backlight; the brightness changes according to the voice detected. FN+9 one time, the LED changes in 7 colors
- **4** Press FN+9 twice, the LED in Red color
 - FN & Pg Up Increases the Brightness
 - FN & Pg Dn Decreases the Brightness
- **5** FN & + Make the backlight breathing speed faster
FN & – Make the backlight breathing speed slower

Gaming function keys

- **6** Press 'FN' key and 'W' key to swap the cursor keys and 'W,A, S,D' keys for game play.
- **7** Press 'FN' key and 'Windows' key to enable or disable the 'Windows' key (Winlock)
- **8** Press FN+ PRTSC to start the Macro recording function, enter requested key combinations, enter the requested macro key (G1-G3), to save the recording. Press FN + PRTSC and requested macro key to cancel the recording.
- **9** Multi-key anti-ghosting
Your commands and simultaneous keystrokes register the way you intended. Anti-ghosting for 26 keys: "Q", "A", "Z", "W", "S", "X", "E", "D", "C", "B", "R", "F", "V", "T", "G", "M", "Space", "↑(UP)", "↓(Down)", "←(Left)", "→(Right)", "Tab", "Alt-L", "Ctrl-L", "Shift-L", "CAPS"
- **10** Wrist support

Documents / Resources



[AiKUN GX610L RGB Gaming Keyboard](#) [pdf] User Guide

GX610L RGB, Gaming Keyboard, GX610L, RGB Gaming Keyboard, GX610L RGB Gaming Keyboard