

Ailaimaike

Ailaimaike DW10
Wifi Digital
Picture Frame



Ailaimaike DW10 Wifi Digital Picture Frame User Manual

[Home](#) » [Ailaimaike](#) » Ailaimaike DW10 Wifi Digital Picture Frame User Manual 

Contents

- [1 Ailaimaike DW10 Wifi Digital Picture Frame](#)
- [2 Product Information](#)
- [3 Getting started](#)
- [4 Frameo quick setup](#)
- [5 Start using frameo](#)
- [6 Manage photos](#)
- [7 Display and slideshow](#)
- [8 Warranty](#)
- [9 FCC WARNING](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

Ailaimaike

Ailaimaike DW10 Wifi Digital Picture Frame



Specifications

- Model: Product X123
- Dimensions: 10 inches x 5 inches x 3 inches
- Weight: 2 lbs
- Material: Plastic

Product Information

Battery Installation

To power the device, insert 2 AA batteries into the battery compartment located on the back of the product. Ensure the batteries are inserted correctly following the polarity markings.

Functionality

Product X123 features multiple functions including A, B, and C.

Use the designated buttons to navigate through the functions and select your desired setting.

Maintenance

For optimal performance, clean the product with a soft, dry cloth regularly. Avoid using harsh chemicals or abrasive materials that may damage the surface.

FAQ

Q: How do I reset the device?

A: To reset the device, press and hold the power button for 10 seconds until the screen goes blank. Release the button and then power on the device again.

User Manual

1. Wall Mount Hole

Punch in the wall and hang the hole into the nail.

2. POWER

After connecting power adapter, please press and hold power button for approximately 5 seconds {until the screen turns on}.

When it is on, press and hold power button for approximately 3 seconds to access reboot or power off menu .

Short press on power button will turn off/onscreen (but leave the photo frame in on position).

3. RESET

Use a needle or paper clip to reset unit.

4. USB


Connect a USB flash drive. USB is for service use only.

5. Micro SD card

Load external max 32GB microSD memory card here.

6. DC

Connect DC adapter to power on the device.

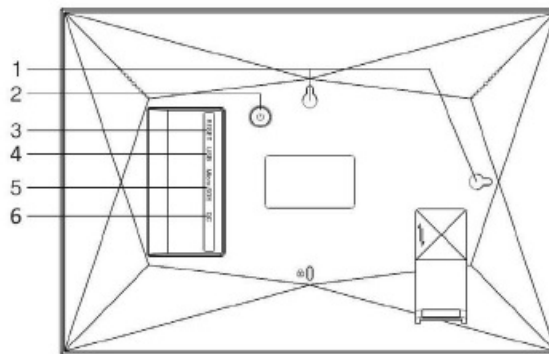

Getting started

Thank you for purchasing your very own frameo.

First, to set up your frame follow the 'Quick start guide' included in the package. If you are new to using frameo then start by following the frameo quick setup on page or follow the on screen guide when powering it on for the first time.

Once you have set up your Frameo frame, start connecting it to your friends and family.

Frameo app

To send photos to your frame, use the frameo app for iOS or Android



Find the frameo app on:

[Google play](#) by searching for “frameo”
or scan this QR code

[App Store](#) by searching for frameo or
scan this QR code



[Google play](#)



[App Store](#)

Frameo quick setup


When starting your frame for the first time, you will need to setup the frame.

- First you start by selecting a language. This will be the language used throughout frameo.
- Connect your frame to the internet by connecting it to a Wi-Fi.
- if a newer version of the frameo software is available. then you will be prompted with an update dialog. It is recommended to update your frame immediately if prompted
- Enter your name, and the location where you have placed your frame e.g. “Living room”, “Kitchen” or “Office” and finally set the time zone if not correct.

Start using frameo



Start by connecting with your friends and family by providing them with a unique code from your frame.

If you want to be able to send photos to the frame yourself, start by downloading the app for iOS or Android on App Store or Google Play . Then use the code to connect your frame and app as described below, Connecting a new friend:

- Make sure that your friend has downloaded and installed the Frameo app
- Click the add friend icon on your frame  A dialog will appear showing a unique code which is valid for 12 hours.
- Now share this code in whatever fashion you prefer e.g. SMS, E-Mail, IM, phone call, to your friend.
- Once your friends have added the code in their frameo app, they will automatically appear on your frame and be able to send you photos.



Navigating your ramen

- You interact with your frame through its touchscreen.
- Swipe left or right to go through your photos.
- To access the menu bar, simply tap once on the screen, this show the menu.
- In the menu you will find quick access to the add friends dialog  and the From the menu it is also possible to hide the currently settings  menu shown photo and to adjust the positioning of the photo.

• Settings

Through settings, you can personalize your frame to your needs.

• My frame

• Frame name:

Changes the name of your frame. This is also the name the connected friends and family will see in their list of connected frames.

• Frame location:

Changes the location of your frame. This is the location displayed on your friends' and family's list of connected frames which can help to distinguish frames from each other.

• Set language:

Sets the language throughout your frame.

• Set time zone

Sets the time zone that should be used on your frame.

• Sleep mode:

frameo offers a sleep mode that turns off the screen to reduce power consumption while you e.g. are sleeping. Its default setting is to turn off the screen at 23:00 and turn on the screen again at 07:00. To change this just set the sleep mode start/end time.


Your frame is not powered down or in standby, so you will still be able to receive photos during sleep mode.

Manage photos



Show/h ide photos:

Select which photos to hide by tapping the particular photos you wish to hide.


Hidden photos will NOT be deleted from your frame, you can always select them to be shown again.

use  to hide or show photos.

Delete photos:

Select photos that you want to permanent delete from your frame by tapping the photo. Use  to select or deselect all and  to delete the selected photos.


Import photos:

- Allows you to import photos from an external max 32GB SD card.
- Before you try to import photos from a SD card, make sure you have an SD card with photos on inserted into your frame.
- Start by selecting the photos that you want to import onto your frame.
- Once selected tap the import button  to start the import process.
- It is currently not possible to add a caption or define the most important part of the photo when using the import function. Alternatively add yourself to your friend list and send them using the app.


My Friends

This list contains all the people that are allowed to send photos to your frame.

Remove person

To remove a person from this list, thereby removing their permission to send you photos, tap the delete icon . You will then be asked to confirm the removal and if you would like to remove all photos received from this person.

Add person

To allow a new person to send you photos, simply tap the add friend button  and share the presented code in whatever way you prefer.

Display and slideshow

Timer

Define the duration a photo should be displayed.

Show caption

Sets whether or not to display the captions that your friends have sent with the photo. Check to display captions. Uncheck to hide captions.

Brightness level

Adjust the brightness level of the screen.

Wi-Fi

Set which Wi-Fi the frame should be connected to. If you are connecting to a network with a captive portal a web browser icon should appear in top right corner of the screen. Use this to open a browser where you can enter credentials to access the network.

Backup and Restore

Backup frame to max 32GB microSD card.

Tap to make a backup of your photos, friends and settings. The time of the latest successful backup will be displayed.

Any existing backup on the SD card will be overridden.

Automatic backup

if checked, your frame will automatically take a backup within 30 hours of you receiving new photos or making changes on your frame.

Restore from backup

Before you attempt to restore your frame, start by confirming that your backup is up-to-date.

To restore from a backup, you must first reset the frame. It is important to note that you cannot restore to a new Frameo frame and keep the old frame operational at the same time.

Reset frame

Removes all data from your frame. This will permanently remove all your photos, friends/connections and settings.

About

Check for update

Check if an update is available for your frame.

Share anonymous analytics data

Sharing anonymous analytics data helps us tremendously with improving the frameo software. We understand if you do not wish to share this data with us.

Set checked if you wish to help us improve frameo. Set unchecked to deny the sharing of anonymous analytics data.

Guide

Opens the quick start guide, that was shown when you first started the frame.

Privacy

For more information regarding privacy, please visit.

Warranty

Lifetime support and one-year warranty, we will prompt response within 24 hours, please just email to.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

Documents / Resources

	Ailaimaie DW10 Wifi Digital Picture Frame [pdf] User Manual DW10, DW10 Wifi Digital Picture Frame, Wifi Digital Picture Frame, Digital Picture Frame, Picture Frame, Frame
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.