



AIM APTC6T 2000W PTC Tower Heater with Oscillating Function User Manual

[Home](#) » [AIM](#) » AIM APTC6T 2000W PTC Tower Heater with Oscillating Function User Manual 



Contents

- [1 AIM APTC6T 2000W PTC Tower Heater with Oscillating Function User Manual](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 USER INSTRUCTIONS](#)
- [4 OVERHEATING SAFETY DEVICE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 CONFORMITY WITH DIRECTIVES](#)
- [7 ENVIRONMENT FRIENDLY DISPOSAL](#)
- [8 2 YEAR LIMITED WARRANTY](#)
- [9 REPAIRS PROCEDURE](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

AIM APTC6T 2000W PTC Tower Heater with Oscillating Function User Manual



- 2 Heat settings (1000 W / 2000 W)
- Ceramic PTC Heating Element
- Cool / Warm / Hot Heat selection
- Oscillation Function
- Carry handle
- Overheat Protection
- Safety Tip-over switch



Please read this instruction manual carefully before using for the first time and always keep these instructions.

IMPORTANT SAFEGUARDS

When using the PCT Tower Heater, basic safety precautions should always be followed including the following:

1. Make sure the power supply used corresponds to the rating label.
2. Never obstruct or block any openings of the heater.
3. Use the heater only on a flat surface.
4. Always disconnect the appliance from the main power supply when not in use and when cleaning.
5. Do not leave the heater "ON" unattended.
6. Never cover the heater as this may lead to a fire risk.
7. Keep the appliance a distance of at least 90 cm from any combustible material such as furniture, curtains, bedding, clothes or papers.
8. Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
9. Do not immerse the heater in water or allow for water to come into contact with the plug or control device.
10. Keep this heater clean. Do not allow objects to enter the ventilation opening as this may cause electric shock, fire or damage to the heater.
11. Close supervision is required when any appliance is used near or by children.
12. Never allow the cord to touch wet or hot surfaces, become twisted or be within the reach of children.
13. Do not use outdoors.
14. Do not place on or near a hot gas electric burner.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
16. Do not use the appliance for other than its intended use as described in this instruction book.
17. Do not place the heater immediately below a socket outlet.
18. This appliance is intended for household use only.

19. Do not leave the heater on overnight.
20. While cleaning, make sure not to use a wet cloth or use water on any part of the unit, as this may cause a short circuit or electrical shock.
21. Do not use this unit in any area where water is present.
22. Make sure the power cord is placed at the back, away from the front panel of the heater.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. CAUTION: Do not cover your heater when in use.
26. This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
27. This heater is not equipped with a thermostat.
28. Do not leave the Heater unattended.
29. NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time, the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

USER INSTRUCTIONS

1. Remove the unit from the box and take off any protective wrapping.
2. Place the heater on a smooth level surface and least 30 cm away from any obstacles.
3. Plug your heater into the power supply. Make sure your power supply corresponds to the power indicated on the rating label.
4. When plugged in, turn the switch to the position "☺", the heater will work at the low heat situation. Turn the switch to the position "☹", the heater works at the high heat situation.
5. When you want the unit to oscillate, turn the switch to the position "☺", the heater will work at the low heat situation; turn the switch to the position "☹", the heater works at the high heat situation.
6. When you want to turn off the heater, please turn the switch to the position "✖" working for 3 minutes firstly, then turn the switch to the position "OFF".

OVERHEATING SAFETY DEVICE

The heater is fitted with a safety device, if the heater overheated, it will stop working, please turn the heater off and inspect for any blockage of inlet or outlet. The safety device will restart the heater after several minutes later. If the safety device failed to restart the heater again, return the heater to your nearest service centre for examination.

or repair.

CLEANING AND MAINTENANCE

1. Always disconnect the appliance from the main supply before cleaning.
2. Clean the outside of the heater by wiping with damp cloth and with a dry cloth.
3. Do not use solvents or chemical agents to clean the heater.

CONFORMITY WITH DIRECTIVES

This product is CE marked to denote conformity with Directives 2006/95/EC (Low Voltage) and the EMC directive (2004/108/EC), as amended.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre.

2 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product ('the consumer') that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 2 year from the date of purchase.

EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorized modification of the product, incorrect installation of the product or normal wear and tear.
- Insect infestation of the electrical or motor makes the claim invalid.

WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the manufacturer's negligence or any act or omission on its part.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs and/or spares will be payable by the Consumer upon collection of the repaired product. The Consumer should call the Pick n Pay CUSTOMER CARE number on 0860 30 30 30 (only in South Africa). Customers residing outside South Africa may return the product back to a Pick n Pay store. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).



If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to our website for terms and conditions.

REPAIRS PROCEDURE

Should you experience any faults on your Aim product, please adhere to the following procedure to have the fault rectified speedily and professionally.

You can return the product to the store.

Call the Pick n Pay CUSTOMER CARE number on 0860 30 30 30 (only in South Africa) to report the fault and make arrangements for the next steps.


Note: Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you.

COST OF REPAIRS UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to "warranties" section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the consumer's expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the consumer's expense including call out fees. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

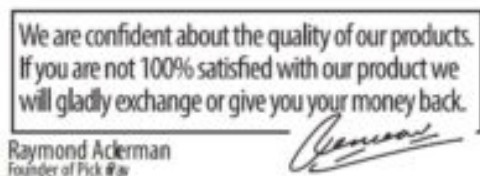


Specially packed for
Pick n Pay Retailers (Pty) Ltd.
Pick n Pay Office Park
2 Allum Road, Kensington, 2094
www.picknpay.co.za

CUSTOMER CARE
Sharecall: 0860 30 30 30
ONLY IN SOUTH AFRICA
customercare@pnp.co.za
Product of China

MODEL NUMBER:
APTC6T

Read More About This Manual & Download PDF:

Documents / Resources

	<p>AIM APTC6T 2000W PTC Tower Heater with Oscillating Function [pdf] User Manual</p> <p>APTC6T-AIM, APTC6T 2000W PTC Tower Heater with Oscillating Function, APTC6T, 2000W PTC Tower Heater with Oscillating Function, APTC6T 2000W PTC Tower Heater, 2000W PTC Tower Heater, PTC Tower Heater, Tower Heater, Heater</p>
--	--