



AIM MM458.1 2.1 Multi Media System with Bluetooth User Manual

[Home](#) » [AIM](#) » AIM MM458.1 2.1 Multi Media System with Bluetooth User Manual 

AIM MM458.1 2.1 Multi Media System with Bluetooth



Contents

1	USER INSTRUCTIONS
2	WARNINGS
3	OPERATION DIAGRAM
4	KEY OPERATION ON FRONT PANEL
5	BLUETOOTH CONNECTED OPERATION
6	FM OPERATION
7	USB/SD OPERATION
8	AUX OPERATION
9	SPECIFICATION
10	1 YEAR LIMITED WARRANTY
11	REPAIRS PROCEDURE
11.1	COST OF REPAIRS
11.2	OUT OF WARRANTY
12	Documents / Resources
12.1	References
13	Related Posts



USER INSTRUCTIONS

Please read this instruction manual carefully before using for the first time and always keep these instructions.

WARNINGS

- Don't place the product in environments with high temperature rates.
- Place the product on a secure, stable surface.
- Serious damage can be caused to the product if it falls.
- Never remove the product casing by itself, as it is an electrical shock hazard.
- If repairs are needed, it should only be done by qualified electricians.
- If the product is damaged, remove all power cords immediately.
- The product is to be used indoors only.
- Unplug the power cord if the product won't be used for a long time.

OPERATION DIAGRAM

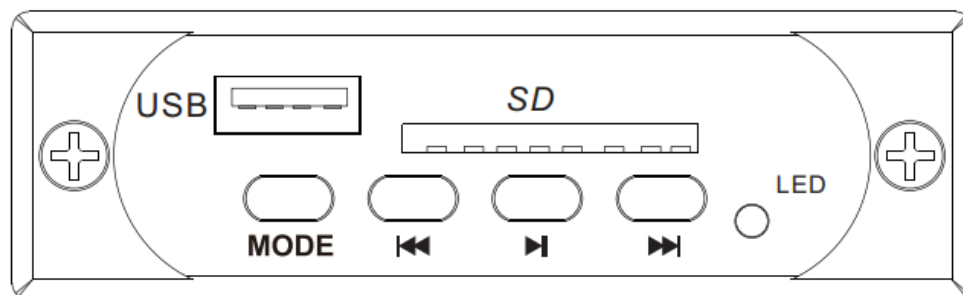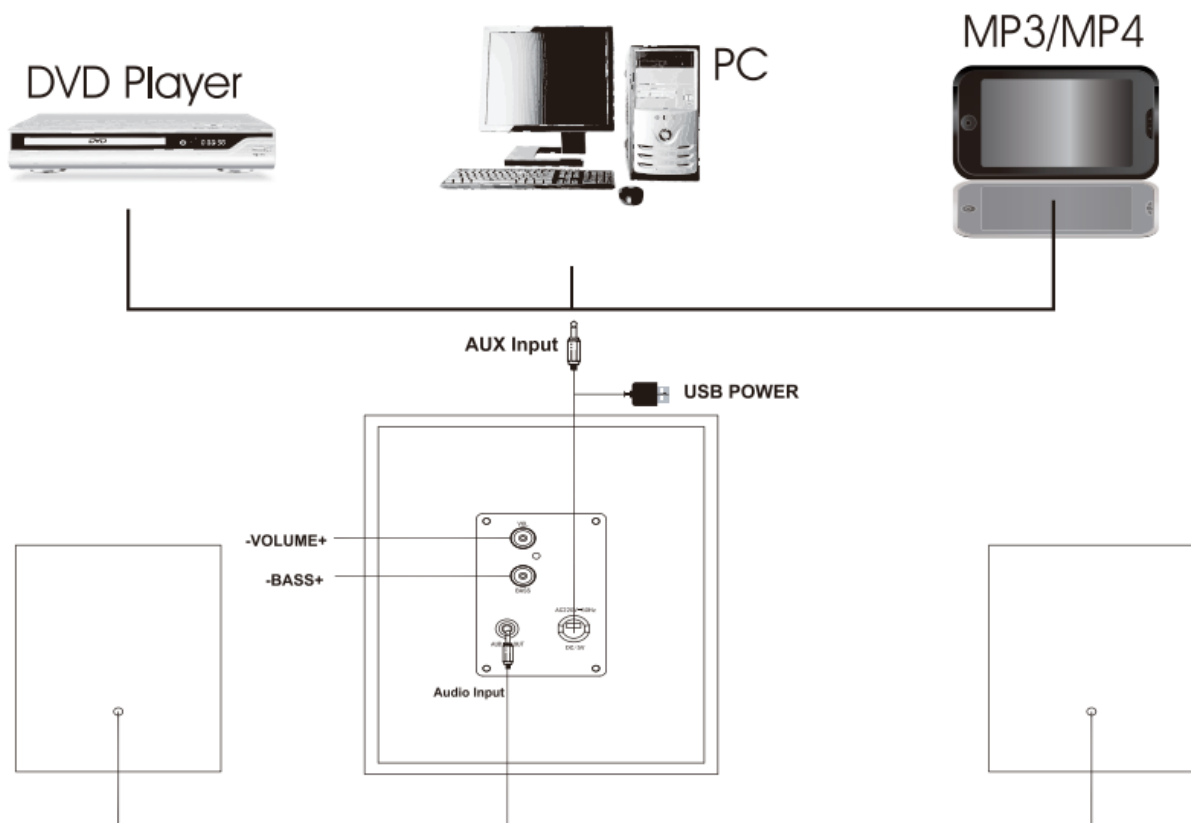

KEY OPERATION ON FRONT PANEL



MODE Power on, the default mode is AUX input.
Press once to shift between modes (Bluetooth-USB/SD-FM-AUX).



VOL- Press and hold to decrease the volume.
Press once to rewind (AUX mode doesn't work).










PLAY/PAUSE Press once to play/pause.
When in FM mode, press and hold to scan through radio stations.
When in Bluetooth mode, press and hold to unpair devices.
Press and hold has no effect in AUX mode.










VOL+ Press and hold to increase the volume.

Press once to Fast forward.
Press once has no effect in AUX mode.





BLUETOOTH CONNECTED OPERATION

1. Turn on the speaker and press  to shift the Bluetooth mode
2. On your smart device search for Bluetooth name MM 458.1 BT and select it to connect to the unit. When asked for a password, use 0000.
3. Press  or  once to select the song you want to play. Press  and  hold for volume level adjustment
4. Press  to pause/play
5. Unpair: press and hold  to unpair devices






FM OPERATION

1. Press  to shift to FM tuner
2. Press and hold  for automatic station sourcing
3. When the sourcing is finished, press  or  for radio station selection.
4. Press  and  hold or for volume level adjustment
5. Press  to pause/play

USB/SD OPERATION

1. Insert the USB or SD in the corresponding port. It will automatically start playing.
2. Press  or  to select the song you want to play.
3. Press  and  hold awful volume level adjustment.

AUX OPERATION

1. Shift the mode to AUX mode
2. Insert the aux plug into the device (example: phone, computer, MP3, MP4, etc)
3. Press  or  select the song you want to play. Press  and  hold or for volume level adjustment
4. The  function has no effect in AUX mode.

SPECIFICATION

Power: 5W plus 3W x 2

Frequency response: 20Hz ~20Khz

Impedance: 4

Subwoofer Driver: 4" (5W x 1)

Satellite Driver: 3" (3W x 2)

DIMENSIONS:

Subwoofer: (W) 20 x (D) 12 x (H) 17 cm

Satellite: (W) 8.5 x (D) 8 x (H) 11 cm

1 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product (the consumer) that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 1 year from the date of purchase.

EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorised modification of the product, incorrect installation of the product or normal wear and tear.
- Insect infestation of the electrical or motor makes the claim invalid.
- Customer abuse do not fall under warranty.

WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the manufacturer's negligence or any act or omission on its part.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs and/or spares will be payable by the Consumer upon collection of the repaired product. The Consumer should call the Pick n Pay CUSTOMER CARE number on 0860 30 30 30 (only in South Africa). Customers residing outside South Africa may return the product back to a Pick n Pay store. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).



If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to our website for terms and conditions.

REPAIRS PROCEDURE

Should you experience any faults on your Aim product, please adhere to the following procedure to have the fault rectified speedily and professionally. You can return the product to the store.

Call the Pick n Pay CUSTOMER CARE number on 0860 30 30 30 (only in South Africa) to report the fault and make arrangements for the next steps.

Note: Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you.

COST OF REPAIRS

UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to “warranties” section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the consumer’s expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the consumer’s expense including call out fees. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

Specially packed for Pick n Pay Retailers (Pty) Ltd. Pick n Pay Ofce Park, 101 Rosmead Avenue, Kenilworth, Cape Town, 7708 www.picknpay.co.za



CUSTOMER CARE Sharecall:0860303030

ONLY IN SOUTH AFRICA customercare@pnp.co.za Product of China



Documents / Resources

	<p>AIM MM458.1 2.1 Multi Media System with Bluetooth [pdf] User Manual MM458.1, 2.1 Multi Media System with Bluetooth, Media System with Bluetooth, 2.1 Multi Media System, Media System, Multi Media System, Multi Media</p>
---	---

References

-  [Pick n Pay | Welcome! Start Filling Your Trolley](#)