



AIMCO XML Gen IV Controller Instructions

[Home](#) » [AIMCO](#) » AIMCO XML Gen IV Controller Instructions 

Contents

- [1 AIMCO XML Gen IV Controller](#)
- [2 Instructions](#)
- [3 CORPORATE HEADQUARTERS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


AIMCO

AIMCO XML Gen IV Controller




Instructions


- The Gen IV controller uses the From the main menu, select Controller.

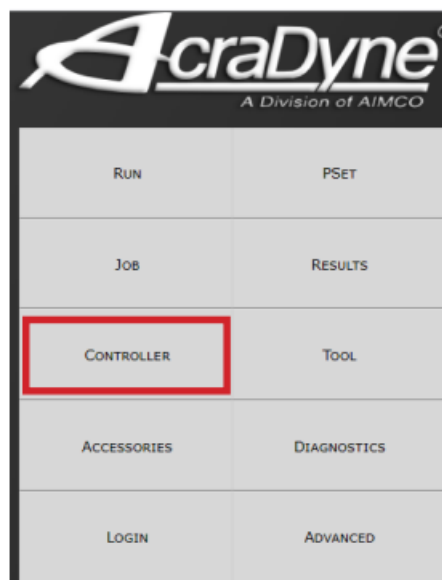

- Select Protocols.

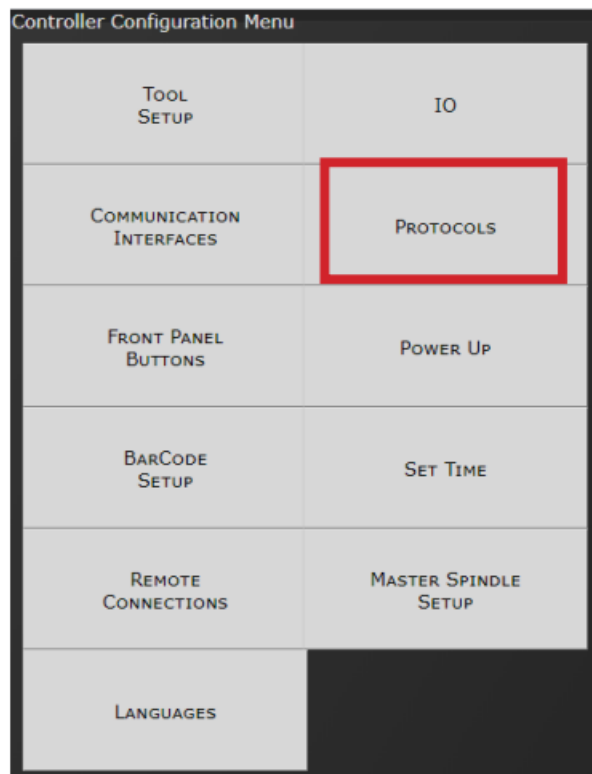

- Then select XML.

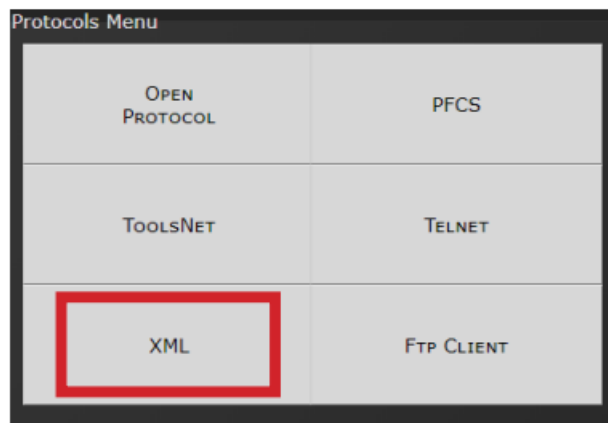

- Consult with your local network administrator for the correct configuration.

XML Protocol Configuration

Enabled ☐

Port A

Port B

XML Version

CORPORATE HEADQUARTERS

- **AD:** 10000 SE Pine Street Portland, Oregon 97216
- **Phone:** (503) 254-6600
- **Toll-Free:** 1-800-852-1368

AIMCO CORPORATION DE MEXICO SA DE CV

- Ave. Cristobal Colon 14529
- Chihuahua, Chihuahua. 31125 Mexico
- **Phone:** (01-614) 380-1010

LIT-MAN177_XML

07-07-22

©2022 AIMCO

Documents / Resources



[AIMCO XML Gen IV Controller](#) [pdf] Instructions
XML, Gen IV Controller, IV Controller, XML, Controller