



# AIMZENIX-BLADER Keyboard And Mouse Adapter User Manual

[Home](#) » [AIMZENIX](#) » AIMZENIX-BLADER Keyboard And Mouse Adapter User Manual 

## Contents

- [1 AIMZENIX-BLADER Keyboard And Mouse Adapter User Manual](#)
- [2 Structure Description](#)
- [3 EQUIPMENT LAYOUT](#)
- [4 HARDWARE REQUIREMENTS / COMPATIBILITY](#)
- [5 MAXIMIZE GAME SENSITIVITY](#)
- [6 NS Key Mapping](#)
- [7 Read More About This Manual & Download PDF:](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

# AIMZENIX-BLADER Keyboard And Mouse Adapter User Manual



## Structure Description

### EQUIPMENT LAYOUT




## HARDWARE REQUIREMENTS / COMPATIBILITY

- NINTENDO SWITCH
- PLAYSTATION 4
- PLAYSTATION 3
- Xbox One
- Xbox 360
- Xbox Series X/S

## MAXIMIZE GAME SENSITIVITY

The mouse switching technology of BLADER will assume that the “view sensitivity” and other related options are maximized in your gameplay settings.  
In any case, it must be turned up to maximize your aiming performance.

# NS Key Mapping

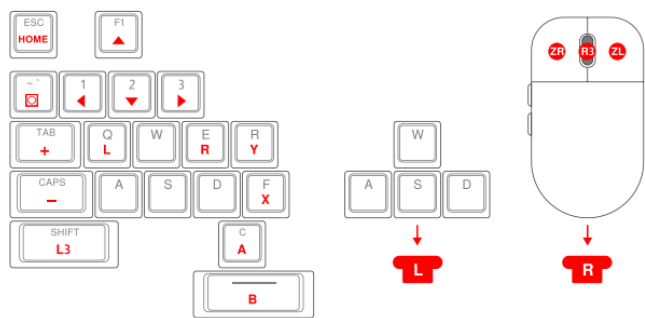


For remapping, you need to connect the Official Switch Pro Controller

Function	Shortcut Keys	Editing steps/instructions
Enter/Exit Key Setting	Ctrl+ESC	<div>1. Enter the key settings: press "Ctrl+Esc" (LED light rapid flashing)</div> <div>2. Hold down the button on the controller that you want to modify. (supports single keys or combination keys);</div> <div>3. Press the keyboard/mouse button you want to remap. (keep holding down the controller button)</div> <div>4. Release the controller button and the keyboard/mouse button simultaneously.</div> <div>5. Exit and save the key settings: press "Ctrl+Esc".</div> <div>Please Note:</div> <div>1. You can set up to 8 sets of keyboard combination key mappings, and there is no limit to controller buttons.</div> <div>2. It does not support mapping for up and down scrolling, only wheel key presses.</div>
Adjust Mouse Sensitivity	Ctrl + Mouse Wheel Up/Down	<div>1. In the game, hold down Ctrl and use the Mouse Wheel to adjust the mouse sensitivity. (include the mouse field of view sensitivity and the mouse sensitivity for aiming)(for non-ADS sensitivity)</div> <div>2. Release Ctrl to close the adjustment.</div> <div>Please note : "Aim Down Sights" sensitivity is adjusted separately and should be done while aiming down sights.</div>
Adjust Curve Sensitivity	Shift+ Mouse Wheel Up/Down	<div>1. In the game, hold down Shift and Mouse Wheel to adjust the sensitivity of curve.</div> <div>2. Release Shift to close the adjustment.</div>
Switch Confgs	Ctrl+1/2/3/4	<div>BLADER supports saving 4 sets of configs.</div> <div>Please switch confgs via Ctrl+1/2/3/4 before modifying the configuration.</div> <div>(The default config is Ctrl+1)</div>
Invert Y-axis Setting	Ctrl+R	<div>In some games, the Y-axis control may have the opposite direction to the default setting. You can press Ctrl+R in the game to toggle the direction.</div>
Lock Key	Ctrl+F5	<div>The lock key prevents accidental triggering of other combination keys</div> <div>Pressing it again will unlock and exit. (When locked, the LED light is green)</div>
Switch Fire Modes	Press F4	<div>Switch between Rapid Fire and Single Shot Modes</div> <div>(Note: Long press the left mouse button after switching to Rapid Fire mode)</div>
Restore Factory Settings	Ctrl+Alt+Z	<div>Restore current configuration to default configuration</div>

Read More About This Manual & Download PDF:

## Documents / Resources

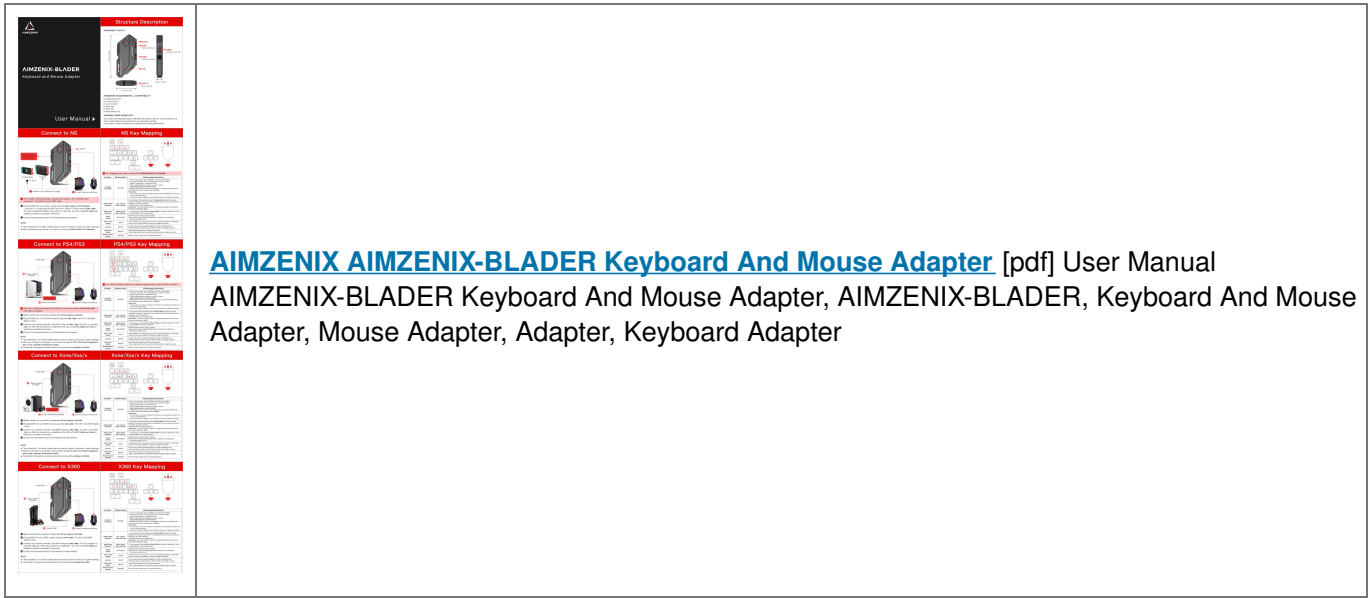

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.